



Level



Pressure



Flow



Temperature



Liquid
Analysis



Registration



Systems
Components



Services



Solutions

Technical Information

Micropilot S FMR540

Level-Radar

Smart Transmitter for continuous and non-contact precision level measurement. For custody transfer and inventory control applications with NMI and PTB approvals.



Application

The Micropilot S is used for highly accurate level measurement in storage tanks and can be applied in custody transfer applications. It meets the relevant requirements according to OIML R85 and API 3.1B.

Typical areas of application are:

- The Micropilot S with parabolic antenna is excellently suited for free space applications up to 40 m (131 ft).
- The Micropilot S with horn antenna is suitable for free space applications that disallow the use of a parabolic antenna due to tank/nozzle geometry.

The FMR540 with a DN200 (8") or DN250 (10") parabolic antenna offers high beam focussing of 4.4° or 3.3° respectively, and is therefore ideally suited to applications with nozzles situated close to the tank wall. The FMR540 with DN100 (4") horn antenna is designed for all small nozzles sizes.

Your benefits

- Better than 1 mm accuracy.
- National approvals (NMI, PTB) for custody transfer.
- Applicable as stand-alone system or tied into tank gauging systems via the Tank Side Monitor NRF590.
- Cost-effective and simple installation via 4-wire cable with HART and 24V DC intrinsically safe power supply.
- low cost, low weight UNiversal flanges
- alignment device to compensate any flange inclination
- easy on-site operation via menu-driven alphanumeric display
- easy commissioning, documentation and diagnostics via operating software (ToF Tool - Fieldtool Package or FieldCare)
- HART communication.

Table of contents

Function and system design	3
Measuring principle	3
Equipment architecture	4
Custody transfer applications	5
Integrated in tank gauging system	6
Input	7
Measured variable	7
Antenna selection for Micropilot S-series	7
Measuring range	8
Measuring range depending on sensor type and media group	8
Measuring conditions	9
Operating frequency	9
Output	10
Output signal	10
Signal on alarm	10
Linearization	10
Galvanic isolation	10
Protocol specific data	10
Auxiliary energy	11
Electrical connection	11
Terminal assignment 4...20 mA with HART	12
Load HART	13
Cable entry	13
Supply voltage	13
Power consumption	13
Current consumption	13
Residual ripple HART	13
Max noise HART	13
Power supply	13
mm accuracy	13
Overvoltage protector	13
Performance characteristics	14
Note	14
Reference operating conditions	14
Maximum measured error	14
Software reliability	14
Hysteresis	14
Long-term drift	14
Influence of ambiente temperature	14
Proof of accuracy of custody transfer versions	14
Non-repeatability	14
Resolution	14
Inventory control versions	14
Operating conditions: Installation	15
Installation instructions	15
Beam angle	16
Installation on tank FMR540	17
FMR540 with alignment device	19
Integrated air purge connection	19
Operating conditions: Environment	20
Ambient temperature range	20

Storage temperature	20
Climate class	20
Degree of protection	20
Vibration resistance	20
Cleaning of the antenna	20
Electromagnetic compatibility	20
Approvals for custody transfer applications	20

Operating conditions: Process	20
Process temperature range	20
Process pressure limits	20
Antenna core	20
Wetted parts	20
Alignment device	20

Mechanical construction	21
Design, dimensions	21
Type plate / type plate for custody transfer applications	23
Endress+Hauser UNI flange	24
Weight	25
Material	25

Human interface	26
Operation concept	26
Display elements	26
Operating elements	27
On-site configuration	28
Remote configuration	29

Certificates and approvals	31
CE approval	31
Ex approval	31
External standards and guidelines	31
Type approvals for custody transfer approvals	31
RF approvals	31

Ordering information	32
Micropilot S FMR540	32

Accessories	34
Weather protection cover	34
Sensor alignment tool for alignment device	34
Commubox FXA191 HART	34
Commubox FXA195 HART	34
Commubox FXA291	35
ToF Adapter FXA291	35


Documentation	36
Fields of activities	36
Technical Information	36
Operating Instructions	36
Certificates	36

Patents	37
----------------	-----------

Function and system design

Measuring principle

The Micropilot is a "downward-looking" measuring system, operating based on the time-of-flight method. It measures the distance from the reference point (process connection) to the product surface. Radar impulses are emitted by an antenna, reflected off the product surface and received again by the radar system.

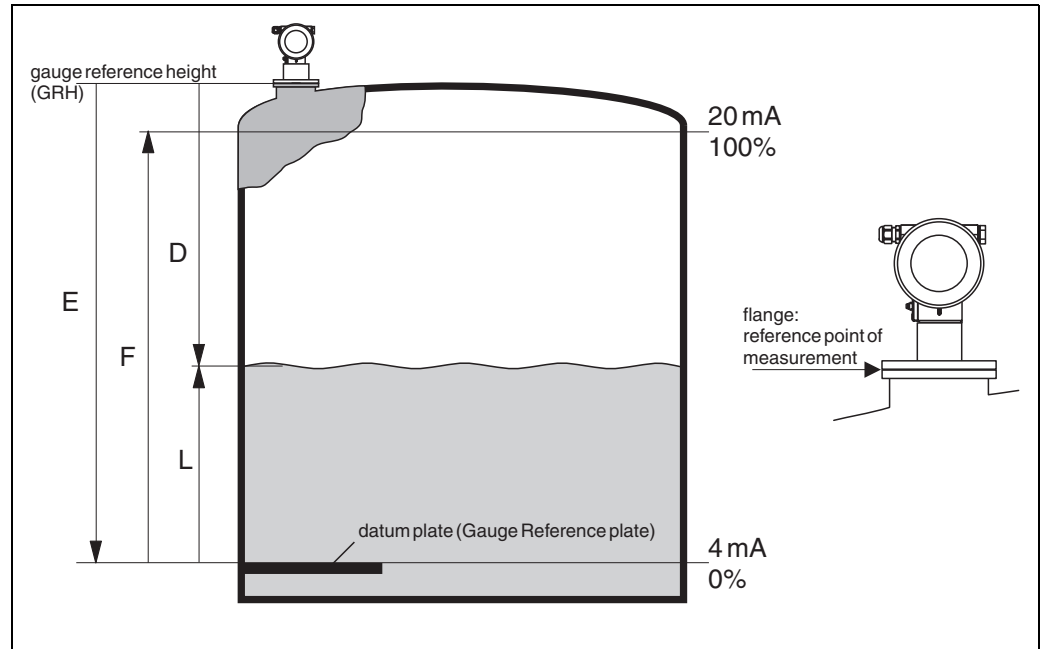

L00-FMR54xxx-15-00-00-en-001

Input

The reflected radar impulses are received by the antenna and transmitted into the electronics. A microprocessor evaluates the signal and identifies the level echo caused by the reflection of the radar impulse at the product surface. The unambiguous signal identification is accomplished by the PulseMaster® software, based on many years of experience with time-of-flight technology.

The distance D to the product surface is proportional to the time of flight t of the impulse:

$$D = c \cdot t / 2,$$

with c being the speed of light.

Based on the known empty distance E , the level L is calculated:

$$L = E - D$$

Reference point for "E" is the lower surface of the process connection. For highly precise level measurements, it is of crucial importance to have a stable mounting position (GRH) of the radar gauge or to compensate for the effects of tank movements during filling and emptying cycles. This can be done by either using the dip table integrated in the Micropilot S FMR53x / 540 or by using the compensation methods integrated into the Tank Side Monitor NRF590.

The Micropilot is equipped with functions to suppress interference echoes. The user can activate these functions. They ensure that interference echoes (e.g. from edges and weld seams) are not interpreted as level echo.

Output


The Micropilot is commissioned by entering an empty distance E (=zero), a full distance F (=span) and an application parameter. The application parameter automatically adapts the instrument to the measuring conditions. The data points "E" and "F" correspond with 4mA and 20mA for instruments with current output. They correspond with 0 % and 100 % for digital outputs and the display module. For inventory control or custody transfer applications, the measurement should always be transferred via digital communication (HART).

A linearization with max. 32 points, based on a table entered either manually or semi-automatically, can be activated locally or remotely. This function provides a measurement in engineering units and a linear output signal for spheres, horizontal cylindrical tanks and tanks with conical outlet.

Equipment architecture**Stand-alone**

The instrument provides a 4...20 mA output with HART protocol.

The complete measuring system consists of:

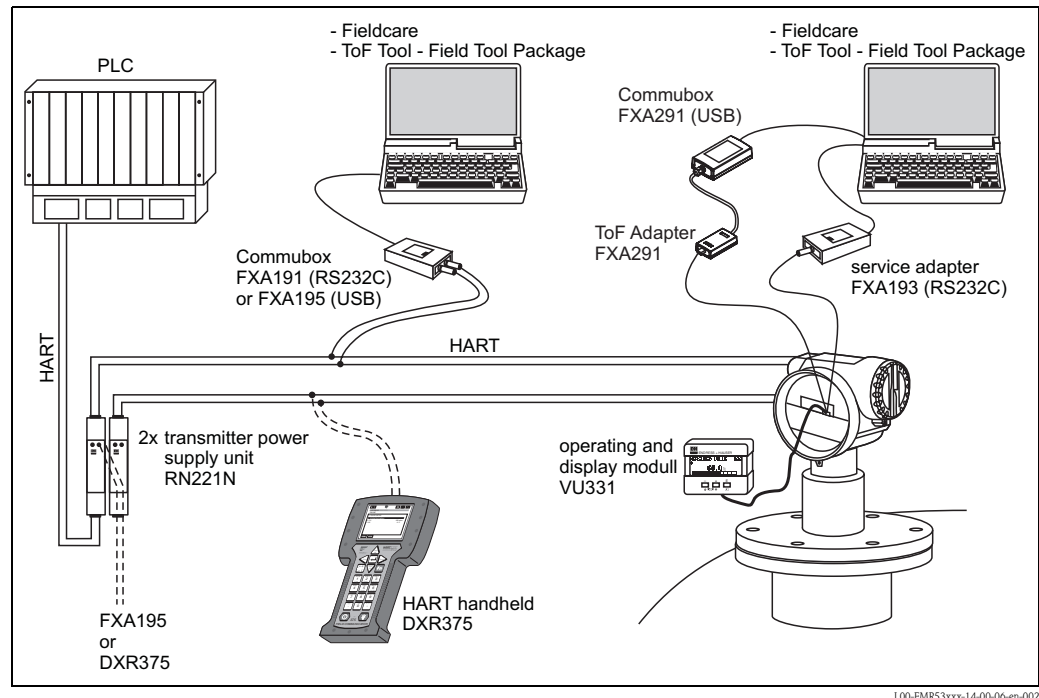

L00-FMR53xxx-14-00-06-es-002

On-site Configuration

- with display and operating module VU331,
- with a Personal Computer, FXA193 and the operating software "ToF Tool - FieldTool Package" respectively "FieldCare".

The ToF Tool is a graphical operating software for instruments from Endress+Hauser that operate based on the time-of-flight principle (radar, ultrasonic, guided micro-impulse). It assists with commissioning, securing data, trouble shooting and documentation of the measuring point.

Remote Configuration

- with HART handheld DXR375,
- with a Personal Computer, Commubox FXA195 and the operating software "ToF Tool - FieldTool Package" respectively "FieldCare".

Remote operation

- With a Personal Computer, NRF590 (Tank Side Monitor) and the inventory management software, e.g. "FuelsManager".


System integration via Fieldgate

Vendor Managed Inventory

By using Fieldgates to interrogate tank or silo levels remotely, suppliers of raw materials can provide their regular customers with information about the current supplies at any time and, for example, account for them in their own production planning. For their part, the Fieldgates monitor the configured level limits and, if required, automatically activate the next supply. The spectrum of options here ranges from a simple purchasing requisition via e-mail through to fully automatic order administration by coupling XML data into the planning systems on both sides.

Remote maintenance of measuring equipment

Fieldgates not only transfer the current measured values, they also alert the responsible standby personnel, if required, via e-mail or SMS. In the event of an alarm or also when performing routine checks, service technicians can diagnose and configure connected HART devices remotely. All that is required for this is the corresponding HART operating software (e.g. ToF Tool – FieldTool Package, FieldCare, ...) for the connected device. Fieldgate passes on the information transparently, so that all options for the respective operating software are available remotely. Some on-site service operations can be avoided by using remote diagnosis and remote configuration and all others can at least be better planned and prepared.

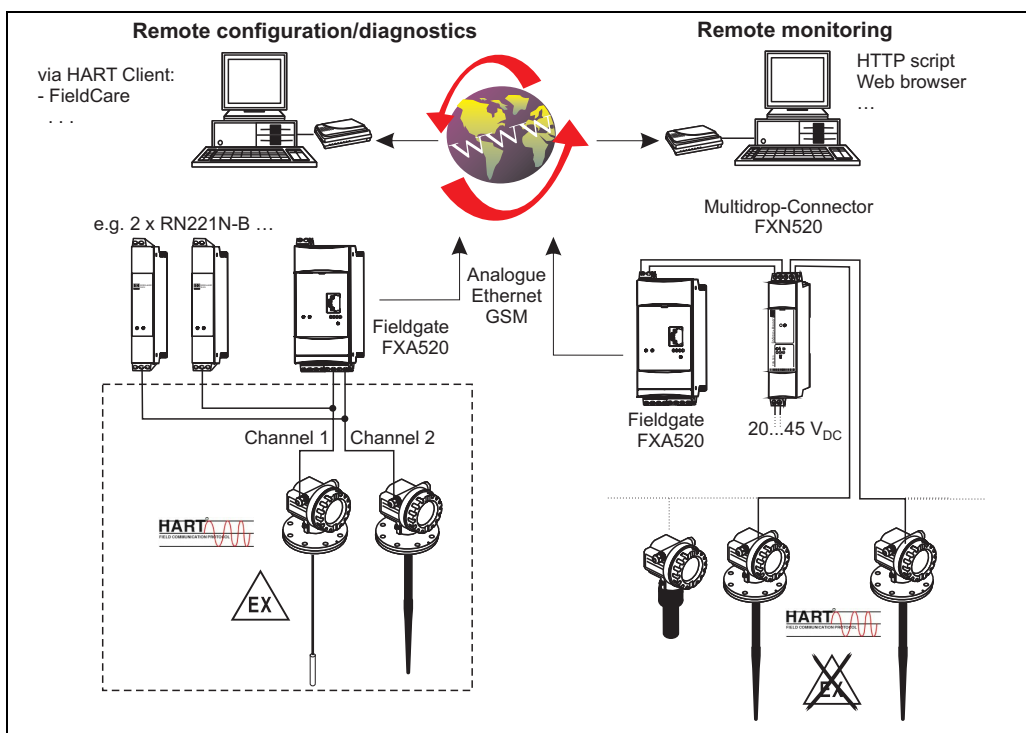

L00-FXA520xx-14-00-06-en-009

Note!

The number of instruments which can be connected in multidrop mode can be calculated by the "FieldNetCalc" program. A description of this program can be found in Technical Information TI 400F (Multidrop connector FXN520). The program is available from your Endress+Hauser sales organisation or in the internet at: **"www.endress.com → Download"** (Text Search = "Fieldnetcalc").

Integration into the Asset Management System


The HART interface allows the integration into the AMS® (Asset Management System) from Emerson.

Custody transfer applications

The Micropilot S is suitable for custody transfer and inventory control applications. The on-site testing has to be done in compliance with the applicable regulatory standards. The Micropilot S can be sealed after successful on-site calibration to be protected against any access to the electronics compartment and any changes of software settings. If the Micropilot S is used for custody transfer or inventory control, any temperature influence on the tank shell height can be compensated for using the Tank Side Monitor. In addition, the vertical movement of the gauge reference point due to the hydrostatic tank deformation can be compensated in the Tank Side Monitor. A Tank Side Monitor can provide 24 VDC for a Micropilot S. The Tank Side Monitor can communicate with up to 6 devices via HART Multidrop.

Integrated in tank gauging system

The Endress+Hauser Tank Side Monitor NRF 590 provides integrated communications for sites with multiple tanks, each with one or more sensors on the tank, such as radar, spot or average temperature, capacitive probe for water detection and/or pressure sensors. Multiple protocols out of the Tank Side Monitor guarantee connectivity to nearly any of the existing industry standard tank gauging protocols. Optional connectivity of analog 4...20 mA sensors, digital I/O and analog output simplify full tank sensor integration. Use of the proven concept of the intrinsically safe HART bus for all on-tank sensors yields extremely low wiring costs, while at the same time providing maximum safety, reliability and data availability.

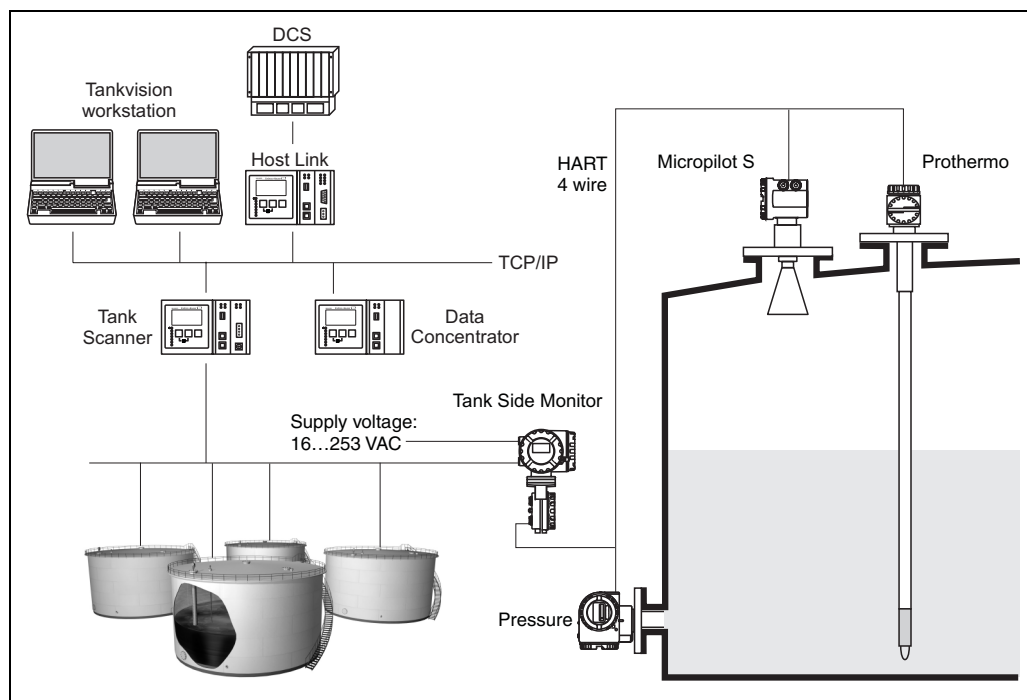

L00-FMR53xxx-14-00-06-en-006

Input

Measured variable

The measured variable is the distance between the reference point (GRH, refer to fig. → 3) and a reflective surface (i.e. medium surface).

The level is calculated based on the tank height entered. The level can be converted into other units (volume, mass) by means of a linearization. In order to compensate for non-linear effects like movement of the tank roof, an additional correction table (diptable) can be entered.

Antenna selection for Micropilot S-series

It is essential for each and every application and installation to select the right antenna type.

The antenna selection depends on the following criteria:

- Type of application (i.e. free space vs. stilling well)
- Installation possibilities (size, location and height of nozzle)
- Properties of the product stored in the tank (radar reflectivity, vapor pressure, temperature, etc.)
- The Micropilot S FMR540 offers 2 radar antennas

For stilling well applications, FMR532 should be selected (see TI344F)

For measuring mediums with a low reflectivity (i.e. asphalts, bitumen and etc.), FMR533 should be selected (see TI344)

Horn antenna

With a DN100 (4") horn, this antenna is suitable for free space applications up to the measuring distance of 20m/30m (depending on dielectric constant). With the narrow beam angle (8 deg), compared to FMR530, this horn antenna is suitable for closer to tank wall application (→ 16) When installing, it is essential that the horn extends below the nozzle (→ 17).



L00-FMR54xxx-10-08-06-xx-004

Parabolic antenna

The parabolic antenna offers the smallest beam angle (3.3 deg) for free space applications. It also covers longest measuring distance of 40m (dielectric constant ≥ 1.8). It is ideal for applications close to the tank walls. When installing, it is ideal that the parabolic antenna is installed in the position where the reflector protrude from the nozzle (→ 19). For measuring mediums with a low reflectivity, such as asphalts and bitumen, FMR533 (please, refer to TI344F) is recommended.



L00-FMR54xxx-10-08-06-xx-005

Measuring range

The usable measuring range depends on the size of the antenna, the reflectivity of the medium, the mounting location and possible interference reflections.

To achieve an optimised signal strength it is recommended to use an antenna with as large as possible diameter (DN200/8" or DN250/10" parabolic antenna).

 
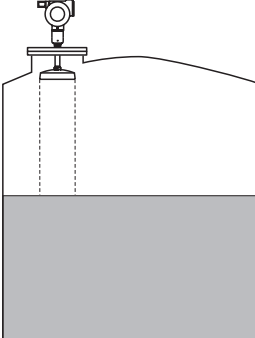
The following tables describe the groups of media as well as the achievable measuring range as a function of application and media group. If the dielectric constant of a medium is unknown, it is recommended to assume media group B to ensure a reliable measurement.

Table 1:

The following table describes the media groups and the dielectric constant ϵ_r .

Media group	DC (ϵ_r)	Examples
A1	1.4...1.6	propane, butane
A2	1.6 ... 1.9	non-conducting liquids, kerosene, jet fuels, gasoline, LPG
B	1.9 ... 4	non-conducting liquids, e.g. gasoline, diesel fuel, heavy oil, motor oil, asphalt, bitumen, BTEX, residual fuel
C	4 ... 10	e.g. concentrated acids, organic solvents, esters, aniline, alcohol, acetone, ...
D	> 10	conducting liquids, e.g. aqueous solutions, dilute acids and alkalis

Measuring range depending on sensor type and media group

Media group		Horn antenna without sensor extension	Parabolic antenna without sensor extension
			
		Measuring range ¹⁾	Measuring range ¹⁾
A1	DC (ϵ_r) = 1.4 ... 1.6	Please contact your Endress+Hauser sales organization.	
A2	DC (ϵ_r) = 1.6 ... 1.9	0.6 ... 20 m	0.6 ... 40 m
B	DC (ϵ_r) = 1.9 ... 4	0.6 ... 20 m	0.6 ... 40 m
C	DC (ϵ_r) = 4...10	0.6 ... 30 m	0.6 ... 40 m
D	DC (ϵ_r) > 10	0.6 ... 30 m	0.6 ... 40 m
Max. measuring range with custody transfer approval		NMi: 23 m / 75 ft	NMi: 26 m / 85 ft


1) All values are based on reference conditions.

Note!

For stilling well applications Micropilot S FMR532 is recommended (see Technical Information TI344F).

Measuring conditions

- The measuring range begins, where the beam hits the tank bottom. Particularly with dish bottoms or conical outlets the level cannot be detected below this point.
- In case of media with a low dielectric constant (groups A and B), the tank bottom can be visible through the medium at low levels (low height **C**). Reduced accuracy has to be expected in this range. If this is not acceptable, we recommend positioning the zero point at a distance **C** (see Fig.) above the tank bottom in these applications.
- In principle it is possible to measure up to the tip of the antenna with FMR540. However, due to considerations regarding corrosion and build-up, the end of the measuring range should not be chosen any closer than **A** (see Fig.).
- **B** requests the smallest possible measuring range (see fig.).
- Tank diameter and height should be at least dimensioned such that a reflection of the radar signal on both sides of the tank can be avoided.
- Depending on its consistence, foam can either absorb microwaves or reflect them off the foam surface. Measurement is possible under certain conditions.

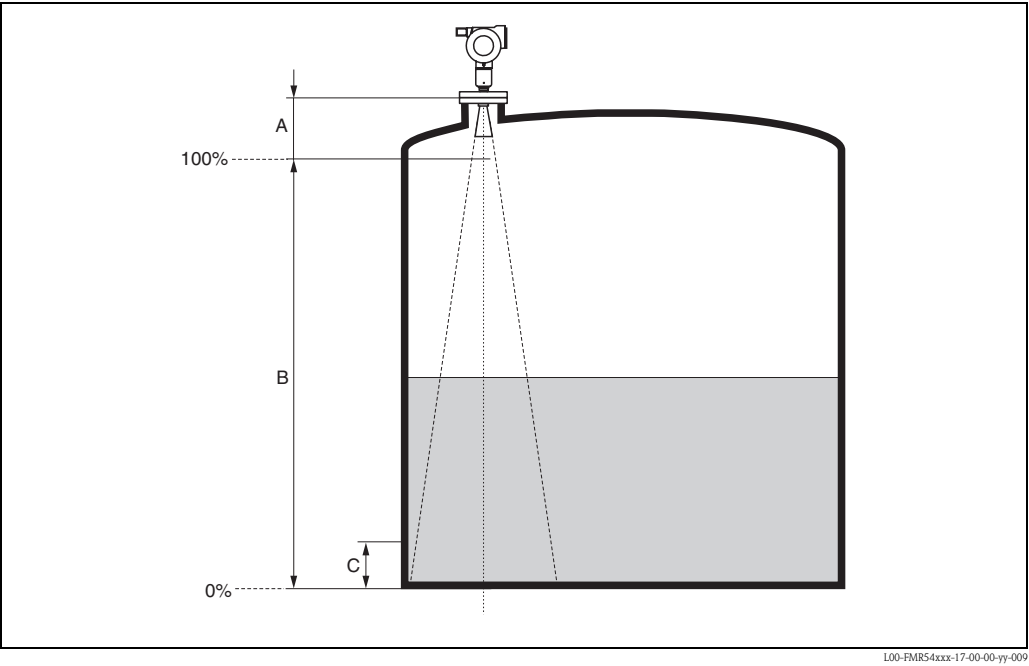

100-FMR54xxx-17-00-00-yy-009

1)	A [m (inch)]	B [m (inch)]	C [mm (inch)]
FMR540 (without extension)²⁾	0.6 (23.6)	> 0.5 (> 20)	> 300 (> 12)

- 1) All values are based on reference conditions.
- 2) The length of a sensor extension shall be added to "A" when selecting the extension option.

Behaviour if measuring range is exceeded

The behaviour in case of the measuring range being exceeded can be freely set: the default setting is a current of 22 mA and the generation of a digital warning (E651).

Operating frequency

- K-band

Output

Output signal ■ 4...20 mA with HART protocol (e.g. for multidrop connection to the Tank Side Monitor NRF590); this version can be operated via the PC operating software ToF Tool and FieldCare. The instrument supports both point-to-point and multidrop operation.

Signal on alarm Error information can be accessed via the following interfaces:

- Local display:
 - Error symbol
 - Plain text display
 - LED's: red LED continuously on = alarm, red LED flashes = warning
- Current output
- Digital interface

Linearization The linearization function of the Micropilot S allows the conversion of the measured value into any unit of length or volume. Linearization tables for calculating the volume in cylindrical tanks are pre-programmed. Other tables of up to 32 value pairs can be entered manually or semi-automatically.

Galvanic isolation 500 V towards ground.
500 V between power supply and signal.

Protocol specific data

HART

HART specification	5
Manufacturer ID	17 (11 hex)
Device Type Code	31
Device Revision	1 (for SW 01.01.00) 2 (for SW 01.01.02)
Features supported	<ul style="list-style-type: none"> ■ Burst mode ■ Additional Transmitter Status
DD-Files	Actual information and files can be found: <ul style="list-style-type: none"> ■ www.endress.com ■ www.hartcomm.org
Load HART	Min. 250 Ω
Device variables	Primary value: level or volume ¹⁾

1) according to configuration


Auxiliary energy

Electrical connection

Terminal compartment

- Aluminium housing T12 with separate terminal compartment for:
 - standard,
 - EEx ia (with overvoltage protection),

The electronics and current output are galvanically isolated from the antenna circuit.

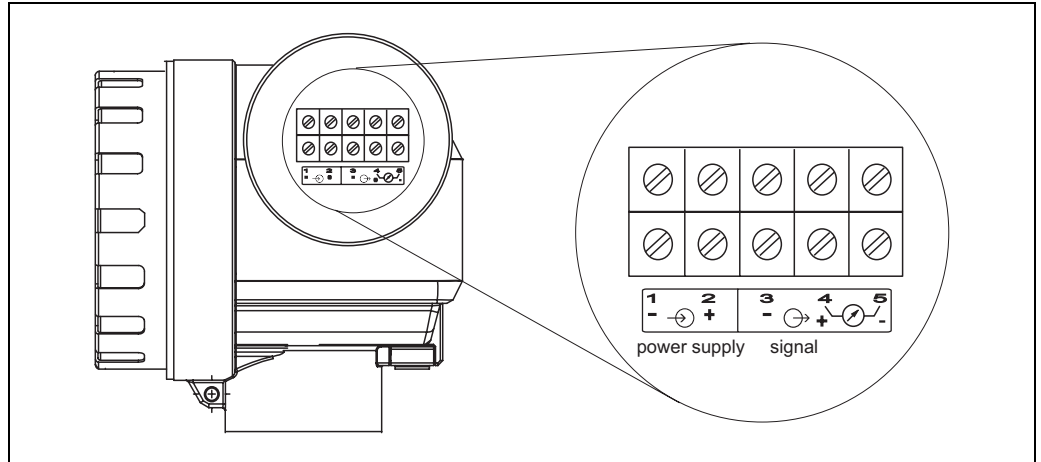


100-FMR53xxx-04-00-00-en-001


Terminal assignment 4...20 mA with HART

The 4-wire cable is connected to the screw terminals (wire diameter 0.5...2.5 mm) in the terminal compartment. Use 4-wire twisted pair cable with screen for the connection. Protective circuitry against reverse polarity, RFI, and over-voltage peaks is built into the device (refer to TI241F »basics for EMC-tests«). Refer to TI374F for connection to the Tank Side Monitor NRF590.

Connection to Tank Side Monitor NRF590

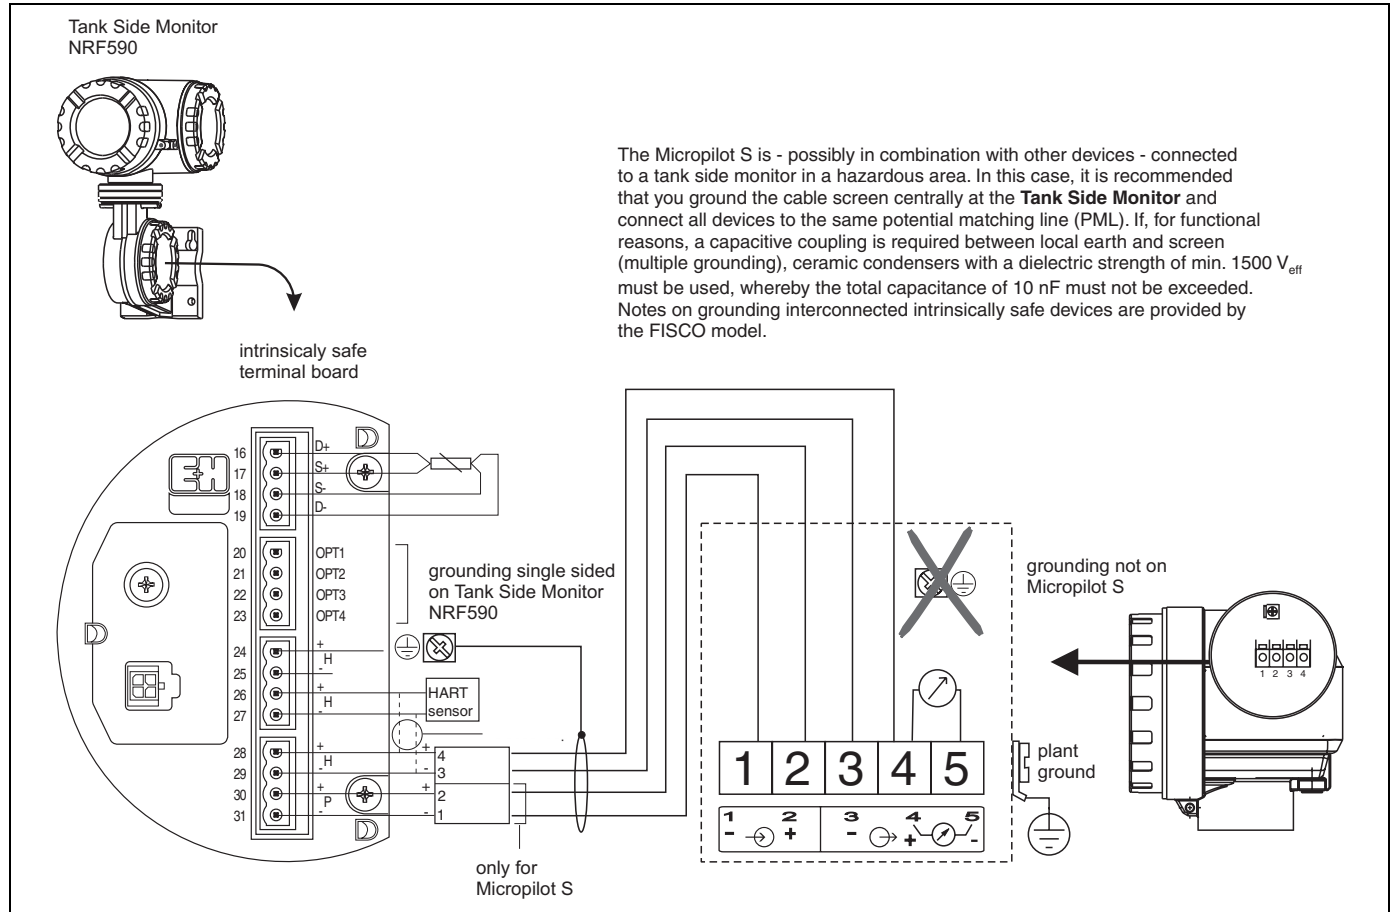

Connection as a stand alone device

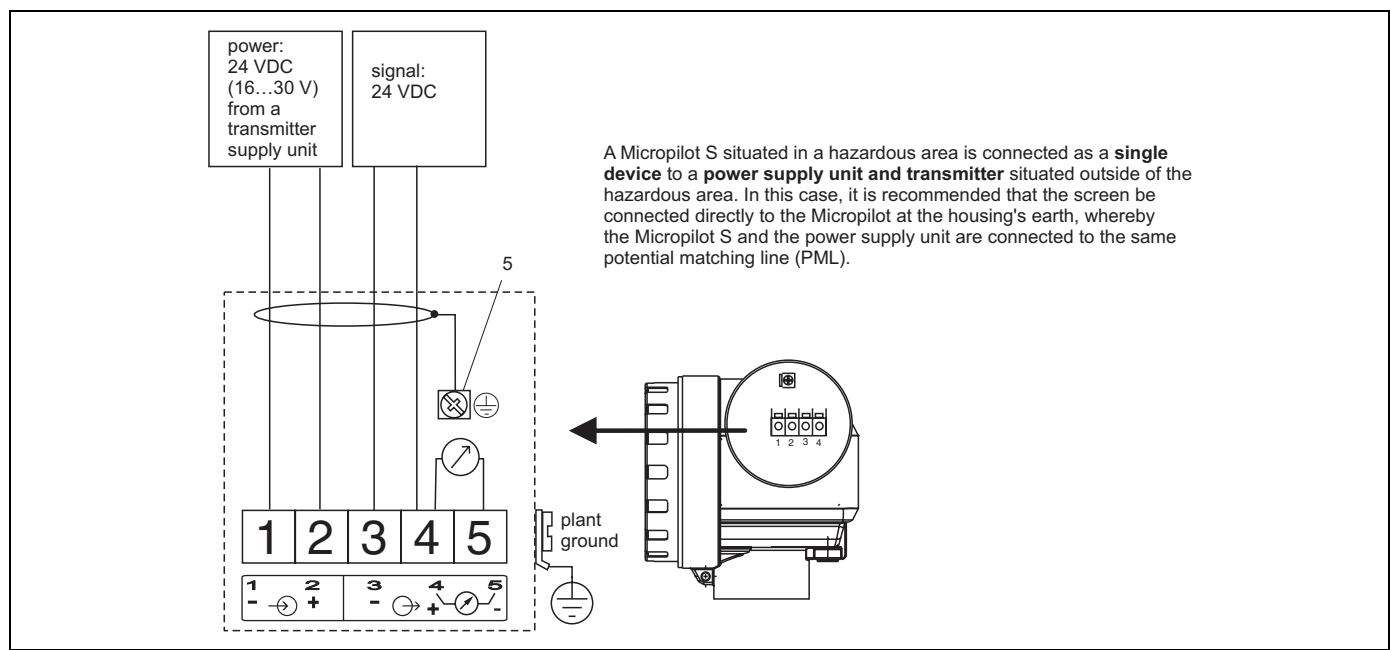

Load HART Minimum load for HART communication: 250 Ω

Cable entry Cable gland: M20x1.5
Cable entry: G ½, ½ NPT, M20 (thread)

Supply voltage DC voltage: 16...36 V

Communication		Terminal voltage	minimal	maximal
Power supply	standard	U (20 mA) =	16 V	36 V
	Ex	U (20 mA) =	16 V	30 V
Signal	Ex	U (4 mA) =	11.5 V	30 V
		U (20 mA) =	11.5 V	30 V

Power consumption Max. 400 mW at 16 V, max. 600 mW at 24 V, max. 750 mW at 30 V.
Non-Ex: max. 900 mW at 36 V.

Current consumption Max. 25 mA (55 mA inrush current).

Residual ripple HART 47...125 Hz: U_{pp} = 200 mV

Max noise HART 500 Hz...10 kHz : U_{eff} = 19 mV (at 500 Ω)



Power supply For stand alone operation recommended via two Endress+Hauser RN221N.

mm accuracy For measurements with mm accuracy the measured variable must be transmitted using HART protocol to ensure the necessary resolution.

Overvoltage protector

- The level transmitter Micropilot S is equipped with an internal overvoltage protector (600 Vrms surge arrester) according to DIN EN 60079-14 or IEC 60060-1 (impulse current test 8/20 μ s, \hat{I} = 10 kA, 10 pulses). Additionally, the instrument is protected by a galvanic insulation of 500 Vrms between the power supply and the (HART) current output. Connect the metallic housing of the Micropilot S to the tank wall or screen directly with an electrically conductive lead to ensure reliable potential matching.
- Installation with additional overvoltage protector HAW262Z/HAW56xZ (see XA081F-A "Safety instructions for electrical apparatus certified for use in explosion-hazardous areas").
 - Connect the external overvoltage protector and the Micropilot S transmitter to the local potential matching system.
 - Potentials shall be equalised both inside and outside the explosion hazardous area.
 - The cable connecting the overvoltage protector and the Micropilot S transmitter shall not exceed 1 m in length;
 - The cable shall be protected e.g. routed in an armoured hose.

Performance characteristics


Note	Performance characteristics for instruments that can be calibrated for inventory control and custody transfer applications are according to weight & measure standards in compliance with OIML R85. General operating / environmental conditions see →  20.
Reference operating conditions	According to OIML R85: <ul style="list-style-type: none"> ■ Temperature = $-25...+55$ °C ($-13...+131$ °F) ■ Atmospheric pressure ■ Relative humidity (air) = $60\% \pm 15\%$ ■ Medium properties: e.g. medium with good reflectivity and calm surface. ■ Tank diameter: signal beam hits the tank wall only at one side. ■ No major interference reflections inside the signal beam.
Maximum measured error	Absolute accuracy: better than ± 1 mm (better than $1/16''$)
Software reliability	<p>The software used in the radar instruments FMR540 fulfills the requirements of OIML R85. This particularly includes:</p> <ul style="list-style-type: none"> ■ cyclical test of data consistency ■ non-volatile memory ■ segmented data storage <p>The radar instruments Micropilot S continuously monitor the compliance with accuracy requirements for custody transfer measurements according to OIML R85. If the accuracy cannot be maintained, a specific alarm is generated on the local display and via the digital communication (see →  26).</p>
Hysteresis	0.1 mm
Long-term drift	The long-term drift is within the specified accuracy.
Influence of ambiente temperature	<p>Current output (additional error, in reference to the span of 16 mA):</p> <ul style="list-style-type: none"> ■ Zero point (4 mA) average T_K: 0,025 %/10 K, max. 0,291 % over the entire temperature range -40 °C...$+80$ °C ■ Span (20 mA) average T_K: 0,07 %/10 K, max. 0,824 % over the entire temperature range -40 °C...$+80$ °C
Proof of accuracy of custody transfer versions	<p>The accuracy of each Micropilot S is established through a calibration certificate that records the absolute and relative error at 10 equidistant points during the final test. A Laser Interferometer (Jenaer Messtechnik ZLM 500) with an absolute accuracy of 0.1 mm is used as a reference for the free space measurements with FMR540.</p> <p>Additional initial factory verifications for custody applications are available on demand for all radar instruments FMR540.</p>
Non-repeatability	0.1 mm ($1/64''$)
Resolution	Digital 0.1 mm / analogue (4...20 mA): 0.03 % of measuring range
Inventory control versions	<p>All device types can be delivered as "Inventory Control Versions" with a reduced accuracy of ± 3 mm (under reference conditions). To these versions, the calibration certificate or custody transfer type approval is NOT attached. The "Inventory Control Versions" can be selected by choosing the option "R" - Not selected, inventory control" in the order code option »Weight & Measure approval«.</p>

Operating conditions: Installation

Installation instructions

Orientation

- Recommended distance (1) from tank wall to the center of the nozzle: minimum as specified in Table on → 16 (beam angle / distance to wall).
- Not in the centre (3), interference can cause signal loss.
- Not above the fill stream (4).
- It is recommended to use a weather protection cover (2) in order to protect the transmitter from direct sun or rain. Assembly and disassembly is simply done by means of a tension clamp (see Accessories on → 34).

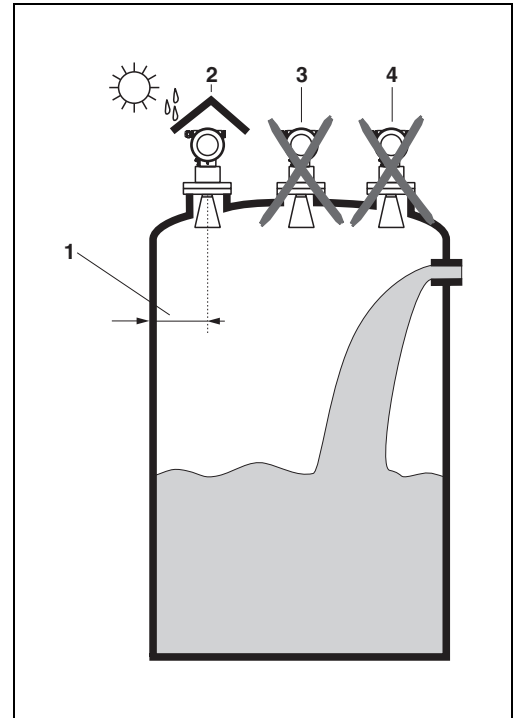

L00-FMR54xxx-17-00-00-yy-012


Tank installations

- Avoid any installations (1), like limit switches, temperature sensors, etc., inside the signal beam (refer to beam angle → 16).
- It is essential that HiHi alarm is below the blocking distance (BD) and the safety distance (SD).
- Symmetrical installations (2), e.g. vacuum rings, heating coils, baffles, etc., can also interfere with the measurement.

Optimisation options

- Antenna size: the bigger the antenna, the smaller the beam angle, the less interference echoes.
- Mapping: the measurement can be optimized by means of electronic suppression of interference echoes.
- Antenna alignment: refer to "optimum mounting position" (→ 17).
- Stilling well: a stilling well can always be used to avoid interference. The FMR532 with planar antenna is recommended for stilling wells with a diameter DN150 (6") and larger.
- Metallic screens (3) mounted at a slope spread the radar signals and can, therefore, reduce interference echoes.

Please contact Endress+Hauser for further information.

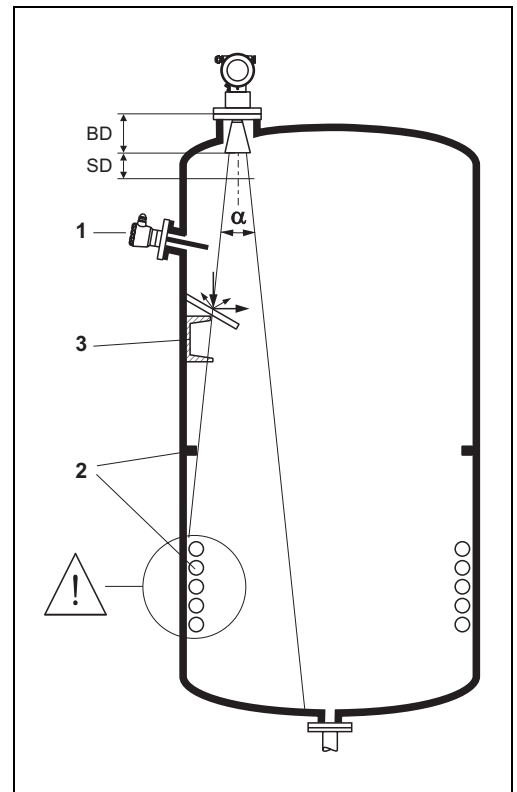


L00-FMR54xxx-17-00-00-yy-013

Beam angle

The beam angle is defined as the angle α where the energy density of the radar waves reaches half the value of the maximum energy density (3dB-width). Microwaves are also emitted outside the signal beam and can be reflected off interfering installations. Beam diameter **W** is a function of antenna type (beam angle α) and measuring distance **D**. The recommended distance to the tank wall is indicated in the tables below. It is strongly recommended to avoid any mechanical obstacles within the highlighted area.

	Horn antenna
Antenna size	100 mm / 4"
Beam angle (α)	8°


Measuring distance (D)	Beamwidth diameter (W)	Recommended distance to wall	
		0° tilting	3° tilting
5 m / 16 ft	0.70 m / 2.24 ft	0.89 m / 2.92 ft	0.62 m / 2.03 ft
10 m / 32 ft	1.40 m / 4.48 ft	1.77 m / 5.81 ft	1.23 m / 4.04 ft
15 m / 49 ft	2.10 m / 6.85 ft	2.65 m / 8.69 ft	1.85 m / 6.07 ft
20 m / 65 ft	2.80 m / 9.09 ft	3.53 m / 11.58 ft	2.46 m / 8.07 ft
25 m / 82 ft	3.50 m / 11.48 ft	4.41 m / 14.47 ft	3.07 m / 10.07 ft
30 m / 98 ft	4.20 m / 13.71 ft	5.29 m / 17.36 ft	3.69 m / 12.11 ft

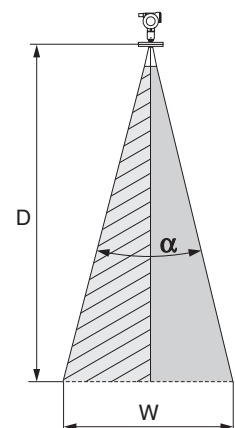

L00-FMR54xxx-14-00-00-xx-003

	Parabolic antenna	
Antenna size	200 mm / 8"	250 mm / 10"
Beam angle (α)	4.4°	3.3°


Measuring distance (D)	Recommended distance to wall	
5 m / 16 ft	0.35 m / 1.15 ft	0.2 m / 0.66 ft
10 m / 32 ft	0.70 m / 2.30 ft	0.5 m / 1.64 ft
15 m / 49 ft	1.05 m / 3.44 ft	0.75 m / 2.46 ft
20 m / 65 ft	1.40 m / 4.59 ft	1.05 m / 3.44 ft
25 m / 82 ft	1.75 m / 5.74 ft	1.3 m / 4.27 ft
30 m / 98 ft	2.10 m / 6.89 ft	1.6 m / 5.25 ft
35 m / 115 ft	2.45 m / 8.04 ft	1.85 m / 6.07 ft
40 m / 131 ft	2.80 m / 9.19 ft	2.1 m / 6.89 ft

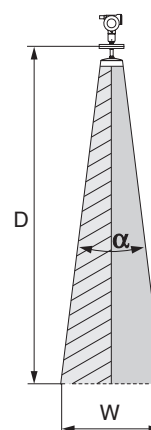

L00-FMR54xxx-14-00-00-xx-005

Installation on tank FMR540

Optimum mounting position

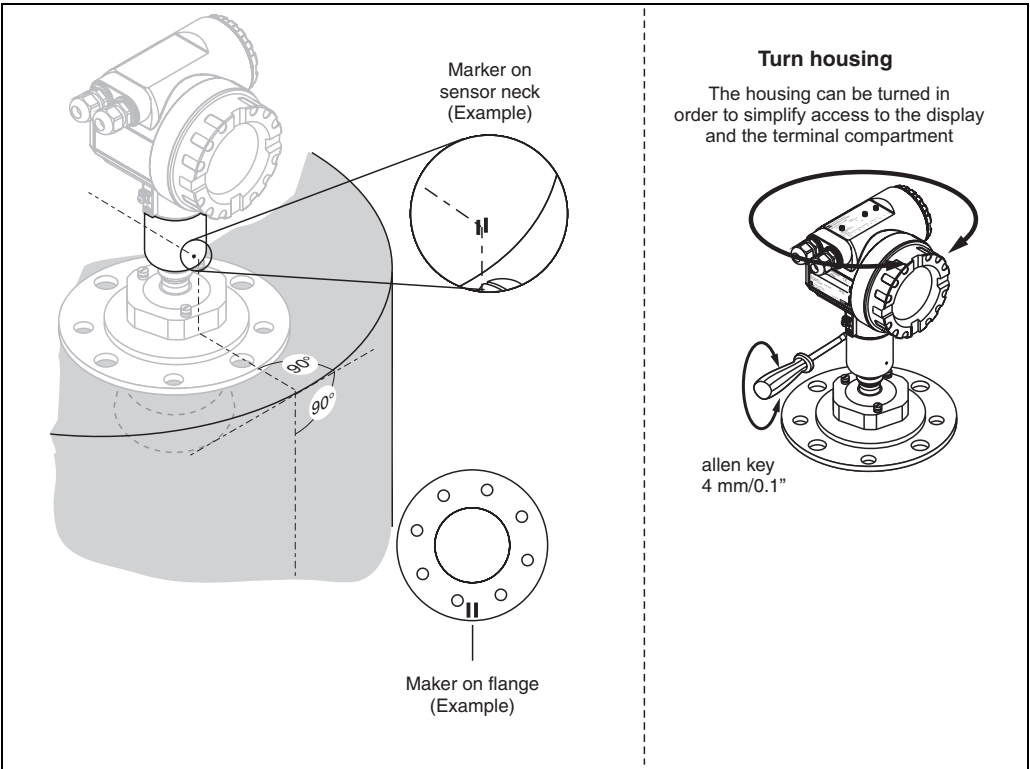

L00-FMR54xxx-17-00-00-en-015


Standard installation FMR540 with horn antenna

- Observe installation instructions on → 15.
- Marker must be aligned towards tank wall. The marker is located clearly visible on the sensor neck or the flange.
- After mounting, the housing can be turned 350° in order to simplify access to the display and the terminal compartment.
- Adjust vertical sensor alignment in case the flange is not parallel to the face of medium surface.
- The horn antenna should protrude from the nozzle. If necessary, choose version with antenna extension (→ 22).

Note!

Please contact Endress+Hauser for application with higher nozzle.

- The horn antenna should be installed with 3 degree inclination towards the tank center. To avoid interference reflections or for optimum alignment within the tank, the FMR540 with optional alignment device can be swiveled by 15° in all directions. For more informations please see instructions in KA274F/00. Please contact Endress+Hauser Service Organisation for commissioning.

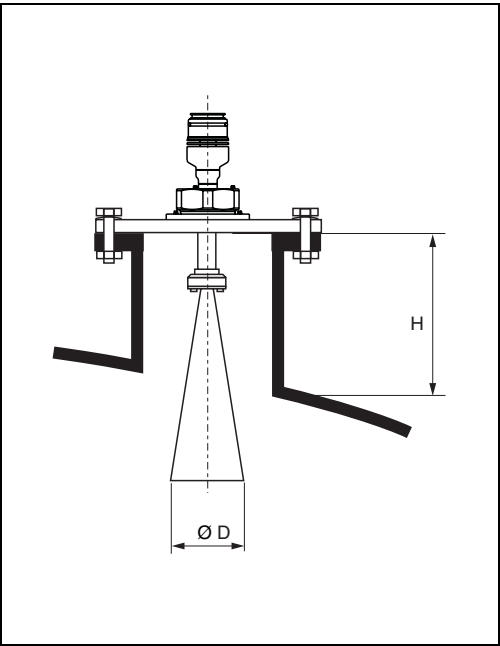

L00-FMR540xxx-17-00-00-xx-001

Antenna size	100 mm / 4"
D [mm / inch]	95 / 3.7
H [mm / inch] (without antenna extension)	< 430 / < 19.2


Standard installation FMR540 with parabolic antenna

- Observe installation instructions on → 15.
- Marker is aligned towards tank wall. The marker is located clearly visible on the sensor neck or the flange.
- After mounting, the housing can be turned 350° in order to simplify access to the display and the terminal compartment.
- Ideally the parabolic antenna should protrude from the nozzle (1).
Particularly when using the alignment device, please ensure that the parabolic reflector is protruding from the nozzle/roof so as not to inhibit alignment.

Note!

For application with higher nozzle install parabolic antenna completely in the nozzle (2), including RF-wave guide (3).

- The parabolic antenna should be installed vertically.
To avoid interference reflections or for optimum alignment within the tank, the FMR540 with optional alignment device can be swiveled by 15° in all directions. For more informations please see instructions in KA274F/00. Please, contact Endress+Hauser Service organization for commissioning.

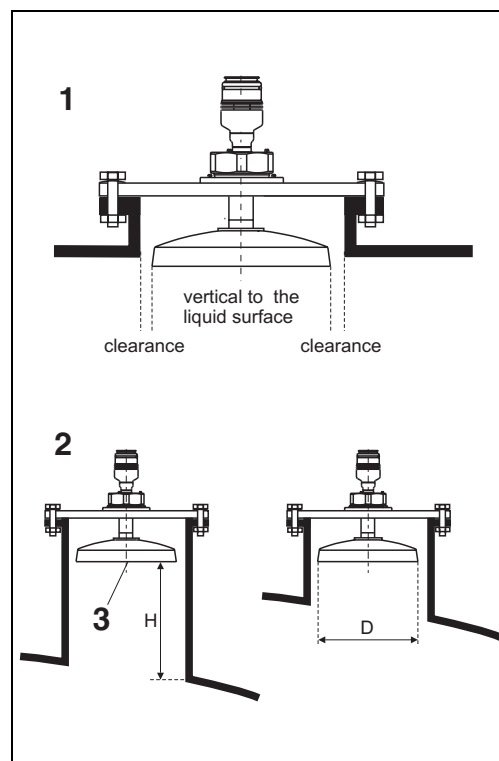


L00-FMR54xxxx-17-00-00-en-017

Antenna size	200 mm / 8"	250 mm / 10"
D [mm / inch]	173 / 6.8	236 / 9.4
H [mm / inch] (without antenna extension)	< 200 / < 7.9	< 200 / < 7.9

FMR540 with alignment device**Optimum mounting position**

Micropilot S should be installed vertically towards the Liquid surface for best measuring performance of ± 1 mm. Using the alignment device it is possible to tilt the antenna axis by up to 15° in all directions. The alignment device is used for the optimum alignment of the radar beam to the liquid surface. The Sensor should be positioned vertical to the liquid surface in inclination of 0° for Parabolic Antenna and up to 3° for Horn Antenna.

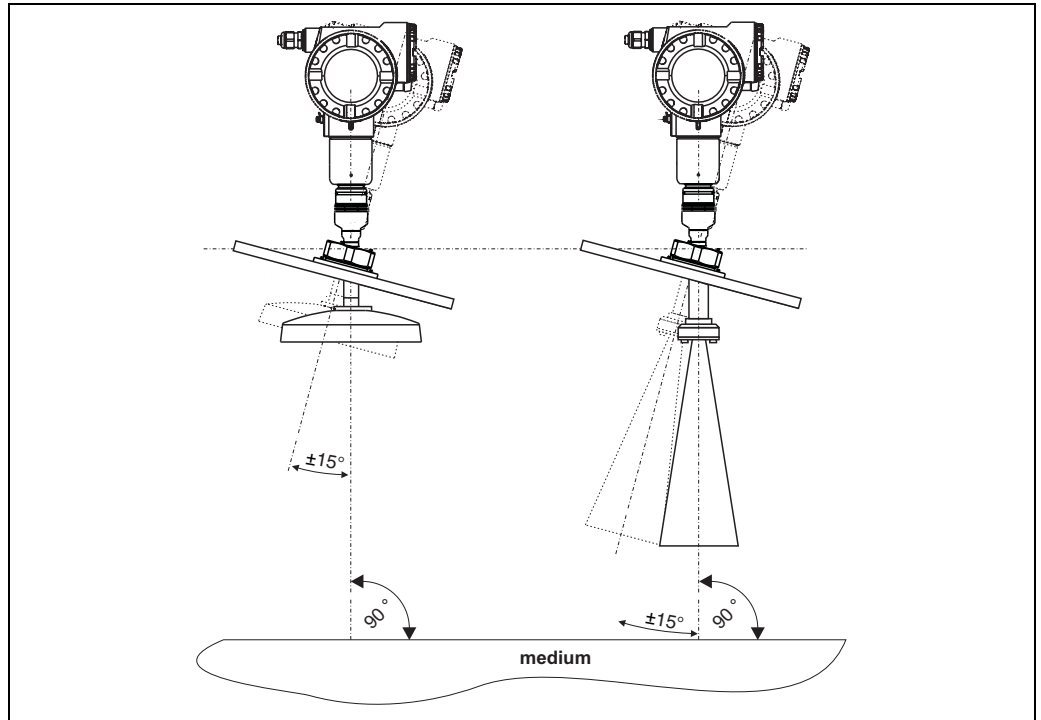

L00-FMR54xxx-17-00-00-en-018

To align the antenna as precisely as possible, it is recommended to use the Level Tool, which is available as an accessory.

For more informations please see instructions in KA274F/00.

In case of custody Application, the screws must be locked with wires.


Integrated air purge connection

In some applications, the integrated air purge connection can prevent clogging of the antenna.

- Permanent operation:
recommended pressure range of the purge air:
1.2...1.5 bar abs.
- Pulsed operation:
max. pressure of purge air: 6 bar abs.

Caution!

Make sure to use dry purge air.

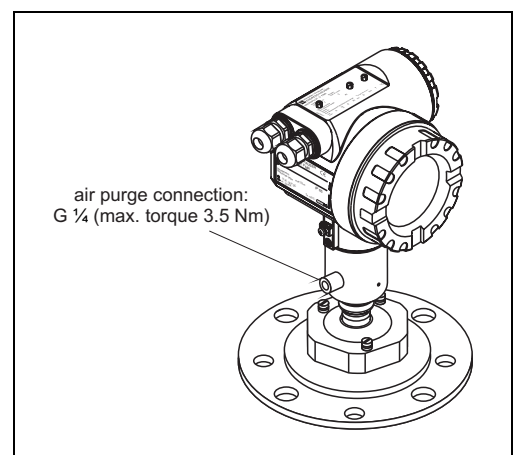

L00-FMR54xxx-17-00-00-en-019

Operating conditions: Environment

Ambient temperature range	<p>Ambient temperature for the transmitter:</p> <ul style="list-style-type: none"> ■ Standard: -40 °C ... +80 °C (-40 °F...+176 °F) ■ For calibration to regulatory standards: -25 °C ... +55 °C (-30 °F...+131 °F) <p>With $T_u < -20$ °C and $T_u > +60$ °C the operability of the LC-display is reduced. A weather protection cover should be used for outdoor operation if the instrument is exposed to direct sunlight.</p>
Storage temperature	-40 °C ... +80 °C (-40 °F...+176 °F)
Climate class	DIN EN 60068-2-38 (test Z/AD)
Degree of protection	<ul style="list-style-type: none"> ■ Housing: IP 68, NEMA 6P. With open cover (also ingress protection of the display): IP20, NEMA 1 ■ antenna: IP 68, NEMA 6P
Vibration resistance	DIN EN 60068-2-64 / IEC 68-2-64: 20...2000 Hz, 1 (m/s ²)/Hz
Cleaning of the antenna	<p>The antenna can get contaminated, depending on the application. The emission and reception of microwaves can thus eventually be hindered. The degree of contamination leading to an error depends on the medium and the reflectivity, mainly determined by the dielectric constant ϵ_r. If the medium tends to cause contamination and deposits, cleaning on a regular basis is recommended. Care has to be taken not to damage the antenna in the process of a mechanical or hose-down cleaning. The material compatibility has to be considered if cleaning agents are used! The maximum permitted temperature at the flange should not be exceeded. .</p>
Electromagnetic compatibility	<ul style="list-style-type: none"> ■ Interference Emission to EN 61326, Electrical Equipment Class B ■ Interference Immunity to EN 61326, Annex A (Industrial) and NAMUR Recommendation NE 21 (EMC) ■ A standard installation cable is sufficient if only the analogue signal is used. Use a screened cable when working with a superimposed communications signal (HART).
Approvals for custody transfer applications	All aspects of OIML R85 are fulfilled.

Operating conditions: Process


Process temperature range	FKM Viton GLT, -40 °C...+200 °C (-40 °F...+392 °F)
Process pressure limits	<ul style="list-style-type: none"> ■ Parabolic Antenna -1...16 bar (-14.5...232 psi) ■ Horn Antenna -1...16 bar (-14.5 psi...232 psi) ■ With Endress+Hauser UNI flange -1...1bar (-14.5 psi...14.5 psi)
Antenna core	<ul style="list-style-type: none"> ■ Parabolic Antenna: Teflon (PTFE) ■ Horn Antenna: PEEK
Wetted parts	<ul style="list-style-type: none"> ■ Parabolic Antenna: Teflon (PTFE), seal and 316L/1.4404/1.4435 ■ Horn Antenna: PEEK, seal and 316L/1.4404/1.4435
Alignment device	± 15° inclination seal: FKM Viton GLT

Mechanical construction

Design, dimensions


Housing dimensions

Dimensions for process connection and type of antenna → [Fig. 22](#).

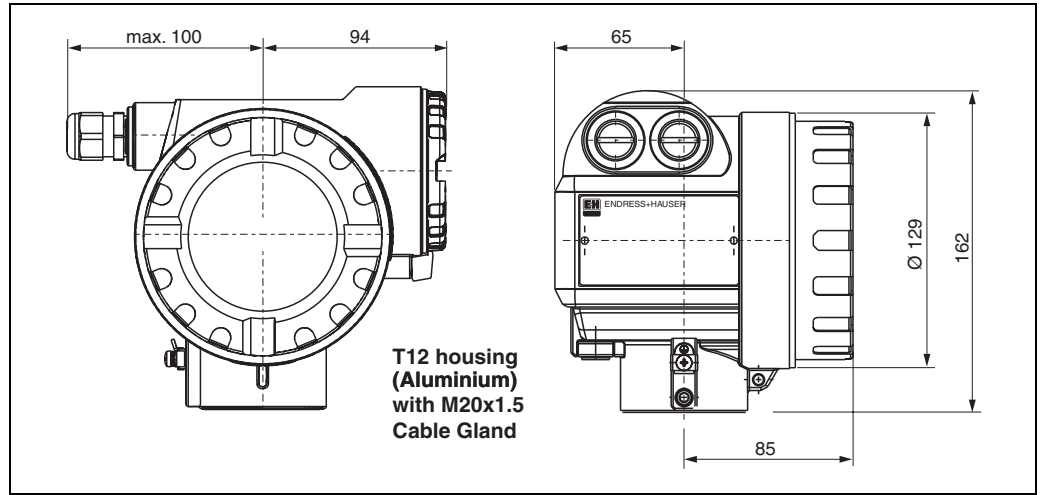

Micropilot S FMR540 - process connection, type of antenna

Housing dimensions → 21.

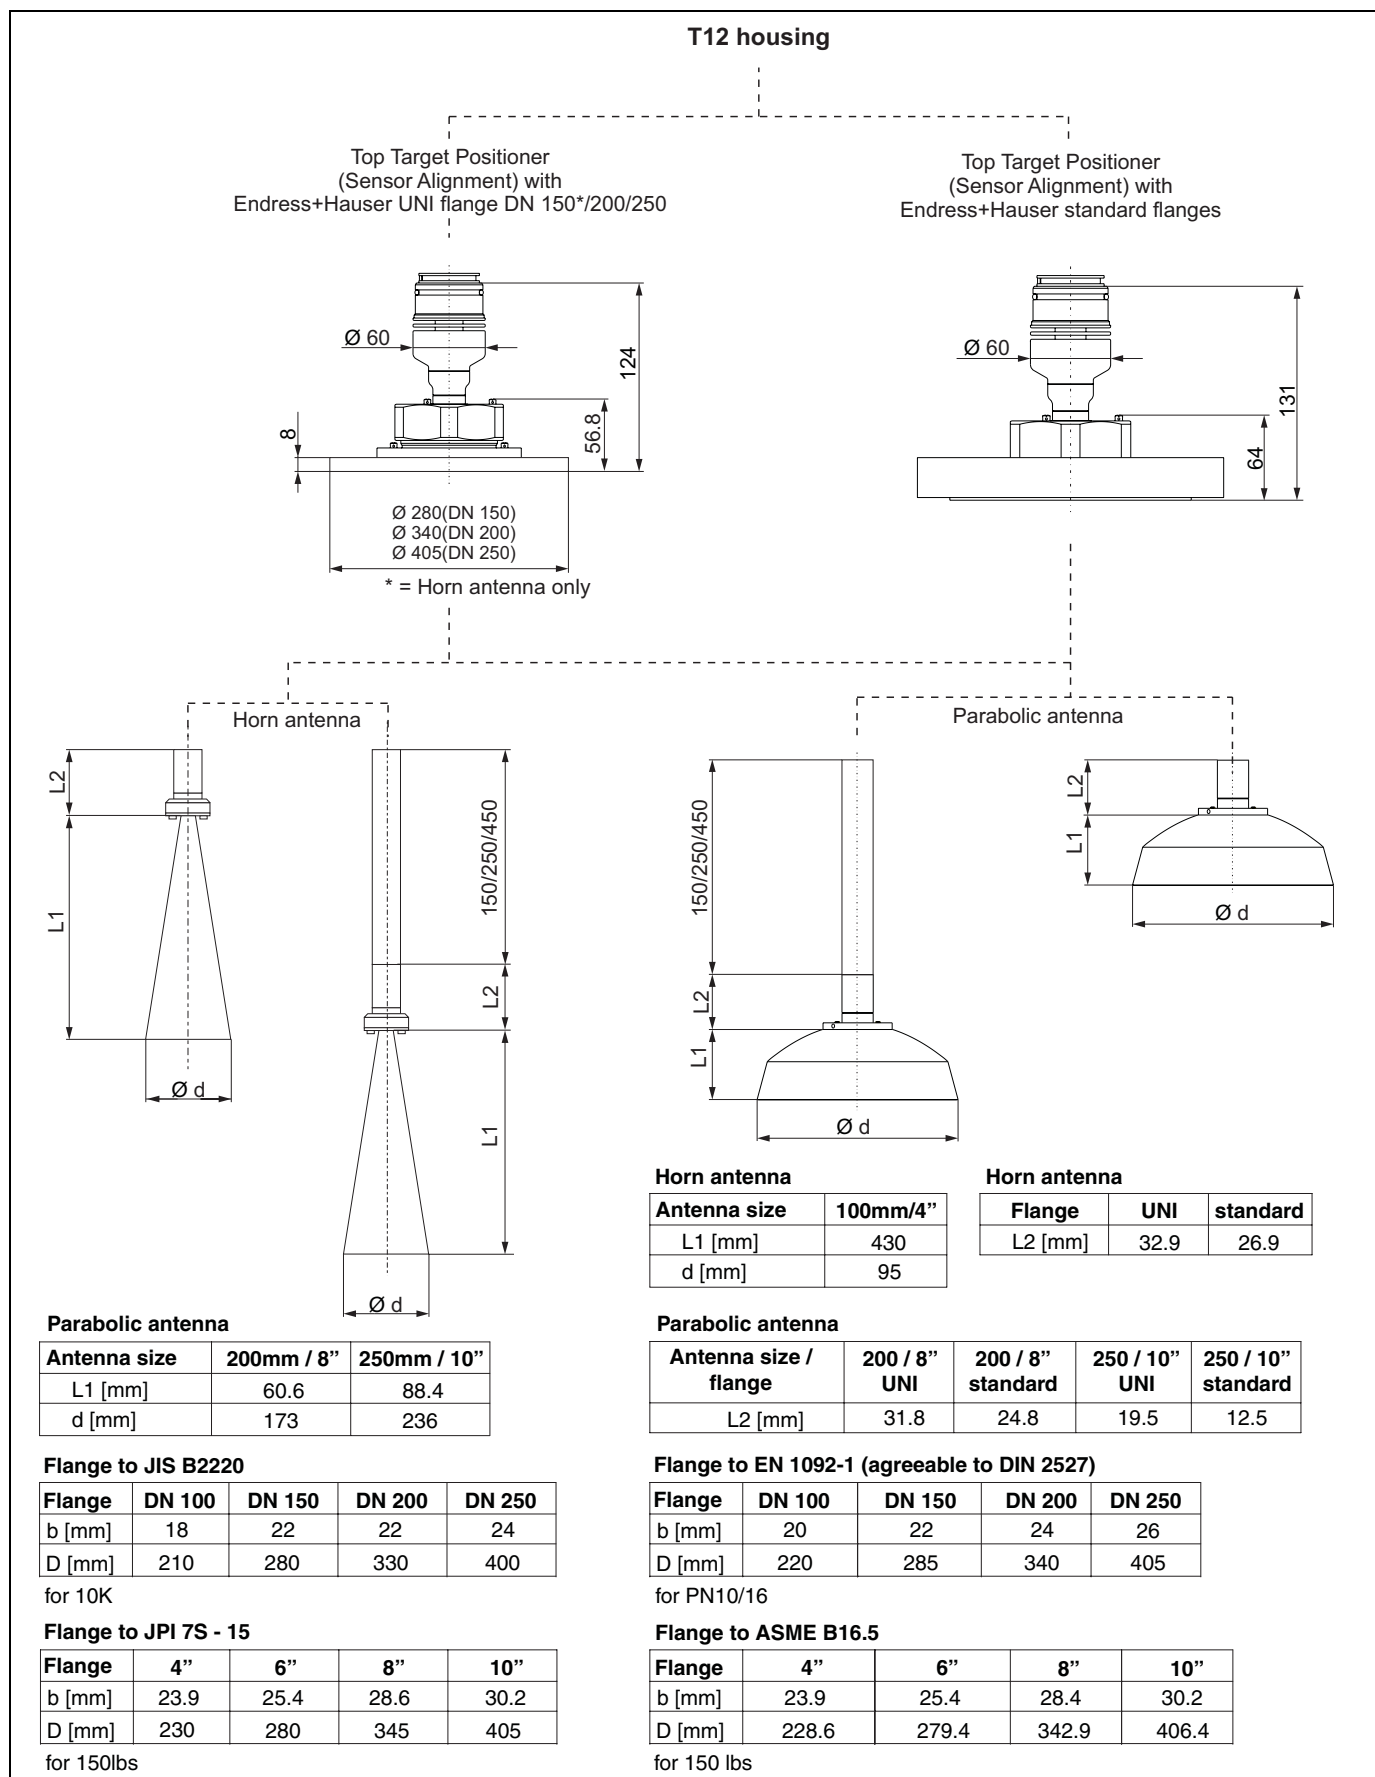

100-FMR540xx-00-00-00-en-006

Type plate / type plate for custody transfer applications

In addition to the standard type plate, the instrument features a type plate for custody transfer applications with the following statements:

- manufacturer
- instrument type
- label for custody transfer approval
 - PTB : Custody transfer approval sign („Z“) with approval number
 - NMi : field for 5-digit approval number
- year of manufacturing
- space for imprinted tank identification number
- statement of measuring range suitable for custody transfer approval including unit
- statement of ambient temperature range suitable for calibration to regulatory standards

The following statements are also required for calibration to regulatory standards. They are listed on the standard type plate and are not repeated here:

- date of manufacturing
- tester

The type plate for calibration to regulatory standards can be sealed. It is mounted with screws, therefore also available as a spare part. The „stamping“ of the electronic compartment is achieved with the custody locking switch (compare figure on → 26) and does not require any additional stamping location. NMI and PTB type plate for custody transfer approval refer to illustration:

NMi type plate (example)

The diagram shows a rectangular type plate for an Endress+Hauser Micropilot S FMR instrument. The plate is divided into several sections by lines. The top section contains the manufacturer's name 'Hersteller / Producer : ENDRESS+HAUSER' and the instrument type 'MICROPILOT S FMR'. Below this, there are fields for 'Zertifikat-Nr. / Certification no.' and 'Baujahr / Year of constr.'. The middle section contains 'Tankreferenzhöhe / Tank reference height' and 'Tank-Nr. / Tank-no.'. The bottom section contains 'Zert.Messbereich/Cert.Measuring range' and 'TUmgeb./Environm.'. The plate is marked with '250002049--' on the left and '250002049--' on the right. The plate is also marked with 'Certification no.', 'Year of construction', 'Tank reference height', 'Tank-no.', 'Tankreferenzhöhe', 'Tank-Nr.', 'Zert.Messbereich/Cert.Measuring range', and 'TUmgeb./Environm.'. The plate is also marked with 'Certified Measuring range from ... to ... min. environment temperature max. environment temperature'.

L00-FMR540xx-18-00-00-en-001


PTB type plate (example)

The diagram shows a rectangular type plate for an Endress+Hauser Micropilot S FMR instrument. The plate is divided into several sections by lines. The top section contains the manufacturer's name 'Hersteller / Producer : ENDRESS+HAUSER' and the instrument type 'MICROPILOT S FMR'. Below this, there are fields for 'Zertifikat-Nr. / Certification no.' and 'Baujahr / Year of constr.'. The middle section contains 'Tankreferenzhöhe / Tank reference height' and 'Tank-Nr. / Tank-no.'. The bottom section contains 'Zert.Messbereich/Cert.Measuring range' and 'TUmgeb./Environm.'. The plate is marked with '250002049--' on the left and '250002049--' on the right. The plate is also marked with 'Approval number', 'Year of construction', 'Tank reference height', 'Tank-no.', 'Tankreferenzhöhe', 'Tank-Nr.', 'Zert.Messbereich/Cert.Measuring range', and 'TUmgeb./Environm.'. The plate is also marked with 'Certified Measuring range from ... to ... min. environment temperature max. environment temperature'.


L00-FMR540xx-18-00-00-en-002

Endress+Hauser UNI flange**Installation hints**



The number of bolts has sometimes been reduced. The bolt-holes have been enlarged for adaption of dimensions, therefore, the flange needs to be properly aligned to the counterflange before the bolts are tightened.

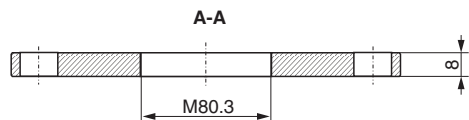**Endress+Hauser UNI flange DN150**

compatible with:
 - DN150 PN10/16,
 - ANSI 6" 150 lbs,
 - JIS 10K 150A

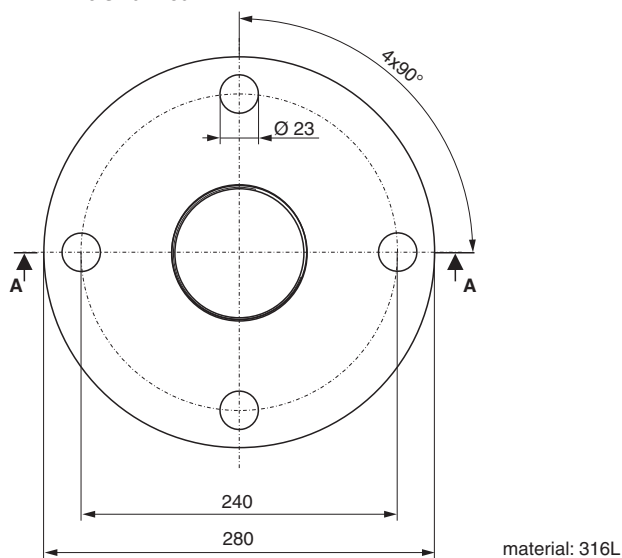
**Endress+Hauser UNI flange DN200**

compatible with:
 - DN200 PN10/16,
 - ANSI 8" 150 lbs,
 - JIS 10K 200A

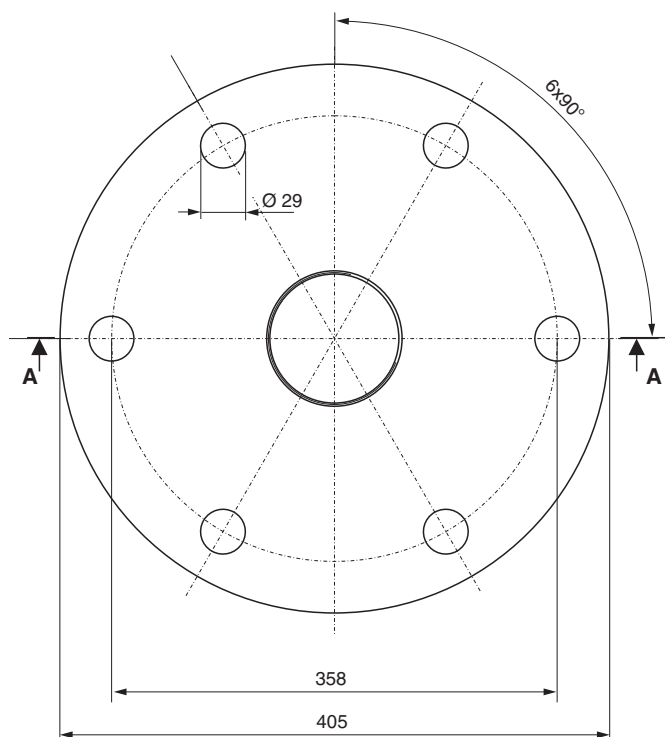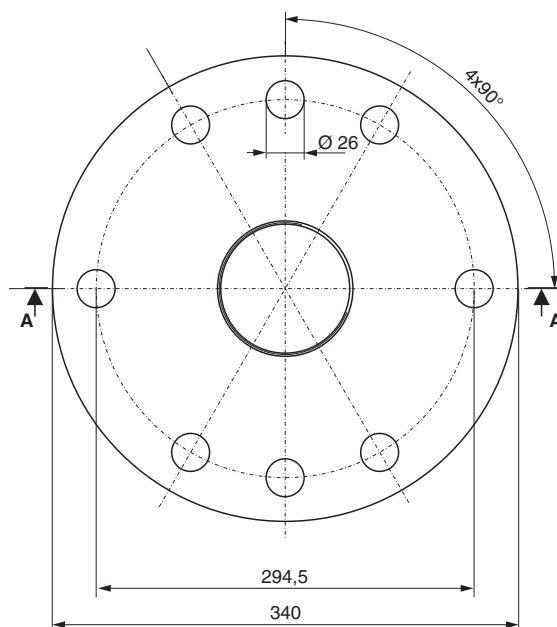**Endress+Hauser UNI flange DN250**

compatible with:
 - DN250 PN10/16,
 - ANSI 10" 150 lbs,
 - JIS 10K 250A

Alignment device with Endress+Hauser UNI flange

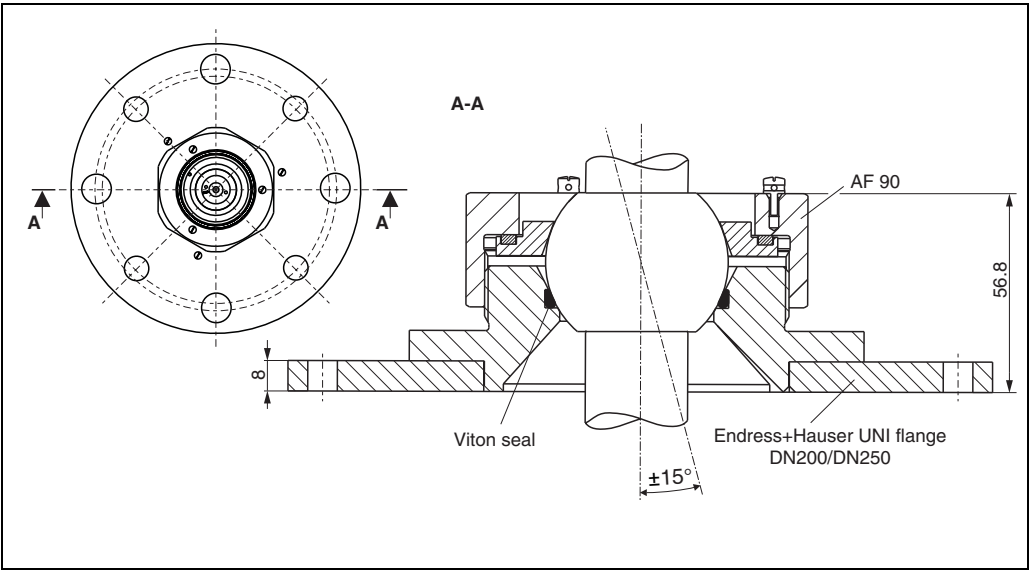

100-FMR540xx-06-00-00-en-008

Please, also see sensor alignment tool → 34.

Weight

Micropilot S	FMR540
Weight T12 housing	Approx. 6 kg + weight of flange

Please, refer to ordering information → 32.

Material

- Housing T12: aluminium, seawater-resistant, chromated, powder-coated
- Sight window: glass

Human interface

Operation concept

The display of the process value and the configuration of the Micropilot is done locally by means of a large 4-line alphanumeric display with plain text information. The guided menu system with integrated help texts ensures a quick, safe and easy commissioning.


Display and operation is selectable from one out of six languages (English, German, French, Italian, Dutch, Spanish and Japanese). During the first start-up, the instrument explicitly asks for the desired unit / language. To access the display the cover of the electronic compartment may be removed even in hazardous area (Ex ia, IS).

Remote commissioning, including documentation of the measuring point and in-depth analysis functions, is supported via the ToF Tool, the graphical operating software for Endress+Hauser time-of-flight systems. Access to the electronics can be prevented by means of a custody locking switch that locks the device settings. The custody locking switch can be sealed for custody transfer applications.

Display elements

Liquid crystal display (LCD):

Four lines with 20 characters each. Display contrast adjustable through key combination.

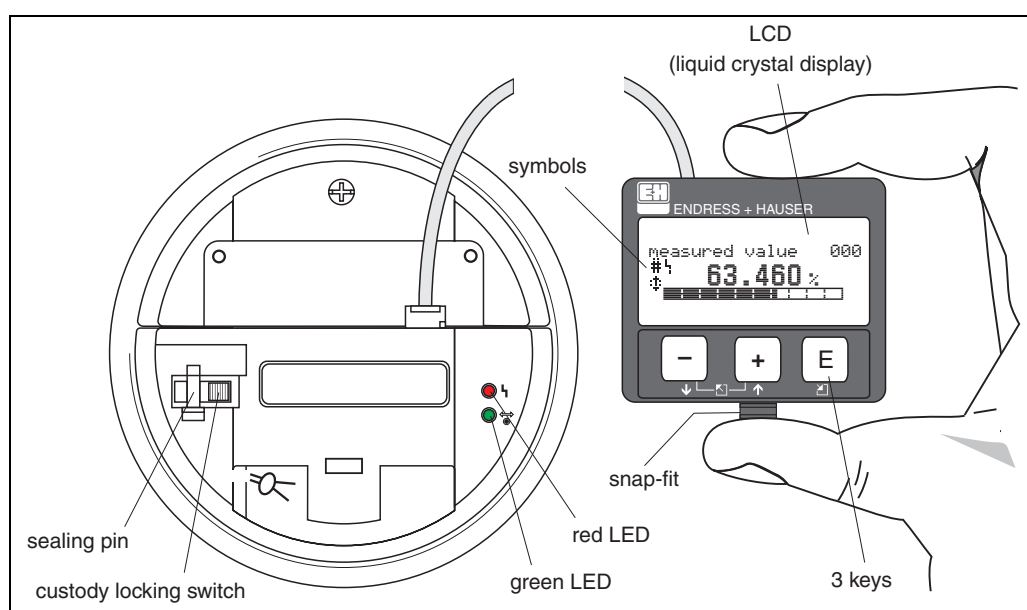

Note!

To access the display, it is possible to open the cover of the electronics compartment even in an explosion hazardous area.

The VU331 LCD display can be removed to ease operation by simply pressing the snap-fit (see graphic above). It is connected to the device by means of a 500 mm cable.

Display symbols

The following table describes the symbols that appear on the liquid crystal display:

Symbols	Meaning
	ALARM_SYMBOL This alarm symbol appears when the instrument is in an alarm state. If the symbol flashes, this indicates a warning.
	LOCK_SYMBOL This lock symbol appears when the instrument is locked, i.e. if no input is possible.
	COM_SYMBOL This communication symbol appears when a data transmission via e.g. HART is in progress.
	Calibration to regulatory standards disturbed If the instrument is not locked or it cannot guarantee the calibration to regulatory standards, the situation will be indicated on the display via the symbol.

Light emitting diodes (LEDs):








 






There is a green and a red LED besides the Liquid Crystal Display.

LED	Meaning
red LED continuously on	Alarm
red LED flashes	Warning
red LED off	No alarm
green LED continuously on	Operation
Green LED flashes	Communication with external device

Operating elements

The operating elements are located inside the housing and are accessible for operation by opening the lid of the housing.


Function of the keys

Key(s)	Meaning
 or 	Navigate upwards in the selection list Edit numeric value within a function
 or 	Navigate downwards in the selection list Edit numeric value within a function
 or 	Navigate to the left within a function group
	Navigate to the right within a function group
 and  or  and 	Contrast settings of the LCD
 and  and 	Hardware lock / unlock After a hardware lock, an operation of the instrument via display or communication is not possible! The hardware can only be unlocked via the display. An unlock parameter must be entered to do so.

On-site configuration

Operation with VU331


The LC-Display VU331 allows configuration via 3 keys directly at the instrument. All device functions can be set through a menu system. The menu consists of function groups and functions. Within a function, application parameters can be read or adjusted. The user is guided through a complete configuration procedure.

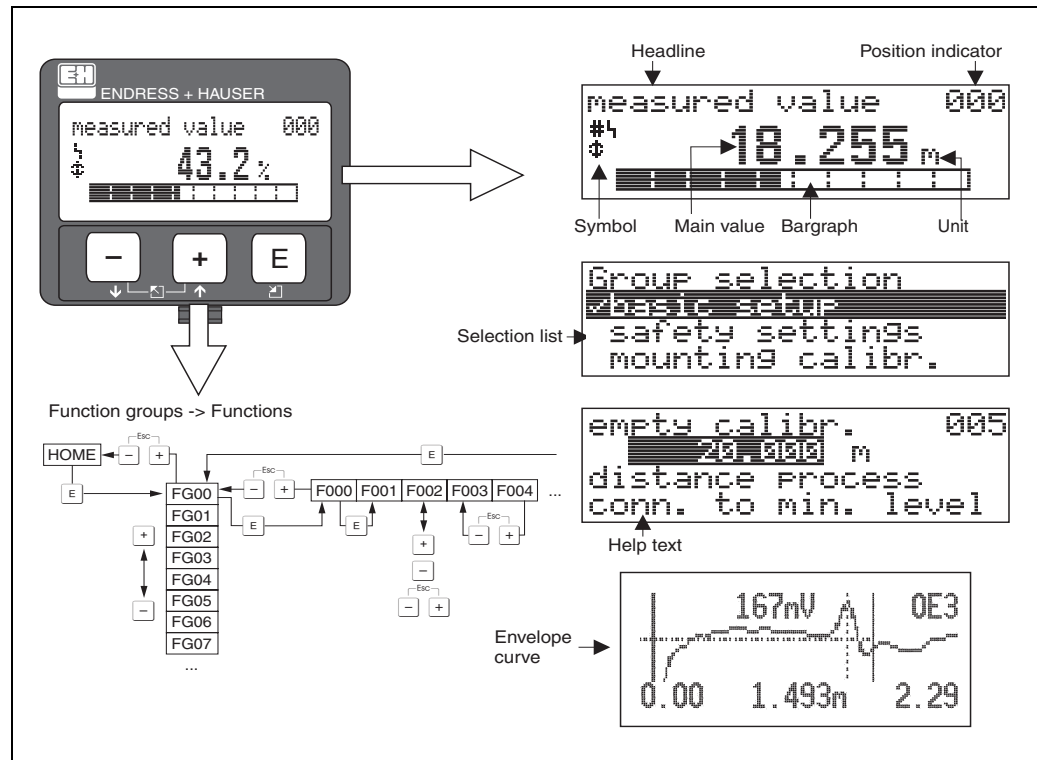

100-FMRxxxx-07-00-00-en-002

Operation with handheld unit Field Communicator DXR375

All device functions can be adjusted via a menu operation with the handheld unit DXR375.

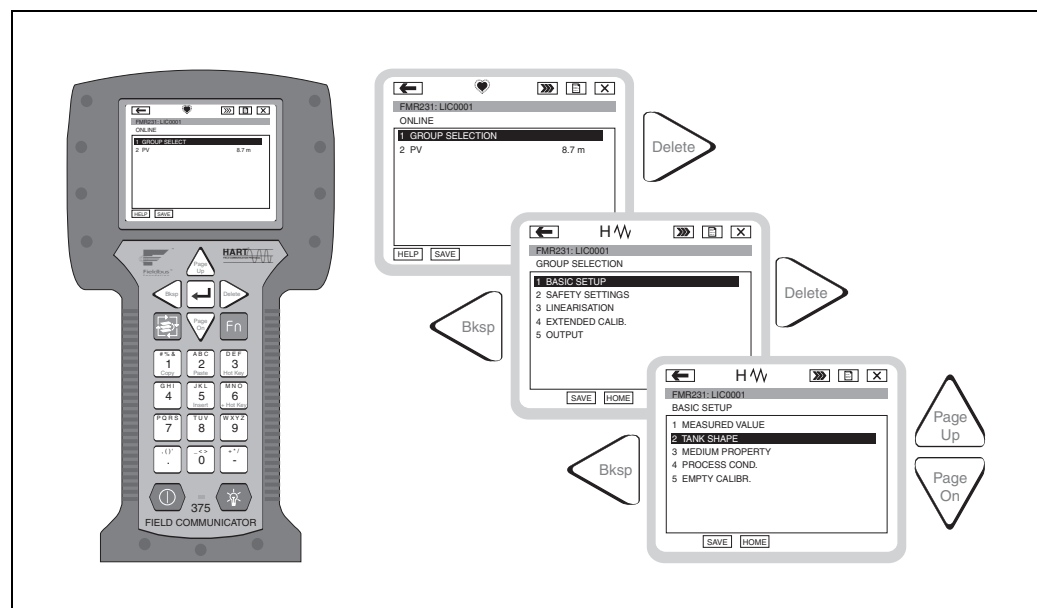

100-FMR2xxxx-07-00-00-yy-007

Note!

Further information on the handheld unit is given in the respective operating manual included in the transport bag of the DXR375.

Remote configuration


The Micropilot S can be remotely operated via HART. On-site adjustments are also possible.

Operation with FieldCare

FieldCare is Endress+Hauser's FDT based Plant Asset Management Tool. It can configure all intelligent field devices in your plant and supports you in managing them. By using status information, it also provides a simple but effective means of checking their health.


- Operates all Endress+Hauser devices
- Operates all third-party actuators, I/O systems and sensors supporting the FDT standard
- Ensures full functionality for all devices with DTMs
- Offers generic profile operation for any third-party fieldbus device that does not have a vendor DTM

Menu-guided commissioning

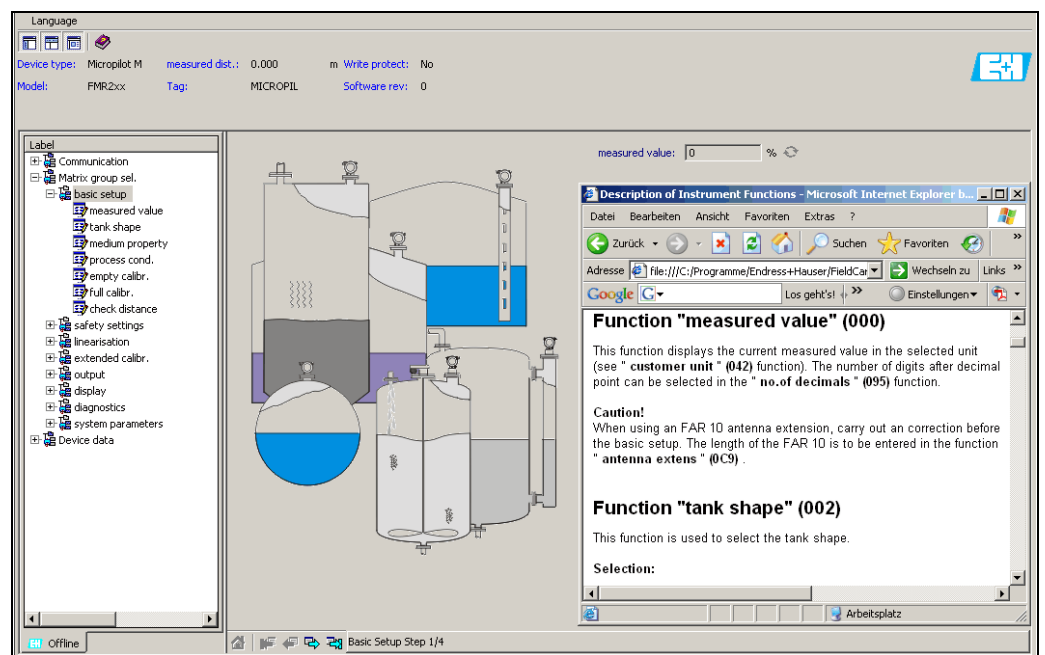

MicropilotM-en-305

Signal analysis via envelope curve

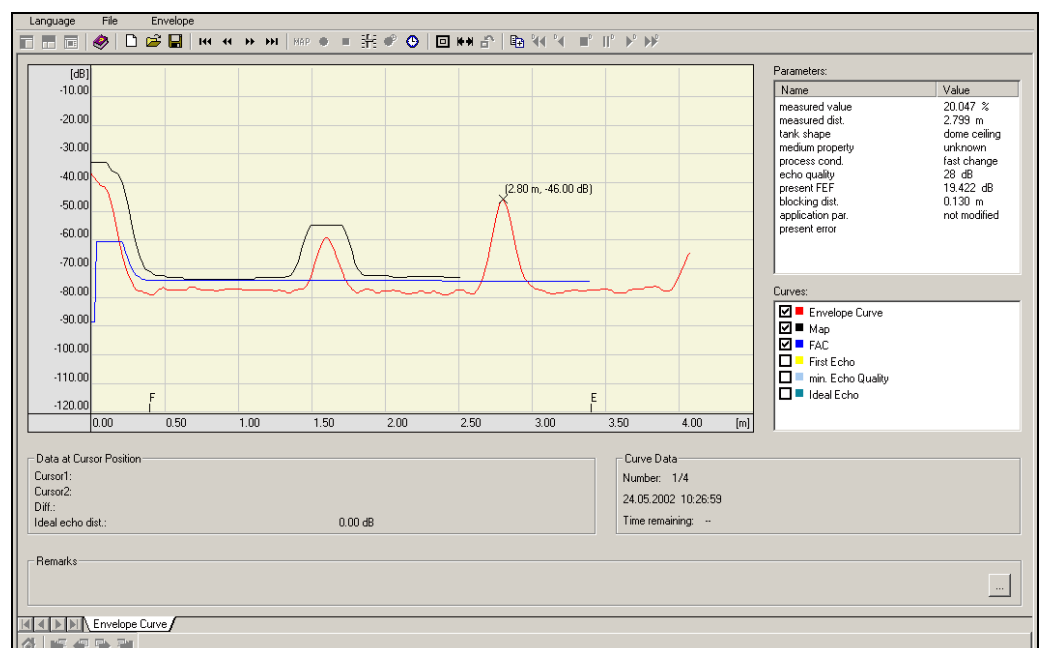

MicropilotM-en-306

Tank linearisation

Language File Table

Index	input level (m)	input volume (%)
1	0.000	0.000
2	0.065	1.772
3	0.129	3.765
4	0.194	5.980
5	0.258	8.417
6	0.323	11.090
7	0.387	13.966
8	0.452	17.078
9	0.516	20.411
10	0.581	23.965
11	0.645	27.736
12	0.710	31.702
13	0.774	35.804
14	0.839	39.999
15	0.903	44.256
16	0.968	48.546
17	1.032	52.843
18	1.097	57.120
19	1.161	61.349
20	1.226	65.500
21	1.290	69.538
22	1.355	73.409
23	1.419	77.068
24	1.484	80.508
25	1.548	83.727
26	1.613	86.722
27	1.677	89.492
28	1.742	92.038
29	1.806	94.360
30	1.871	96.459
31	1.935	98.339
32	2.000	100.000

Read Write

Volume Unit: %

Dish bottoms according DIN 28011

H: 2.2 [m] Angle: 15 °

Empty (E): 2.2 [m] End Typ (right): Flat

Full (F): 2 [m] End Typ (left): Flat

Diameter (D): 2 [m]

Length (L): 5 [m] Change Position (P): 2.5 [m]

Type: Horizontal cylindrical tank

Steps: 32 Calculate Table


Levels: ☒ Automatic ☐ User Defined

Start Volume: ☒ Zero ☐ Calculated

Diagram Tank

MicropilotM-es-307

Certificates and approvals

CE approval	The measuring system meets the legal requirements of the EC-guidelines. Endress+Hauser confirms the instrument passing the required tests by attaching the CE-mark.
Ex approval	See "Ordering information" on →  32.
External standards and guidelines	<p>To conception and development for Micropilot S have been followed the external standards and guidelines:</p> <p>EN 60529 Protection class of housing (IP-code)</p> <p>EN 61010 Safety regulations for electrical devices for measurement, control, regulation and laboratory use.</p> <p>EN 61326 Emissions (equipment class B), compatibility (appendix A – industrial area)</p> <p>NAMUR Standards committee for measurement and control in the chemical industry</p> <p>API (American Petroleum Institute) Particularity "Manual of Petroleum Measurement Standards"</p> <p>OIML R85 (Organisation Internationale de Métrologie Légale)</p>
Type approvals for custody transfer approvals	All aspects of OIML R85 are fulfilled
RF approvals	R&TTE 1999/5/EG, FCC CRF 47, part 15

Ordering information

Micropilot S FMR540

This overview does not mark options which are mutually exclusive.


10	Approval:			Baisc weight
	A		Non-hazardous area	6.0 Kg (T12 Transmitter housing)
	D		IEC Ex ia IIC T6 (in preparation)	
	G		ATEX II 3G EEx nA II T6 (in preparation)	
	I		NEPSI Ex ia IIC T6 (in preparation)	
	K		TIIS Ex ia IIC T3 (in preparation)	
	L		TIIS Ex ia IIC T6 (in preparation)	
	M		TIIS Ex d (ia) T3 (in preparation)	
	N		TIIS Ex d (ia) T6 (in preparation)	
	S		FM IS Cl.I Div.1 Gr.A-D, zone 0,1,2	
	T		FM XP Cl.I Div.1 Gr.A-D, zone 1,2 (in preparation)	
	U		CSA IS Cl.I Div.1 Gr.A-D, zone 0,1,2	
	V		CSA XP Cl.I Div.1 Gr. A-D, zone 1,2 (in preparation)	
	1		ATEX II 1/2G EEx ia IIC T6	
	4		ATEX II 1/2G EEx d (ia) IIC T6 (in preparation)	
	6		ATEX II 1/2G EEx ia IIC T6, WHG	
	Y		Special version	
20	Antenna; Seal:			
	E		100mm/4" horn, Align. device; FKM Viton GLT	0.6 Kg 0.3 Kg
	G		200mm/8" Parabolic, Align. device; FKM Viton GLT	
	H		250mm/10" Parabolic, Align. device; FKM Viton GLT	
	5		100mm/4" horn; FKM Viton GLT	
	6		200mm/8" Parabolic, FKM Viton GLT	
	9		Special version	
30	Antenna Extension:			Additional weight
		1	w/o	1.8 Kg
		2	150mm/6"	2.0 Kg
		3	250mm/10"	2.3 Kg
		4	450mm/18"	2.9 Kg
		9	Special version	
40	Process connection:			Additional weight
			– EN-Flanges –	
		CQJ	DN100 PN10/16 B1, 316L; flange EN1092-1 (DIN2527 C)	4.9 Kg
		CWJ	DN150 PN10/16 B1, 316L; flange EN1092-1 (DIN2527 C)	10.6 Kg
		CKJ	DN200 PN16 B1, 316L; flange EN1092-1 (DIN2527 C)	16.5 Kg
		C6J	DN250 PN16 B1, 316L; flange EN1092-1 (DIN2527 C)	
			– ASME-Flanges –	
		APJ	4" 150lbs RF, 316/316L, flange ANSI B16.5	7.0 Kg
		AVJ	6" 150lbs RF, 316/316L, flange ANSI B16.5	11.3 Kg
		AKJ	8" 150lbs RF, 316/316L, flange ANSI B16.5	19.6 Kg
		A5J	10" 150lbs RF, 316/316L flange ANSI B16.5	
			– JIS-Flanges –	
		KHJ	10K 100 RF, 316L, flange JIS B2220	4.5 Kg
		KVJ	10K 150 RF, 316L, flange JIS B2220	10.1 Kg
		KDJ	10K 200 RF, 316L, flange JIS B2220	
		K5J	10K 250 RF, 316L, flange JIS B2220	
			– JPI-Flanges –	
		APJ	4" 150lbs RF, JPI, 316/316L, flange JPI 7S-15	
		AVJ	6" 150lbs RF, JPI, 316/316L, flange JPI 7S-15	
		AKJ	8" 150lbs RF, JPI, 316/316L, flange JPI 7S-15	
		A5J	10" 150lbs RF, JPI, 316/316L, flange JPI 7S-15	

Endress+Hauser 33

Accessories

Weather protection cover


A Weather protection cover made of stainless steel is recommended for outdoor mounting (order code: 543199-0001). The shipment includes the protective cover and tension clamp.

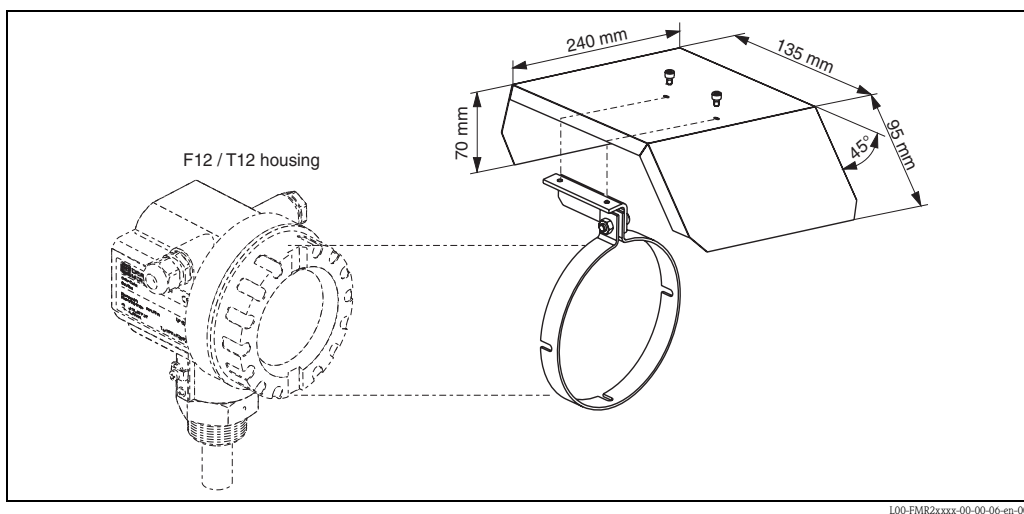

L00-FMR2xxxx-00-00-00-en-001

Sensor alignment tool for alignment device

A sensor alignment tool is recommended to be used at the time of installation for FMR540 with alignment device. Order code: 52026756
For instructions see document KA274F/00/A2.

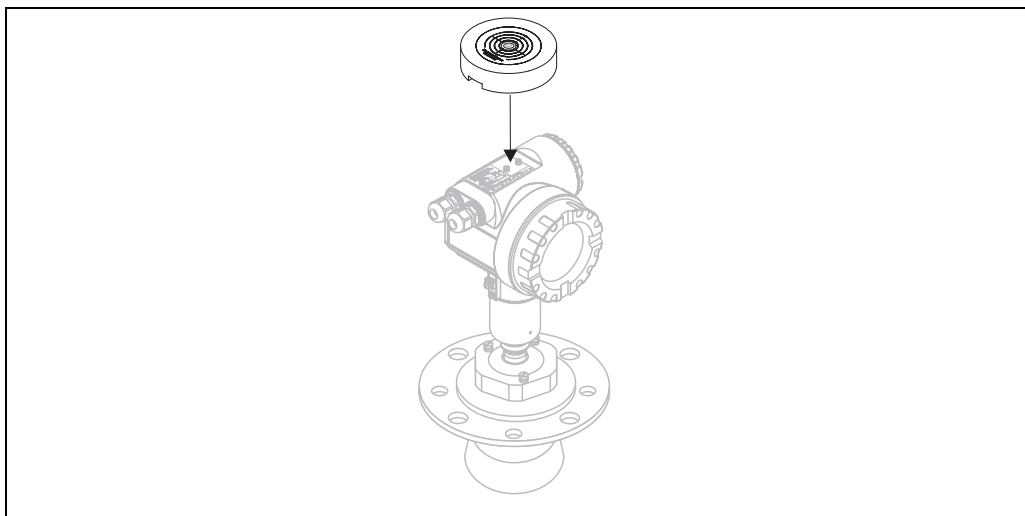

L00-FMR540xx-00-00-00-en-001

Commubox FXA191 HART

For intrinsically safe communication with ToF Tool/FieldCare via the RS232C interface. For details refer to TI237F/00/en.

Commubox FXA195 HART

For intrinsically safe communication with ToF Tool/FieldCare via the USB interface. For details refer to TI404F/00/en.

Commubox FXA291

The Commubox FXA291 connects Endress+Hauser field instruments with CDI interface (= Endress+Hauser Common Data Interface) to the USB interface of a personal computer or a notebook. For details refer to TI405C/07/en.

Note!

For the following Endress+Hauser instruments you need the "ToF Adapter FXA291" as an additional accessory:

- Cerabar S PMC71, PMP7x
- Deltabar S PMD7x, FMD7x
- Deltapilot S FMB70
- Gammapilot M FMG60
- Levelflex M FMP4x
- Micropilot FMR130/FMR131
- Micropilot M FMR2xx
- Micropilot S FMR53x, FMR540
- Prosonic FMU860/861/862
- Prosonic M FMU4x
- Tank Side Monitor NRF590 (with additional adapter cable)

ToF Adapter FXA291

The ToF Adapter FXA291 connects the Commubox FXA291 via the USB interface of a personal computer or a notebook to the following Endress+Hauser instruments:

- Cerabar S PMC71, PMP7x
- Deltabar S PMD7x, FMD7x
- Deltapilot S FMB70
- Gammapilot M FMG60
- Levelflex M FMP4x
- Micropilot FMR130/FMR131
- Micropilot M FMR2xx
- Micropilot S FMR53x, FMR540
- Prosonic FMU860/861/862
- Prosonic M FMU4x
- Tank Side Monitor NRF590 (with additional adapter cable)

For details refer to KA271F/00/a2.

Documentation

Fields of activities	Level Measurement Limit detection and continuous level measurement in liquids and bulk solids, FA001/F/00/en.
-----------------------------	---

Technical Information	Fieldgate FXA320, FXA520 Technical Information for Fieldgate FXA320/520, TI369F/00/en. Tank Side Monitor NRF590 Technical Information for Tank Side Monitor NRF590, TI374F/00/en.
------------------------------	--

Operating Instructions	Operating instructions for FMR540:
-------------------------------	------------------------------------

Instrument	Output	Communication	Operating Instructions	Description of Instrument Functions	Brief Operating Instructions (in the Instrument)
FMR540	A	HART	BA326F/00/en	BA341F/00/en	KA255F/00/A2

Certificates	Safety instructions (XA) and certificates (ZE) for FMR540:
---------------------	--

Instrument	Certificate	Explosion protection	Output	Communication	PTB 00 ATEX	XA	WHG
FMR540	1	ATEX II 1/2 G EEx ia IIC T6	A	HART	2067X	XA338F/00/a3	in preparation
	6	ATEX II 1/2 G EEx ia, WHG					

Control Drawings (ZD) for FMR540:

Instrument	Certificate	Explosion protection	Output	Communication	ZD
FMR540	S	FM IS	A	HART	ZD194F/00/en
	U	CSA IS			ZD196F/00/en

Patents

This product may be protected by at least one of the following patents.
Further patents are pending.

- US 5,387,918 \cong EP 0 535 196
- US 5,689,265 \cong EP 0 626 063
- US 5,659,321
- US 5,614,911 \cong EP 0 670 048
- US 5,594,449 \cong EP 0 676 037
- US 6,047,598
- US 5,880,698
- US 5,926,152
- US 5,969,666
- US 5,948,979
- US 6,054,946
- US 6,087,978
- US 6,014,100

Instruments International

Endress+Hauser
Instruments International AG
Kaegenstrasse 2
4153 Reinach
Switzerland

Tel. +41 61 715 81 00
Fax +41 61 715 25 00
www.endress.com
info@ii.endress.com

Endress+Hauser 

People for Process Automation

