



Remote Panel RP-3000XT for XT family Power Management Controls*


DESCRIPTION

Woodward's RP-3000XT is a touch screen remote control and annunciation panel for use with the XT family power management controls. It is particularly useful with the back panel mounted easYgen-3100XT/3400XT or LS-6XT, providing control from the front panel with greatly reduced wiring to the access door, while keeping high voltage connections located safely on the back panel.

The RP-3000XT offers all the HMI resources that the display variants easYgen-3200XT/3500XT offer with a touch screen technology. Irrespective of the easYgen-3000XT or LS-6XT variants, this compact HMI solution connects to up to 32 XT controls (select and access one device at a time).

The RP-3000XT offers switchgear builders, genset packagers, and system integrators an off-the-shelf HMI option for any application where a secure remote control, monitoring and visualization is desired, such as hospitals, data centers, offshore rigs, landfill and wastewater gas-to-power applications to name a few.


In a paralleling application, the RP-3000XT provides the flexibility to connect one-to-one (each device with own RP-3000XT) or to connect one-to-n (one RP-3000XT for a fleet of devices, accessing one at a time). The communication between the two devices is always through Ethernet.

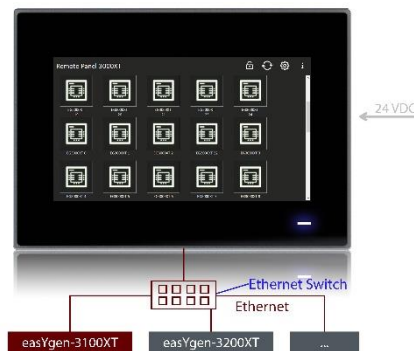

Features

RP-3000XT features help realize following use cases:

- Mounted to the front door and connected with a back panel mounted easYgen-3100XT or easYgen-3400XT or LS-6XT a safe and compact installation
- Installed away from genset room and connected with a front panel mounted easYgen-3200XT or easYgen-3500XT for applications requiring multiple HMIs
- Mounted to the front door and connected to a fleet of XT family controls (up to 32) for cost sensitive and/or space constrained applications
- It is possible to set the remote panel in full mode, annunciator mode or deactivate
- Power ON LED at face plate
- Multi-lingual display capability of the connected controller (RP-3000XT menu in English)

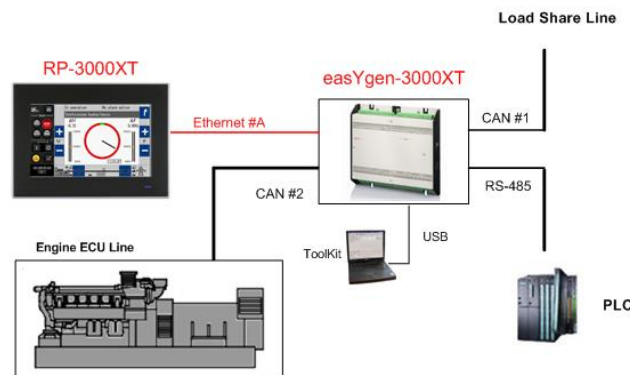

- Plug-and-Play remote operator control panel for:
 1. easYgen 3000XT Series genset controls
 2. easYgen | LS-6XT Series circuit breaker controls
- Use as full mirror of HMI resources, or only for annunciation or turn it completely off
- Multi-Cast function, offers connection to a fleet of controls (one at a time)
- Offers on-the-fly configuration with same security levels as the connected control
- Simplifies wiring to the access door and keeps high voltage connections remote
- Small footprint makes compact installations
- Touch screen and Color display
- Ethernet communication to the connected control
- Multi-lingual Capability
- Personalization by end user
- CE Marked
- UL/cUL Listing

*As of publication of this document, RP-3000XT does not support easYgen | GC-3000XT

SPECIFICATIONS

Power supply 24 Vdc ± 20%
 Intrinsic consumption typical 9 W
 Ambient temperature (operation).....-20 to 60 °C (-4 to 140 °F)
 Ambient temperature (storage).....-30 to 70 °C (-22 to 158 °F)
 Ambient humidity10 to 90% RH@40 °C, non-condensing

Housing Front panel mounting PC plus ABS
 (with die-cast aluminum alloy front bezel)

Dimensions WxHxD 205 x 146.9 x 46 mm
 Front cutout WxH 192 x 138.5 mm
 Frontinsulating surface
 Weight approx. 1.2 kg
 Sealing Front..... IP66 (with clamp fastening)
 Connection (power supply).....screw/plug terminals 2.5 mm²
 Interface (others not to be used) Ethernet

System Hardware

CPU RISC processor with 32 bits
 600 MHz (ARM® Cortex™-AB)
 Backup Memory.....FRAM 128 KB
 Memory..... DDR3L 512 MB on board
 Storage.....8GB eMMC on board
 Power-On LED bar

Software

Operating System..... Linux
 Woodward ApplicationAuto-start software to connect to
 an easYgen-3000XT or LS-6XT for
 remote control via Ethernet

Display

Type.....WSVGA TFT LCD
 Size.....177.8 mm (7")
 Max. Resolution.....1024 x 600
 Max. Colors.....16.7M
 Luminance (cd/m²).....400
 Viewing Angle (H/V)170/170
 Backlight LifeLED; 50,000 h
 Brightness adjustable yes
 Contrast Ratio.....800:1


Touch Screen

Life span36 million touches
 at 7 mm diameter finger point through silicone rubber
 bearing at least 250 g two times per second
 Light Transmission Above 85%
 Type..... Projected capacitive (P-CAP) touch
 Vibration protection Operating, random vibration 2 Grms (5 to 500 Hz)
Disturbance test (CE).....tested according to applicable EN guidelines
Listings CE, BSML, CCC, UL, FCC Class A

DIMENSIONS

Plastic housing with metal frame for front panel mounting

Dimensions in mm
 Panel cut out: 192 x 138.5
 (7.56 x 5.45 in)

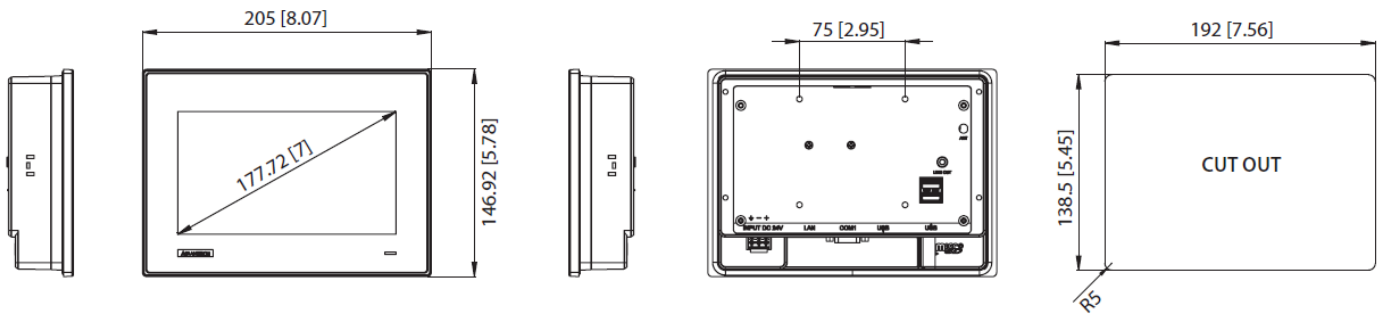

TERMINAL DIAGRAM




- 1 Power supply
- 2 Ethernet Interface

Other interfaces not used for this application!

Power supply terminal (1):

Low voltage / Limited Energy power source

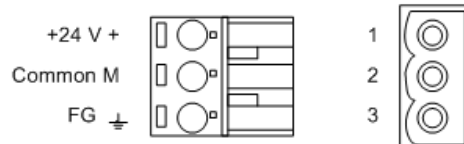

REMOTE CONTROL AND CONNECTION

The RP-3000XT IP address must be configured to be in the same Ethernet network as the XT controller.

After boot-up sequence the panel lands on MULTICAST screen. This screen presents all the devices in the current network by an icon. Under the icon toggles the device IP address and a customizable device name. Touch the device you wish to connect to: the HOME screen of the selected device appears (Figure 3).

A settings screen is provided for customizing the behavior according to your use cases see figure 2. The RP-XT Ethernet network settings can be adjusted from this screen.

The MULTICAST screen presents all the XT controls in the same network.

The SETTINGS screen allows customization.



Figure 1: **MULTICAST** screen with

- 1) Lock touch screen for cleaning
- 2) Refresh network overview
- 3) Open SETTINGS screen
- 4) Device icon and (alternating) name/IP address (green: last connected)
- 5) Scroll bar to navigate when #device > 15

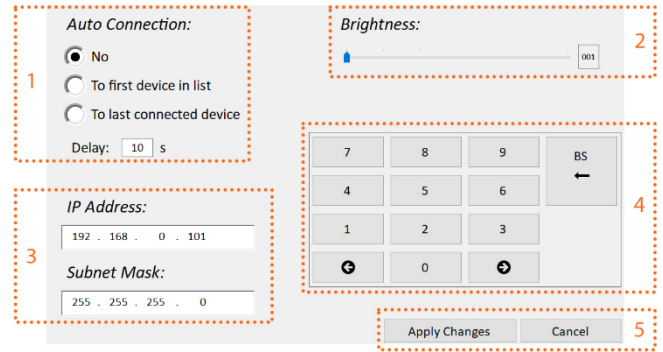


Figure 2: **SETTINGS** screen with

- 1) Auto re-connect settings. Also, Delay(s) defines the time RP-3000XT is waiting before auto re-connecting to the selected device
- 2) Brightness status and settings icons to reduce / increase brightness
- 3) IP address and subnet mask of the RP-3000XT. By selecting these and using the keypad in group 4, these values can be changed
- 4) keypad to enter/navigate when inputting IP addresses or delay time. The arrows allow to jump between IP and subnet fields, the BS-arrow is a backspace function to delete an entered digit
- 5) "these two buttons allow to accept or cancel made settings. If accepted, the settings are applied immediately. After pressing one of these buttons, and the system will jump into the multicast screen

... and the **HOME** screen mirrors the easYgen-XT HMI and front panel buttons:

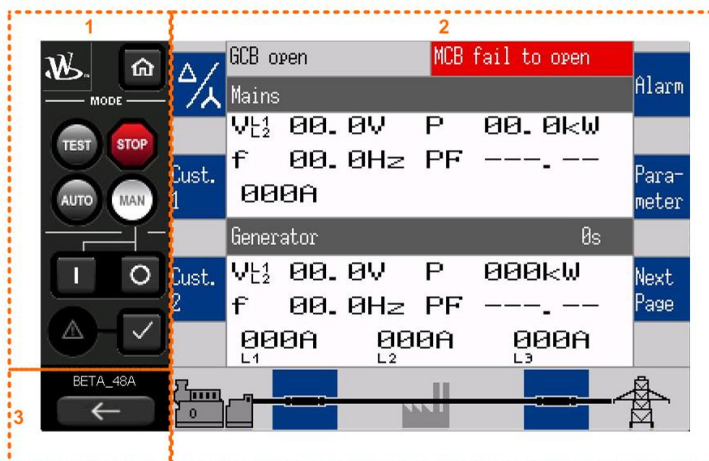


Figure 3: **HOME** screen with

- 1) Simulated easYgen-XT front panel buttons
- 2) Mirrored easYgen-XT HMI screen with active soft buttons
- 3) IP address/device name of the connected easYgen-XT and back button to the MULTICAST screen

CONTACT

North & Central America
Tel.: +1 (208) 278 3370

South America
Tel.: +55 19 3708 4800

Europe
Tel.: +49 711 78954 510

Middle East & Africa
Tel.: +971 (2) 678 4424

Russia
Tel.: +49 711 78954-515

China
Tel.: +86 512 8818 5515

India
Tel.: +91 124 4399 500

ASEAN & Oceania
Tel.: +49 711 78954 510

SALES SUPPORT

✉ industrial.salesPG@woodward.com

TECHNICAL SUPPORT

✉ industrial.support@woodward.com

www.woodward.com

Subject to alterations, errors excepted.

Subject to technical modifications.

This document is distributed for informational purposes only. It is not to be construed as creating or becoming part of any Woodward Company contractual or warranty obligation unless expressly stated in a written sales contract.


We appreciate your comments about the content of our publications. Please send comments including the document number below to stgt-doc@woodward.com

© **Woodward**
All Rights Reserved

For more information contact:

37594E - 2021/03/Stuttgart

FEATURES OVERVIEW

		Model	RP-3000XT
HMI			
Projected capacitive (P-CAP) touch screen			✓
Color display			✓
Power ON LED bar			✓
Personalization (Boot-up Screen & Logo)			See application note #37929
I/Os			
Ethernet			1
Remote Terminal Control			
Based on VNC			✓
Supports easYgen-3000XT series genset controls			✓
Supports easYgen LS-6XT			✓
Listings/Approvals			
UL / cUL Listing			✓
FCC			Class A
CE Marked			✓
Hardware		P/N:	
Plastic housing with Die-cast aluminum alloy front bezel and display (front panel mounting)			8446-1068
Spare part: Mounting KIT (clamp set for panel mount, delivered with the unit for fastening)			8923-2292

Related Products

- Genset control **easYgen-3100XT/3200XT-P1** Product Specification (# 37582)
- Genset control **easYgen-3400XT/3500XT-P1/P2** Product Specification (# 37583)
- Circuit breaker control **easYgen | LS-6XT** Product Specification (# 37913)

Product Documentation

- Remote panel **RP-3000XT** Technical Manual (# 37928)
- Genset control **easYgen-3100XT/3200XT-P1** Technical Manual (# 37574)
- Genset control **easYgen-3400XT/3500XT-P1** Technical Manual (# 37580)
- Genset control **easYgen-3400XT/3500XT-P2** Technical Manual (# 37581)
- Circuit breaker control **easYgen | LS-6XT** Technical Manual (# 37914)

ТОВ " ТЕХНОЕЛЕКТРО "

61166, м.Харків, пр.Науки, 40, к.530а.

тел.: (067) 376-84-96, (099) 184-62-14, (050) 302-90-33

Viber, WhatsApp, Telegram: +38-099-184-62-14

e-mail: info@tekhar.com , URL: www.tekhar.com skype:

alex19749