

# Protection Equipment

## Introduction

### Overview



Type	3RV20	3RV21	3RV23	3RV24	3RV27	3RV28
<b>SIRIUS 3RV2 motor starter protectors/circuit breakers</b>						
<b>Applications</b>						
• System protection	✓ <sup>1)</sup>	✓ <sup>1)</sup>	--	--	✓	✓
• Motor protection	✓	--	--	--	--	--
• Motor protection with overload relay function	--	✓	--	--	--	--
• Starter combinations	--	--	✓	--	--	--
• Transformer protection	--	--	--	✓	✓	✓
<b>Size</b>	S00, S0, S2, S3	S00, S0, S2, S3	S00, S0, S2, S3	S00, S0, S2	S00, S0, S3	S00, S0
<b>Rated current <math>I_n</math></b>						
• Size S00	A Up to 16	Up to 16	Up to 16	Up to 16	Up to 15	Up to 15
• Size S0	A Up to 40	Up to 32	Up to 40	Up to 25	Up to 22	Up to 22
• Size S2	A Up to 80	Up to 80	Up to 80	Up to 65	--	--
• Size S3	A Up to 100	Up to 100	Up to 100	--	Up to 70	--
<b>Rated operational voltage <math>U_e</math> acc. to IEC</b>	V 690 AC <sup>2)</sup>	690 AC <sup>2)</sup>	690 AC <sup>2)</sup>	690 AC <sup>2)</sup>	690 AC	690 AC
<b>Rated frequency</b>	Hz 50/60	50/60	50/60	50/60	50/60	50/60
<b>Trip class</b>	CLASS 10 (S00 ... S3), CLASS 20 (S2, S3)	CLASS 10	--	CLASS 10	--	--
<b>Thermal overload releases</b>	A 0.11 ... 0.16 to 80 ... 100	0.11 ... 0.16 to 80 ... 100	None <sup>3)</sup>	0.11 ... 0.16 to 54 ... 65	0.16 ... 70 Non-adjustable	0.16 to 22 Non-adjustable
<b>Electronic releases</b>						
A multiple of the rated current	13 times	13 times	13 times	20 times	13 times	20 times
<b>Short-circuit breaking capacity <math>I_{cu}</math> at 400 V AC</b>	kA 20/55/65/100	55/65/100	20/55/65/100	55/65/100	4)	4)
<b>Pages</b>	7/28 ... 7/30	7/34	7/36, 7/37	7/38	7/39	7/40


### Accessories

For sizes	S00	S0	S2	S3	S00	S0	S2	S3	S00	S0	S2	S3	S00	S0	S2	S00	S0	S3	S00	S0
Auxiliary switches	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓ <sup>5)</sup>	✓	✓
Signaling switches	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	--	--	--	--	--
Undervoltage releases	✓	✓	✓	✓	--	--	--	--	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Shunt releases	✓	✓	✓	✓	--	--	--	--	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Isolator modules	✓	✓	✓	--	✓	✓	✓	--	✓	✓	✓	--	✓	✓	✓	--	--	--	--	--
Insulated three-phase busbar system	✓	✓	✓	--	--	--	--	--	✓	✓	✓	--	✓	✓	✓	--	--	--	--	--
Busbar adapters	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	--
Door-coupling rotary operating mechanisms	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Link modules	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	--	--	--	--	--
Enclosures for surface mounting	✓	✓	✓	--	✓	✓	✓	--	✓	✓	✓	--	✓	✓	✓	--	--	--	--	--
Enclosures for flush mounting	✓	✓	--	--	✓	✓	--	--	✓	✓	--	--	✓	✓	--	--	--	--	--	--
Front plates	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	--	--	--	--	--
Infeed system	✓	✓	--	--	--	--	--	--	✓	✓	--	--	✓	✓	--	--	--	--	--	--
Sealable scale covers for setting knobs	✓	✓	✓	✓	✓	✓	✓	✓	--	--	--	--	✓	✓	✓	--	--	--	--	--
Remote motorized operating mechanisms	--	--	--	✓	--	--	--	✓	--	--	--	✓	--	--	--	--	--	--	--	--

**Pages** 7/41 ... 7/63

- ✓ Has this function or can use this accessory  
 -- Does not have this function or cannot use this accessory

- 1) For symmetrical loading of the three phases.  
 2) With molded-plastic enclosure 500 V AC. For DC applications, see "Technical specifications" → "DC short-circuit breaking capacity", page 7/19.  
 3) For overload protection of the motors, appropriate overload relays must be used.  
 4) According to UL 489 at 480 Y/277 V AC: 65 kA or 50 kA.  
 5) Only lateral auxiliary switches can be used

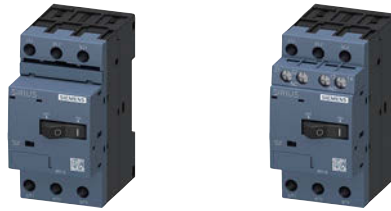

Type	3RV1611-0BD10	3RV1611-1.G14
<b>SIRIUS 3RV1 motor starter protectors/circuit breakers</b>		
<b>Applications</b>		
• System protection	--	--
• Motor protection	--	--
• Motor protection with overload relay function	--	--
• Starter combinations	--	--
• Transformer protection	--	--
• Fuse monitoring	✓	--
• Voltage transformer circuit breakers for distance protection	--	✓
<b>Size</b>	S00	S00
<b>Rated current <math>I_n</math></b>		
• Size S00	0.2	Up to 3
<b>Rated operational voltage <math>U_e</math> acc. to IEC</b>	690 AC <sup>1)</sup>	400 AC
<b>Rated frequency</b>	50/60	16 <sup>2</sup> / <sub>3</sub> ... 60
<b>Trip class</b>	--	--
<b>Thermal overload releases</b>	0.2	1.4 ... 3
<b>Electronic releases</b> A multiple of the rated current	6 times	4 ... 7 times
<b>Short-circuit breaking capacity <math>I_{cu}</math> at 400 V AC</b>	100	50
<b>Pages</b>	7/64	7/65
<b>Accessories</b>		
<b>For sizes</b>	S00	S00
<b>Pages</b>	7/64, 7/65	

- ✓ Has this function or can use this accessory  
 -- Does not have this function or cannot use this accessory

<sup>1)</sup> With molded-plastic enclosure 500 V AC. For DC applications, see "Technical specifications" → "DC short-circuit breaking capacity", page 7/20.

# Protection Equipment

## Introduction



Type	3RV10				3RV13					
<b>SIRIUS 3RV1 molded case motor starter protectors</b>										
<b>Applications</b>										
• Motor protection	✓				--					
• Starter combinations	--				✓					
<b>Switching capacity</b>	Standard switching capacity				Standard switching capacity					Increased switching capacity
<b>Type</b>	3RV1063	3RV1073	3RV1083	3RV1353	3RV1363	3RV1373	3RV1383	3RV1364	3RV1374	
<b>Rated current <math>I_n</math></b>	A 100 ... 200	400	630	1 ... 32	100 ... 250	400, 630	630, 800	100 ... 250	400	
<b>Rated operational voltage <math>U_e</math> acc. to IEC</b>	690 AC				690 AC					
<b>Rated frequency</b>	Hz 50/60				50/60					
<b>Trip class</b>	CLASS 10A, 10, 20, 30				-- <sup>1)</sup>					
<b>Thermal overload releases</b>	A 40 ... 100 to A 252 ... 630				without <sup>1)</sup>					
<b>Electronic releases</b> A multiple of the rated current	Adjustable, 6 ... 13 times				Non-adjustable 1 ... 12.5 A: 13 times; Adjustable 20 A, 32 A: 6 ... 12 times		1 ... 10 times			
<b>Short-circuit breaking capacity <math>I_{cu}</math> at 400 V AC</b>	kA 120	120	100	85	120	120	100	200	200	
<b>Trip unit (release)</b>	TU 4				TU 1: 1 ... 12.5 A; TU 2: 20 A, 32 A		TU 3			
<b>Pages</b>	7/71				7/72					

<b>Accessories</b>									
<b>For molded case motor starter protectors</b>	3RV1063	3RV1073	3RV1083	3RV1353	3RV1363	3RV1373	3RV1383	3RV1364	3RV1374
Auxiliary switches	✓	✓	✓	✓	✓	✓	✓	✓	✓
Undervoltage releases	✓	✓	✓	✓	✓	✓	✓	✓	✓
Shunt releases	✓	✓	✓	✓	✓	✓	✓	✓	✓
Rotary operating mechanisms	✓	✓	✓	✓	✓	✓	✓	✓	✓
<b>Connection methods</b>									
• Extended terminals on the front	✓	✓	--	✓	✓	✓	--	✓	✓
• Cable terminals on the front	✓	✓	✓	✓	✓	✓	✓	✓	✓
• Rear terminals	✓	✓	✓	✓	✓	✓	✓	✓	✓
<b>Pages</b>	7/73, 7/74								

✓ Has this function or can use this accessory

-- Does not have this function or cannot use this accessory

<sup>1)</sup> For overload protection of the motors, appropriate overload relays must be used.



**Thermal overload relays  
for standard applications**  
**3RU21**

**Electronic overload relays  
for standard applications**  
**3RB30**

**3RB31**

Type

### SIRIUS overload relays

#### Applications

• System protection	✓ <sup>1)</sup>	✓ <sup>1)</sup>	✓ <sup>1)</sup>
• Motor protection	✓	✓	✓
• Alternating current, three-phase	✓	✓	✓
• Alternating current, single-phase	✓	--	--
• Direct current	✓	--	--
<b>Size contactor</b>	S00, S0, S2, S3	S00, S0, S2, S3	S00, S0, S2, S3
<b>Rated operational current <math>I_e</math></b>			
• Size S00	A Up to 16	Up to 16	Up to 16
• Size S0	A Up to 40	Up to 40	Up to 40
• Size S2	A Up to 80	Up to 80	Up to 80
• Size S3	A Up to 100	Up to 115	Up to 115
<b>Rated operational voltage <math>U_e</math></b>	V 690 AC	690 AC	690 AC
<b>Rated frequency</b>	Hz 50/60	50/60	50/60
<b>Trip class</b>	CLASS 10, 10A	CLASS 10E, 20E	CLASS 5E, 10E, 20E, 30E (adjustable)
<b>Thermal overload releases</b>	A 0.11 ... 0.16 to A 80 ... 100	--	--
<b>Electronic overload releases</b>	A -- A --	0.1 ... 0.4 to 32 ... 115	0.1 ... 0.4 to 32 ... 115
<b>Pages</b>	7/88 ... 7/91	7/101, 7/102	7/103

#### Accessories

For sizes	S00	S0	S2	S3	S00	S0	S2	S3	S00	S0	S2	S3
Terminal supports for stand-alone installation	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Mechanical RESET	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Cable releases for RESET	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Electrical remote RESET	✓	✓	✓	✓	--	--	--	--	Integrated in the unit			
Terminal covers												
• For box terminals	--	--	✓	✓	--	--	✓	✓	--	--	✓	✓
Sealable covers for setting knobs	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
<b>Pages</b>	7/92, 7/93				7/104, 7/105				7/104, 7/105			

✓ Has this function or can use this accessory

-- Does not have this function or cannot use this accessory

<sup>1)</sup> The units are responsible in the main circuit for overload protection of the assigned electrical loads (e.g. motors), feeder cable, and other switching and protection devices in the respective load feeder.

# Protection Equipment

## Introduction



	Electronic overload relays									
	for standard applications		for high-feature applications							
Type	3RB20	3RB21	3RB22, 3RB23	Electronic overload relays for IO-Link applications 3RB24						
<b>SIRIUS overload relays</b>										
<b>Applications</b>										
• System protection	✓ <sup>1)</sup>	✓ <sup>1)</sup>	✓ <sup>1)</sup>							
• Motor protection	✓	✓	✓							
• Alternating current, three-phase	✓	✓	✓							
• Alternating current, single-phase	--	--	✓							
• Direct current	--	--	--							
<b>Size contactor</b>										
	S3 ... S12	S3 ... S12	S00 ... S12							
<b>Rated operational current <math>I_e</math></b>										
• Sizes S00 and S0	--	--	Up to 25 and 45 mm width with current measuring modules 3RB2906-2BG1/3RB2906-2DG1							
• Size S2	--	--	Up to 100 and 55 mm width with current measuring module 3RB2906-2JG1							
• Size S3	--	--								
• Size S6	Up to 200	Up to 200	Up to 200 and 120 mm width with current measuring modules 3RB2956-2TH2/3RB2956-2TG2							
• Size S10/S12	Up to 630	Up to 630	Up to 630 and 145 mm width with current measuring module 3RB2966-2WH2							
• Size 14 (3TF68/3TF69)	Up to 630	Up to 630	Up to 820 with current measuring module 3RB2906-2BG1 and transformer 3UF1868-3GA00							
<b>Rated operational voltage <math>U_e</math></b>										
	690/1 000 AC	690/1 000 AC	690/1 000 AC <sup>2)</sup>							
<b>Rated frequency</b>										
	50/60	50/60	50/60							
<b>Trip class</b>										
	CLASS 10, 20	CLASS 5, 10, 20, 30 adjustable	CLASS 5, 10, 20, 30 adjustable							
<b>Thermal overload releases</b>										
	--	--	--							
<b>Electronic overload releases</b>										
	50 ... 200 to 160 ... 630	50 ... 200 to 160 ... 630	0.3 ... 3 to 63 ... 630							
<b>Pages</b>										
	7/113, 7/114	7/115	7/124, 7/125, 7/136	7/132, 7/136						
<b>Accessories</b>										
<b>For sizes</b>										
	S6	S10/S12	S6	S10/S12	S00	S0	S2	S3	S6	S10/S12
Terminal supports for stand-alone installation	3)	3)	3)	3)	3)	3)	3)	3)	3)	3)
Mechanical RESET	✓	✓	✓	✓	--	--	--	--	--	--
Cable releases for RESET	✓	✓	✓	✓	--	--	--	--	--	--
Electrical remote RESET	--	--	Integrated in the unit		Integrated in the unit					
Terminal covers	✓	✓	✓	✓	--	--	--	✓	✓	✓
Sealable covers for setting knobs	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Operator panel for 3RB24 evaluation module	--	--	--	--	✓	✓	✓	✓	✓	✓
<b>Pages</b>										
	7/116, 7/117	7/116, 7/117	7/136 ... 7/138							

✓ Has this function or can use this accessory  
 -- Does not have this function or cannot use this accessory

- <sup>1)</sup> The units are responsible in the main circuit for overload protection of the assigned electrical loads (e.g. motors), feeder cable, and other switching and protection devices in the respective load feeder.  
<sup>2)</sup> With reference to the 3RB29.6 current measuring modules.  
<sup>3)</sup> Stand-alone installation without accessories is possible.

## Motor Starter Protectors/Circuit Breakers

### SIRIUS 3RV2 Motor Starter Protectors/Circuit Breakers

General data

#### Overview


##### More information

Homepage, see [www.siemens.com/sirius-circuit-breaker](http://www.siemens.com/sirius-circuit-breaker)  
 Industry Mall, see [www.siemens.com/product?3RV2](http://www.siemens.com/product?3RV2)  
 TIA Selection Tool Cloud (TST Cloud), see <https://mall.industry.siemens.com/spice/TSTWeb?kmat=MotorStarterProtector>  
 Conversion tool, e.g. from 3RV1 to 3RV2, see [www.siemens.com/sirius/conversion-tool](http://www.siemens.com/sirius/conversion-tool)

Application Manual "Controls with IE3/IE4 Motors", see <https://support.industry.siemens.com/cs/ww/en/view/94770820>  
 System Manual "SIRIUS Modular System – System Overview", see <https://support.industry.siemens.com/cs/ww/en/view/60311318>  
 Manual "SIRIUS – SIRIUS 3RV Motor Starter Protectors/Circuit Breakers", see <https://support.industry.siemens.com/cs/ww/en/view/60279172>  
 Certificates, see <https://support.industry.siemens.com/cs/ww/en/ps/16245/cert>

The following illustration shows 3RV2 motor starter protectors/circuit breakers with the accessories which can be mounted for the sizes S00 to S3, see also "Introduction" → "Overview", page 7/2.

Accessories, see page 7/41 onwards.

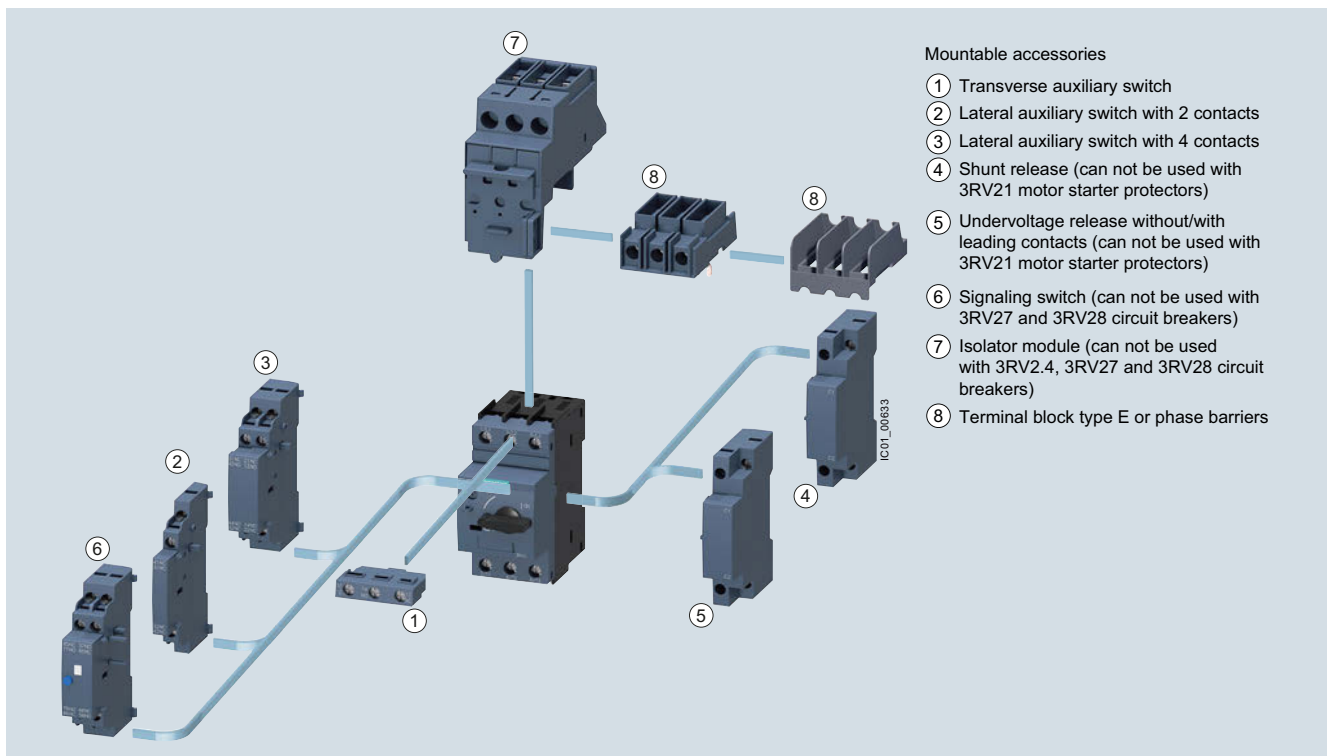

##### Mountable accessories

- ① Transverse auxiliary switch
- ② Lateral auxiliary switch with 2 contacts
- ③ Lateral auxiliary switch with 4 contacts
- ④ Shunt release (can not be used with 3RV21 motor starter protectors)
- ⑤ Undervoltage release without/with leading contacts (can not be used with 3RV21 motor starter protectors)
- ⑥ Signaling switch (can not be used with 3RV27 and 3RV28 circuit breakers)
- ⑦ Isolator module (can not be used with 3RV2.4, 3RV27 and 3RV28 circuit breakers)
- ⑧ Terminal block type E or phase barriers

Mountable accessories for SIRIUS 3RV2 motor starter protectors/circuit breakers



SIRIUS motor starter protector with spring-type terminals, size S0 (left) and SIRIUS motor starter protector with screw terminals, size S00 (right)

The SIRIUS 3RV2 motor starter protectors/circuit breakers are compact, current limiting motor starter protectors/circuit breakers which are optimized for load feeders. The motor starter protectors/circuit breakers are used for switching and protecting three-phase motors of up to 55/45 kW at 400 V AC and for other loads with rated currents of up to 100 A.

The new 3RV2 motor starter protectors/circuit breakers are usually approved according to IEC and UL/CSA. According to UL 508/UL 60947-4-1, the 3RV2 motor starter protectors/circuit breakers in sizes S00 to S3 are approved as:

- "Manual Motor Controllers"
- "Manual Motor Controllers" for "Group Installations"
- "Manual Motor Controllers Suitable for Tab Conductor Protection in Group Installations"
- "Self-Protected Combination Motor Controllers (Type E)"  
Please note that for this approval the 3RV2 motor starter protectors must be equipped with additional infeed terminals or phase barriers. For more information, see "Accessories" on page 7/49.

Corresponding short-circuit values, see pages 7/10 to 7/18.

The 3RV27 and 3RV28 are approved as circuit breakers according to UL 489; they are a special version of the 3RV2 motor starter protectors.

## Motor Starter Protectors/Circuit Breakers

### SIRIUS 3RV2 Motor Starter Protectors/Circuit Breakers

#### General data

##### Type of construction

The 3RV2 motor starter protectors are available in four sizes:

- Size S00 – width 45 mm, max. rated current 16 A, at 400 V AC suitable for three-phase motors up to 7.5 kW
- Size S0 – width 45 mm, max. rated current 40 A, at 400 V AC suitable for three-phase motors up to 18.5 kW
- Size S2 – width 55 mm, max. rated current 80 A, at 400 V AC suitable for three-phase motors up to 37 kW
- Size S3 – width 70 mm, max. rated current 100 A, at 400 V AC suitable for three-phase motors up to 45/55 kW

##### Circuit breakers acc. to UL 489

The 3RV27 and 3RV28 circuit breakers are available in two or three sizes:

- Size S00 – width 45 mm, max. rated current 15 A, for 480 Y/277 V AC
- Size S0 – width 45 mm, max. rated current 22 A, for 480 Y/277 V AC
- Size S3 – width 70 mm, max. rated current 70 A, for 480 Y/277 V AC

##### Connection methods

The 3RV2 motor starter protectors/circuit breakers can be supplied with screw terminals and spring-type terminals.



Screw terminals



Spring-type terminals

The terminals are indicated in the corresponding tables by the symbols shown on orange backgrounds.

##### Use in hazardous areas

The 3RV20 motor starter protectors for motor protection in sizes S00, S0, S2 and S3 have certification in accordance with both the European explosion protection directive ATEX and the international explosion protection standard (IECEx).

In accordance with the European directive (ATEX), the 3RV20 are able to switch and protect explosion-proof motors of type of protection "Increased Safety EEx e".

In accordance with the international guideline (IECEx), the 3RV20 are able to switch and protect motors of the types "Increased Safety Ex e" or "Flameproof enclosure Ex d".

#### Article No. scheme

Product versions	Article number
<b>Motor starter protectors/circuit breakers</b>	<b>3RV2</b> □ □ □ - □ □ □ □ □ - □ □ □ □
Type of motor starter protector/ circuit breaker	e.g. 0 = for motor protection/system protection □
Size	e.g. 1 = 16 A (7.5 kW) for size S00 □
Breaking capacity	e.g. 1 = standard switching capacity □
Setting range for overload release	e.g. 1A = 1.1 ... 1.6 A □ □
Trip class (CLASS)	e.g. A = a (adjustable CLASS 10) / n (13 or 20 x I <sub>n</sub> ) □
Connection methods	e.g. 1 = screw terminals □
With or without auxiliary switch	e.g. 0 = without □
Special versions	□ □ □ □
Example	<b>3RV2 0 1 1 - 1 A A 1 0</b>

##### Note:

The Article No. scheme shows an overview of product versions for better understanding of the logic behind the article numbers.

For your orders please use the article numbers quoted in the selection and ordering data.

# Motor Starter Protectors/Circuit Breakers

## SIRIUS 3RV2 Motor Starter Protectors/Circuit Breakers

General data

### Application

#### Operating conditions

3RV2 motor starter protectors/circuit breakers are suitable for use in any climate. They are intended for use in enclosed rooms in which no severe operating conditions (such as dust, caustic vapors, hazardous gases) prevail. When installed in dusty and damp areas, suitable enclosures must be provided.

3RV2 motor starter protectors/circuit breakers can optionally be fed from the top or from below.

The permissible ambient temperatures, the maximum switching capacities, the tripping currents and other boundary conditions can be found in the technical specifications and tripping characteristics, [see Manual](#).

3RV2 motor starter protectors/circuit breakers are suitable for operation in IT systems (IT networks). In this case, the different short-circuit breaking capacity in the IT system must be taken into account, [see page 7/12](#).

Since operational currents, starting currents and current peaks are different even for motors with identical power ratings due to the inrush current, the motor ratings in the selection tables are only guide values. The specific rated and startup data of the motor to be protected is always paramount to the choice of the most suitable motor starter protector/circuit breaker. This also applies to motor starter protectors for transformer protection.

#### Possible uses

The 3RV motor starter protectors/circuit breakers can be used:

- For short-circuit protection
- For motor protection (also with overload relay function)
- For system protection
- For short-circuit protection for starter combinations
- For transformer protection
- As main and EMERGENCY-STOP switches
- For operation in IT systems (IT networks)
- For switching of DC currents
- In areas subject to explosion hazard (ATEX)
- As circuit breakers according to UL 489 (3RV27 and 3RV28)
- For fuse monitoring
- For distance protection

Special versions of 3RV2 motor starter protectors/circuit breakers can be used for low ambient temperatures down to -50°C or also for system protection. More detailed information is available on request.

#### **Use of SIRIUS protection devices in conjunction with IE3/IE4 motors**

##### Note:

For the use of 3RV2 motor starter protectors/circuit breakers in conjunction with highly energy-efficient IE3/IE4 motors, please observe the information on dimensioning and configuring, [see Application Manual](#).

For more information, [see page 1/7](#).



# Motor Starter Protectors/Circuit Breakers

## SIRIUS 3RV2 Motor Starter Protectors/Circuit Breakers

### General data

### Technical specifications

#### More information

System Manual "SIRIUS Modular System – System Overview", see <https://support.industry.siemens.com/cs/ww/en/view/60311318>  
 Configuration Manual "Load feeders – Configuring the SIRIUS Modular System", see <https://support.industry.siemens.com/cs/ww/en/view/39714188>

Manual "SIRIUS – SIRIUS 3RV Motor Starter Protectors/Circuit Breakers", see <https://support.industry.siemens.com/cs/ww/en/view/60279172>

For Technical data, see <https://support.industry.siemens.com/cs/ww/en/ps/16245/td>

For UL reports of the individual devices, see [www.siemens.com/sirius/manuals](http://www.siemens.com/sirius/manuals)

#### Short-circuit breaking capacity $I_{cu}$ , $I_{cs}$ according to IEC 60947-2

The table shows the rated ultimate short-circuit breaking capacity  $I_{cu}$  and the rated service short-circuit breaking capacity  $I_{cs}$  of the 3RV2 motor starter protectors/circuit breakers with different operational voltages dependent on the rated current  $I_n$  of the motor starter protectors/circuit breakers.

Power can be supplied to the motor starter protectors/circuit breakers via the terminals at the top or at the bottom without restricting the rated data. If the short-circuit current at the place of installation exceeds the rated short-circuit breaking capacity of the motor starter protector/circuit breaker as specified in the table, a back-up fuse is required. It is also possible to install an

upstream motor starter protector/circuit breaker with a limiter function.

The maximum rated current of this back-up fuse is indicated in the tables. The rated ultimate short-circuit breaking capacity then applies as specified on the fuse.

#### Fuseless design

Motor starter protector/contactors assemblies for short-circuit currents up to 150 kA can be ordered as 3RA2 fuseless load feeders, see page 8/4 onwards.

Motor starter protectors/circuit breakers	Rated current $I_n$	Up to 240 V AC <sup>1)</sup>			Up to 400 V AC <sup>1)/</sup> 415 V AC <sup>2)</sup>			Up to 440 V AC <sup>1)/</sup> 460 V AC <sup>2)</sup>			Up to 500 V AC <sup>1)/</sup> 525 V AC <sup>2)</sup>			Up to 690 V AC <sup>1)</sup>		
		$I_{cu}$	$I_{cs}$	Max. fuse (gG)	$I_{cu}$	$I_{cs}$	Max. fuse (gG) <sup>3)</sup>	$I_{cu}$	$I_{cs}$	Max. fuse (gG) <sup>3)</sup>	$I_{cu}$	$I_{cs}$	Max. fuse (gG) <sup>3)</sup>	$I_{cu}$	$I_{cs}$	Max. fuse (gG) <sup>3/4)</sup>
Type	A	kA	kA	A	kA	kA	A	kA	kA	A	kA	kA	A	kA	kA	A
<b>Size S00</b>																
<b>3RV2.11</b>	0.16 ... 1.6	100	100	--	100	100	--	100	100	--	100	100	--	100	100	--
	2; 2.5	100	100	--	100	100	--	100	100	--	100	100	--	10	10	25
	3.2	100	100	--	100	100	--	100	100	--	100	100	--	10	10	32
	4; 5	100	100	--	100	100	--	100	100	--	100	100	--	6	4	32
	6.3	100	100	--	100	100	--	100	100	--	100	100	--	6	4	50
	8	100	100	--	100	100	--	50	50	63	42	42	63	6	4	50
	10	100	100	--	100	100	--	50	50	80	42	42	63	6	4	50
	12.5	100	100	--	100	100	--	50	50	80	42	42	80	6	4	63
	16	100	100	--	55	30	100	50	12.5	80	10	5	80	4	4	63
<b>3RV1611-0BD10</b>	0.2	100	100	--	100	100	--	100	100	--	100	100	--	100	100	--
<b>Size S0</b>																
<b>3RV2.21</b>	0.16 ... 1.6	100	100	--	100	100	--	100	100	--	100	100	--	100	100	--
	2; 2.5	100	100	--	100	100	--	100	100	--	100	100	--	10	10	25
	3.2	100	100	--	100	100	--	100	100	--	100	100	--	10	10	32
	4; 5	100	100	--	100	100	--	100	100	--	100	100	--	6	4	32
	6.3	100	100	--	100	100	--	100	100	--	100	100	--	6	4	50
	8	100	100	--	100	100	--	50	50	63	42	42	63	6	4	50
	10	100	100	--	100	100	--	50	50	80	42	42	63	6	4	50
	12.5	100	100	--	100	100	--	50	50	80	42	42	80	6	4	63
	16	100	100	--	55	25	100	50	12.5	80	10	5	80	4	2	63
	20	100	100	--	55	25	125	50	10	80	10	5	80	4	2	63
	22; 25	100	100	--	55	25	125	50	10	100	10	5	80	4	2	63
	28; 32	100	100	--	55	25	125	30	10	125	10	5	100	4	2	100
	36; 40	100	100	--	20	10	125	12	8	125	6	3	100	3	2	100

-- No back-up fuse required, since short-circuit resistant up to 100 kA

1) 10 % overvoltage.

2) 5 % overvoltage.

3) Back-up fuse only required if short-circuit current at the place of installation is  $> I_{cu}$ .

4) Alternatively, fuseless limiter combinations for 690 V AC can also be used.

## Motor Starter Protectors/Circuit Breakers

### SIRIUS 3RV2 Motor Starter Protectors/Circuit Breakers

#### General data

Motor starter protectors/ circuit breakers	Rated current $I_n$	Up to 240 V AC <sup>1)</sup>			Up to 400 V AC <sup>1)/</sup> 415 V AC <sup>2)</sup>			Up to 440 V AC <sup>1)/</sup> 460 V AC <sup>2)</sup>			Up to 500 V AC <sup>1)/</sup> 525 V AC <sup>2)</sup>			Up to 690 V AC <sup>1)</sup>		
		$I_{cu}$	$I_{cs}$	Max. fuse (gG)	$I_{cu}$	$I_{cs}$	Max. fuse (gG) <sup>3)</sup>	$I_{cu}$	$I_{cs}$	Max. fuse (gG) <sup>3)</sup>	$I_{cu}$	$I_{cs}$	Max. fuse (gG) <sup>3)</sup>	$I_{cu}$	$I_{cs}$	Max. fuse (gG) <sup>3)4)</sup>
Type	A	kA	kA	A	kA	kA	A	kA	kA	A	kA	kA	A	kA	kA	A
<b>Size S2</b>																
<b>3RV2.31</b>	14; 17	100	100	--	65	30	100	50	25	100	12	6	63	5	3	63
	20	100	100	--	65	30	100	50	25	100	12	6	80	5	3	80
	25	100	100	--	65	30	100	50	15	100	12	6	80	5	3	80
	32; 36	100	100	--	65	30	125	50	15	125	10	5	100	4	2	100
	40; 45	100	100	--	65	30	160	50	15	125	10	5	100	4	2	100
	52	100	100	--	65	30	160	50	15	125	10	5	125	4	2	125
	59; 65	100	100	--	65	30	160	50	15	160	8	4	125	4	2	125
73; 80	100	100	--	65	30	200	50	15	200	8	4	160	4	2	125	
<b>Size S2, with increased switching capacity</b>																
<b>3RV2.32</b>	14; 17	100	100	--	100	50	--	65	30	100	18	10	63	8	5	63
	20; 25	100	100	--	100	50	--	65	30	100	18	10	80	8	5	80
	32 ... 45	100	100	--	100	50	--	65	30	125	15	8	100	6	4	100
	52	100	100	--	100	50	--	65	30	125	15	8	125	6	4	125
	59; 65	100	100	--	100	50	--	50	15	160	10	5	125	6	4	125
73; 80	100	100	--	100	50	--	50	15	200	10	5	160	6	4	125	
<b>Size S3</b>																
<b>3RV2.41</b>	40	100	100	--	65	30	125	65	30	125	12	6	100	6	3	63
	50	100	100	--	65	30	125	65	30	125	12	6	100	6	3	80
	63	100	100	--	65	30	160	65	30	160	12	6	100	6	3	80
	75	100	100	--	65	30	160	65	30	160	8	4	125	5	3	100
	84 ... 100	100	100	--	65	30	160	65	30	160	8	4	125	5	3	125
<b>Size S3, with increased switching capacity</b>																
<b>3RV2.42</b>	40	100	100	--	100	50	--	100	50	--	18	9	160	12	6	80
	50	100	100	--	100	50	--	100	50	--	15	7.5	160	10	5	100
	63	100	100	--	100	50	--	70	50	200	15	7.5	160	7.5	4	100
	75	100	100	--	100	50	--	70	50	200	10	5	160	6	3	125
	84 ... 100	100	100	--	100	50	--	70	50	200	10	5	160	6	3	160
<b>3RV2742<sup>5)</sup></b>	up to 70 A	100	100	--	100	50	--	On request								

-- No back-up fuse required, since short-circuit resistant up to 100 kA

1) 10 % overvoltage.

2) 5 % overvoltage.

3) Back-up fuse only required if short-circuit current at the place of installation is  $> I_{cu}$ .

4) Alternatively, fuseless limiter combinations for 690 V AC can also be used.

5) The values for the 3RV2742 circuit breakers have been tested only up to 400 V/415 V AC.

## Motor Starter Protectors/Circuit Breakers

### SIRIUS 3RV2 Motor Starter Protectors/Circuit Breakers

#### General data

#### Short-circuit breaking capacity $I_{cuIT}$ in the IT system (IT network) according to IEC 60947-2

3RV2 motor starter protectors/circuit breakers are suitable for use in IT systems. The values of  $I_{cu}$  and  $I_{cs}$  apply for the three-pole short circuit. In the case of a double ground fault in different phases at the input and output side of a motor starter protector/circuit breaker, the special short-circuit breaking capacity  $I_{cuIT}$  applies. The specifications in the table below apply to 3RV2 motor starter protectors/circuit breakers.

If the short-circuit current at the place of installation exceeds the motor starter protector/circuit breaker's specified rated short-circuit breaking capacity, you will need to use a back-up fuse. The maximum rated current of this back-up fuse is indicated in the tables. The rated short-circuit breaking capacity then applies as specified on the fuse.

Motor starter protectors/ circuit breakers	Rated current $I_n$	Up to 240 V AC <sup>1)</sup>		Up to 400 V AC <sup>1)/</sup> 415 V AC <sup>2)</sup>		Up to 440 V AC <sup>1)/</sup> 460 V AC <sup>2)</sup>		Up to 500 V AC <sup>1)/</sup> 525 V AC <sup>2)</sup>		Up to 690 V AC <sup>1)5)</sup>	
		$I_{cuIT}$	Max. fuse (gG) <sup>3)</sup>	$I_{cuIT}$	Max. fuse (gG) <sup>3)4)</sup>	$I_{cuIT}$	Max. fuse (gG) <sup>3)</sup>	$I_{cuIT}$	Max. fuse (gG) <sup>3)</sup>	$I_{cuIT}$	Max. fuse (gG) <sup>3)</sup>
Type	A	kA	A	kA	A	kA	A	kA	A	kA	A
<b>Size S00</b>											
<b>3RV2.11</b>	0.16 ... 0.4	100	--	100	--	100	--	100	--	100	--
	0.5	100	--	100	--	100	--	100	--	0.5	4
	0.63; 0.8	100	--	100	--	100	--	100	--	0.5	6
	1	100	--	100	--	2	10	2	10	1.5	10
	1.25	100	--	100	--	2	16	2	16	1.5	16
	1.6	100	--	100	--	2	20	2	20	1.5	16
	2; 2.5	100	--	8	25	2	25	2	25	1.5	20
	3.2	100	--	8	32	2	32	2	32	1.5	25
	4; 5	100	--	4	32	1.5	32	1.5	32	1.5	25
	6.3; 8	100	--	4	50	1	40	1	40	1	35
	10	100	--	4	50	1	40	1	40	1	40
	12.5	100	--	4	63	1	50	1	50	1	40
	16	55	80	4	63	1	50	1	50	1	40
<b>3RV1611-0BD10</b>	0.2	100	--	100	--	--	--	100	--	100	--
<b>Size S0</b>											
<b>3RV2.21</b>	0.16 ... 0.4	100	--	100	--	100	--	100	--	100	--
	0.5	100	--	100	--	100	--	100	--	0.5	4
	0.63; 0.8	100	--	100	--	100	--	100	--	0.5	6
	1	100	--	100	--	2	10	2	10	1.5	10
	1.25	100	--	100	--	2	16	2	16	1.5	16
	1.6	100	--	100	--	2	20	2	20	1.5	16
	2; 2.5	100	--	8	25	2	25	2	25	1.5	20
	3.2	100	--	8	32	2	32	2	32	1.5	25
	4; 5	100	--	4	32	1.5	32	1.5	32	1.5	25
	6.3; 8	100	--	4	50	1	40	1	40	1	35
	10	100	--	4	50	1	40	1	40	1	40
	12.5	100	--	4	63	1	50	1	50	1	40
	16	55	80	4	63	1	50	1	50	1	40
	20 ... 25	55	80	4	63	1	50	1	50	1	50
	28; 32	55	80	2	63	1	63	1	63	1	63
	36; 40	20	80	2	63	1	63	1	63	1	63

-- No back-up fuse required, since short-circuit resistant up to 100 kA

1) 5 % overvoltage.

2) Without overvoltage.

3) Back-up fuse only required if short-circuit current at installation location is  $> I_{cuIT}$ .

4) Alternatively, fuseless limiter combinations for 690 V AC can also be used.

5) Overvoltage category II applies for applications in IT systems  $> 600$  V.

## Motor Starter Protectors/Circuit Breakers

### SIRIUS 3RV2 Motor Starter Protectors/Circuit Breakers

#### General data

Motor starter protectors/circuit breakers	Rated current $I_n$	Up to 240 V AC <sup>1)</sup>		Up to 400 V AC <sup>1)/</sup> 415 V AC <sup>2)</sup>		Up to 440 V AC <sup>1)/</sup> 460 V AC <sup>2)</sup>		Up to 500 V AC <sup>1)/</sup> 525 V AC <sup>2)</sup>		Up to 690 V AC <sup>1)5)</sup>	
		$I_{cuIT}$	Max. fuse (gG) <sup>3)</sup>	$I_{cuIT}$	Max. fuse (gG) <sup>3)4)</sup>	$I_{cuIT}$	Max. fuse (gG) <sup>3)</sup>	$I_{cuIT}$	Max. fuse (gG) <sup>3)</sup>	$I_{cuIT}$	Max. fuse (gG) <sup>3)</sup>
Type	A	kA	A	kA	A	kA	A	kA	A	kA	A
<b>Size S2</b>											
<b>3RV2031, 3RV2131, 3RV2331</b>	14 ... 25	100	--	8	100	6	80	6	80	4	63
	32 ... 45	100	--	6	125	4	100	4	100	3	80
	52 ... 80	100	--	4	160	3	125	3	125	2	100
<b>Size S2, with increased switching capacity</b>											
<b>3RV2032, 3RV2332</b>	14 ... 25	100	--	8	100	6	80	6	80	4	63
	32 ... 45	100	--	6	125	6	100	6	100	4	80
	52	100	--	6	160	6	125	6	125	4	100
	59 ... 80	100	--	6	160	4	125	4	125	4	100
<b>Size S3</b>											
<b>3RV2.41</b>	40	65	125	10	63	5	50	5	50	5	50
	50	65	125	8	80	3	63	3	63	3	63
	63	65	160	6	80	3	63	3	63	3	63
	75	65	160	5	100	2	80	2	80	2	80
	90; 100	65	160	5	125	2	100	2	100	2	100
<b>Size S3, with increased switching capacity</b>											
<b>3RV2.42</b>	40	100	--	12	80	6	63	6	63	6	63
	50	100	--	10	100	4	80	4	80	4	80
	63	100	--	7.5	100	4	80	4	80	4	80
	75	100	--	6	125	3	100	3	100	3	100
	90; 100	100	--	6	160	3	125	3	125	3	125

-- No back-up fuse required, since short-circuit resistant up to 100 kA

1) 10 % overvoltage.

2) 5 % overvoltage.

3) Back-up fuse only required if short-circuit current at installation location is  $> I_{cuIT}$ .

4) Alternatively, fuseless limiter combinations for 690 V AC can also be used.

5) Overvoltage category II applies for applications in IT systems  $> 600$  V.

## Motor Starter Protectors/Circuit Breakers

### SIRIUS 3RV2 Motor Starter Protectors/Circuit Breakers

#### General data

#### Limiting function with standard devices for 500 V AC and 690 V AC according to IEC 60947-2

The table shows the rated ultimate short-circuit breaking capacity  $I_{cu}$  and the rated service short-circuit breaking capacity  $I_{cs}$  with an upstream standard motor starter protector/circuit breaker that fulfills the limiting function at voltages 500 V AC and 690 V AC.

The short-circuit breaking capacity can be increased significantly with an upstream standard motor starter protector/circuit breaker with limiting function. The motor starter protector/circuit

breaker which is connected downstream must be set to the rated current of the load.

With motor starter protector/circuit breaker assemblies, note the clearance to grounded parts and between the motor starter protectors/circuit breaker. Short-circuit proof wiring between the motor starter protectors/circuit breaker must be ensured. The motor starter protectors/circuit breakers can be mounted side by side in a modular arrangement.

Standard motor starter protectors/circuit breakers		Rated current $I_n$ A	Up to 500 V AC <sup>1)</sup> /525 V AC <sup>2)</sup>		Up to 690 V AC <sup>1)</sup>	
Type	With limiter Rated current $I_n$ Type		$I_{cu}$ kA	$I_{cs}$ kA	$I_{cu}$ kA	$I_{cs}$ kA
<b>Size S00</b>						
<b>3RV2011</b>	<b>Size S0:</b> <b>3RV2321-4EC10</b> $I_n = 32$ A	2 ... 6.3 8 10 ... 16	-- 100 100	-- 50 50	50 20 20 <sup>3)</sup>	25 10 10 <sup>3)</sup>
	<b>Size S2:</b> <b>3RV2331-4WC10</b> $I_n = 52$ A	10 ... 16	--	--	50	25
<b>Size S0</b>						
<b>3RV2021</b>	<b>Size S0:</b> <b>3RV2321-4EC10</b> $I_n = 32$ A	16 ... 32	100	50	20 <sup>3)</sup>	10 <sup>3)</sup>
	<b>Size S2:</b> <b>3RV2331-4WC10</b> $I_n = 52$ A	16 ... 32	--	--	50	20
<b>Size S2, with increased switching capacity</b>						
<b>3RV2032</b>	<b>Size S2:</b> <b>3RV2332-4RC10</b> $I_n = 80$ A	14 ... 80	100	50	70	35
<b>Size S3, with increased switching capacity</b>						
<b>3RV2042</b>	<b>Size S3<sup>4)</sup>:</b> <b>3RV2342-4MC10</b> $I_n = 100$ A	40 ... 100	100	50	50	25

-- No limiter required

1) 10 % overvoltage.

2) 5 % overvoltage.

3) Infeed to the limiter is always on the side 1L1/3L2/5L3.

4) Infeed to the limiter only on the side 2T1/4T2/6T3. At the infeed side phase barriers have to be used.

## Motor Starter Protectors/Circuit Breakers

### SIRIUS 3RV2 Motor Starter Protectors/Circuit Breakers

General data

#### Permissible rated data of devices approved for North America (UL/CSA)

Motor starter protectors of the 3RV2 series are approved for UL/CSA, and according to UL 508/UL 60947-4-1 and CSA C22.2 No. 14/CSA C22.2 No. 60947-4-1 they can be used on their own or as load feeders in combination with a contactor.

These motor starter protectors/circuit breakers can be used as "Manual Motor Controllers" for "Group Installations", as "Manual Motor Controllers Suitable for Tap Conductor Protection in Group Installations" and as "Self-Protected Combination Motor Controllers" (Type E).

#### 3RV2 motor starter protectors as "Manual Motor Controllers"

If used as a "Manual Motor Controller", the motor starter protector is always operated in combination with an upstream short-circuit protection device. Approved fuses or a circuit breaker according to UL 489/CSA C22.2 No. 5 may be used for this purpose. These devices must be dimensioned according to the National Electrical Code (UL) or Canadian Electrical Code (CSA).

The file numbers for the approval of the 3RV2 as a Manual Motor Controller are as follows:

- UL File No. 47705, CCN: NLRV
- CSA Master Contract 165071, Product Class: 3211

Motor starter protectors/ circuit breakers		hp rating <sup>1)</sup> for FLA <sup>2)</sup> max.		Rated current $I_n$ A	240 V AC		480 V AC		600 V AC	
		Single- phase	3-phase		UL $I_{bc}^{(3)}$ kA	CSA $I_{bc}^{(3)}$ kA	UL $I_{bc}^{(3)}$ kA	CSA $I_{bc}^{(3)}$ kA	UL $I_{bc}^{(3)}$ kA	CSA $I_{bc}^{(3)}$ kA
Type	V									
<b>Size S00</b>										
<b>3RV2011, 3RV2111, 3RV2311, 3RV2411</b>				0.16 ... 12.5 16	65 65	65 65	65 65	65 65	30 --	30 --
FLA <sup>2)</sup> max.	115/120	1	2							
16 A, 480 V	200/208	2	3							
12.5 A, 600 V	230/240	2	5							
	460/480	--	10							
	575/600	--	10							
<b>3RV1611-0BD10</b>				0.2	65	65	65	65	10	10
<b>Size S0</b>										
<b>3RV2021, 3RV2121, 3RV2321, 3RV2421</b>				0.16 ... 12.5 16 ... 25 28, 32 36, 40	65 65 65 65	65 65 65 65	65 65 50 12	65 65 50 12	30 --/(30) <sup>4)</sup> -- --	30 --/(30) <sup>4)</sup> -- --
FLA <sup>2)</sup> max.	115/120	3	5							
40 A, 480 V	200/208	5	10							
12.5 A, 600 V	230/240	7 1/2	10							
	460/480	--	30							
	575/600	--	--							
<b>Size S2</b>										
<b>3RV2031, 3RV2331</b>				14 ... 36 40 ... 52 59 ... 65 73 ... 80	65 65 65 65	65 65 65 65	65 65 65 <sup>5)</sup> 65 <sup>5)</sup>	65 65 65 <sup>5)</sup> 65 <sup>5)</sup>	25 22 20 <sup>5)</sup> 20 <sup>5)</sup>	25 22 20 <sup>5)</sup> 20 <sup>5)</sup>
FLA <sup>2)</sup> max.	115/120	7.5	10							
80 A, 600 V	200/208	15	25							
	230/240	15	30							
	460/480	--	60							
	575/600	--	75							
<b>Size S2, with increased switching capacity</b>										
<b>3RV2032, 3RV2332</b>				14 ... 36 40 ... 52 59 ... 65 73 ... 80	100 100 100 100	100 100 100 100	100 100 100 <sup>5)</sup> 100 <sup>5)</sup>	100 100 100 <sup>5)</sup> 100 <sup>5)</sup>	25 22 25 <sup>5)</sup> 25 <sup>5)</sup>	25 22 25 <sup>5)</sup> 25 <sup>5)</sup>
FLA <sup>2)</sup> max.	115/120	7.5	10							
80 A, 600 V	200/208	15	25							
	230/240	15	30							
	460/480	--	60							
	575/600	--	75							
<b>Size S3</b>										
<b>3RV2.41, 3RV2.42</b>				40 ... 75 84 ... 100	65 65	65 65	65 65	65 65	30 10/30 <sup>6)</sup>	30 10/30 <sup>6)</sup>
FLA <sup>2)</sup> max.	115/120	7.5	15							
100 A, 600 V	200/208	15	30							
	230/240	20	40							
	460/480	--	75							
	575/600	--	100							

-- No approval

1) hp rating = Power rating in horse power (maximum motor rating).

2) FLA = Full Load Amps/motor full load current.

3) Corresponds to "short-circuit breaking capacity" according to UL/CSA.

4) Values in brackets only apply to 3RV2.23 motor starter protectors.

5) With Class J fuse.

6) With Class J fuse 300 A.

## Motor Starter Protectors/Circuit Breakers

### SIRIUS 3RV2 Motor Starter Protectors/Circuit Breakers

#### General data

3RV20 motor starter protectors (up to 100 A) as "Manual Motor Controllers Suitable for Tap Conductor Protection in Group Installations"

The application as "Manual Motor Controllers Suitable for Tap Conductor Protection in Group Installations" is only available for UL.

CSA does not recognize this approval! When the motor starter protector is used as a "Manual Motor Controller Suitable for Tap Conductor Protection in Group Installations", it must always be combined with upstream short-circuit protection. Approved fuses or a circuit breaker according to UL 489 may be used for this purpose. These devices must be dimensioned according to the National Electrical Code.

The 3RV20 motor starter protectors are approved as "Manual Motor Controllers Suitable for Tap Conductor Protection in Group Installations" under the following file number:

- UL File No. 47705, CCN: NLRV

Motor starter protectors/ circuit breakers		hp rating <sup>1)</sup> for FLA <sup>2)</sup> max.		Rated current $I_n$ A	240 V AC	480 Y/277 V AC	600 Y/347 V AC
		Single- phase	3-phase		UL $I_{bc}$ <sup>3)</sup> kA	UL $I_{bc}$ <sup>3)</sup> kA	UL $I_{bc}$ <sup>3)</sup> kA
Type	V						
<b>Size S00</b>							
<b>3RV2011</b>				0.16 ... 12.5 16	65 65	65 65	30 --
FLA <sup>2)</sup> max.	115/120	1	2				
16 A, 480 V	200/208	2	3				
12.5 A, 600 V	230/240	2	5				
	460/480	--	10				
	575/600	--	10				
<b>Size S0</b>							
<b>3RV2021</b>				0.16 ... 12.5 16 ... 25 28; 32	65 65 50	65 65 50	30 -- --
FLA <sup>2)</sup> max.	115/120	2	5				
32 A, 480 V	200/208	3	10				
12.5 A, 600 V	230/240	5	10				
	460/480	--	20				
	575/600	--	--				
<b>Size S2</b>							
<b>3RV2031</b>				14 ... 36 40 ... 52 59 ... 65	65 65 65 65 65	65 65 30 20 10	25 22 -- -- --
FLA <sup>2)</sup> max.	115/120	7.5	10				
80 A, 480 V	200/208	15	25				
52 A, 600 V	230/240	15	30				
	460/480	--	60				
	575/600	--	75				
<b>Size S2, with increased switching capacity</b>							
<b>3RV2032</b>				14 ... 36 40 ... 52 59 ... 65	100 100 100 100 100	100 100 42 30 10	25 22 -- -- --
FLA <sup>2)</sup> max.	115/120	7.5	10				
80 A, 480 V	200/208	15	25				
52 A, 600 V	230/240	15	30				
	460/480	--	60				
	575/600	--	75				
<b>Size S3</b>							
<b>3RV204.</b>				40 ... 75 84 ... 100	65 65	65 65	30 --
FLA <sup>2)</sup> max.	115/120	7.5	15				
100 A, 480 V	200/208	15	30				
75 A, 600 V	230/240	20	40				
	460/480	--	75				
	575/600	--	75				

-- No approval

<sup>1)</sup> hp rating = Power rating in horse power (maximum motor rating).

<sup>2)</sup> FLA = Full Load Amps/motor full load current.

<sup>3)</sup> Corresponds to "short-circuit breaking capacity" according to UL.

## Motor Starter Protectors/Circuit Breakers

### SIRIUS 3RV2 Motor Starter Protectors/Circuit Breakers

#### General data

#### 3RV20 motor starter protectors (up to 100 A) as "Self-Protected Combination Motor Controllers (Type E)"

UL 508/UL 60947-4-1 approval demands 1-inch through air spacing and 2-inch over surface spacing at line side for "Self-Protected Combination Motor Controllers".

Therefore, 3RV20 motor starter protectors of sizes S00 to S3 are approved according to UL 508/UL 60947-4-1 in combination with the terminal blocks listed below.

CSA does not require these extended clearances. According to CSA, these terminal blocks can be omitted when the device is used as a "Self-Protected Combination Motor Controller".

The 3RV20 motor starter protectors are approved as "Self-Protected Combination Motor Controllers" under the following file numbers:

- UL File No. E156943, CCN: NKJH
- CSA Master Contract 165071, Product Class: 3211 08

Motor starter protectors/ circuit breakers		hp rating <sup>1)</sup> for FLA <sup>2)</sup> max.		Rated current $I_n$ A	Up to 240 V AC		Up to 480 Y/277 V AC		Up to 600 Y/347 V AC	
		Single- phase	3-phase		UL $I_{bc}^{(3)}$ kA	CSA $I_{bc}^{(3)}$ kA	UL $I_{bc}^{(3)}$ kA	CSA $I_{bc}^{(3)}$ kA	UL $I_{bc}^{(3)}$ kA	CSA $I_{bc}^{(3)}$ kA
Type	V									
<b>Size S00</b>										
<b>3RV2011 + 3RV2928-1H<sup>4)5)</sup></b>				0.16 ... 12.5 16	65 65	65 65	65 65	65 65	30 --	30 --
FLA <sup>2)</sup> max.	115/120	1	2							
16 A, 480 V;	200/208	2	3							
12.5 A, 600 V	230/240	2	5							
	460/480	--	10							
	575/600	--	10							
<b>Size S0</b>										
<b>3RV2021 + 3RV2928-1H<sup>4)5)</sup></b>				0.16 ... 12.5 16 ... 25 28; 32	65 65 50	65 65 50	65 65 50	65 65 50	30 -- --	30 -- --
FLA <sup>2)</sup> max.	115/120	2	5							
32 A, 480 V	200/208	3	10							
12.5 A, 600 V	230/240	5	10							
	460/480	--	20							
	575/600	--	--							
<b>Size S2</b>										
<b>3RV2031+ 3RV2938-1K<sup>4)</sup></b>				14 ... 36 40 ... 52 59 ... 73	65 65 65	65 65 65	65 65 20	65 65 20	25 22 --	25 22 --
FLA <sup>2)</sup> max.	115/120	7.5	10							
73 A, 480 V	200/208	15	25							
52 A, 600 V	230/240	15	30							
	460/480	--	60							
	575/600	--	75							
<b>Size S2, with increased switching capacity</b>										
<b>3RV2032 + 3RV2938-1K<sup>4)</sup></b>				14 ... 36 40 ... 52 59 ... 73	100 100 100	100 100 100	100 100 30	100 100 30	25 22 --	25 22 --
FLA <sup>2)</sup> max.	115/120	7.5	10							
73 A, 480 V	200/208	15	25							
52 A, 600 V	230/240	15	30							
	460/480	--	60							
	575/600	--	75							
<b>Size S3</b>										
<b>3RV2041/2042 + 3RT2946-4GA07<sup>4)</sup></b>				40 ... 75 84 ... 100	65 65	65 65	65 65	65 65	30 --	30 --
FLA <sup>2)</sup> max.	115/120	7.5	15							
100 A, 480 V	200/208	15	30							
75 A, 600 V	230/240	20	40							
	460/480	--	75							
	575/600	--	75							

-- No approval

1) hp rating = Power rating in horse power (maximum motor rating).

2) FLA = Full Load Amps/motor full load current.

3) Corresponds to "short-circuit breaking capacity" according to UL/CSA.

4) Not required for CSA.

5) Alternatively phase barrier 3RV2928-1K can be used.



## Motor Starter Protectors/Circuit Breakers

### SIRIUS 3RV2 Motor Starter Protectors/Circuit Breakers

#### General data

#### 3RV27 and 3RV28 motor starter protectors as "circuit breakers"

These motor starter protectors are approved as circuit breakers according to UL 489 and CSA C22.2 No. 5. They can be used therefore as upstream short-circuit protective devices for "Manual Motor Controllers" and "Manual Motor Controllers Suitable for Tap Conductor Protection in Group Installations".

3RV27 and 3RV28 motor starter protectors are approved as "circuit breakers" under the following file numbers:

- UL File No. E235044, CCN: DIVQ
- CSA Master Contract 165071, Product Class: 1432 01

Motor starter protectors/ circuit breakers	Rated current $I_n$	240 V AC		480 Y/277 V AC		480 V AC		600 Y/347 V AC		600 V AC	
		UL $I_{bc}^{1)}$	CSA $I_{bc}^{1)}$	UL $I_{bc}^{1)}$	CSA $I_{bc}^{1)}$	UL $I_{bc}^{1)}$	CSA $I_{bc}^{1)}$	UL $I_{bc}^{1)}$	CSA $I_{bc}^{1)}$	UL $I_{bc}^{1)}$	CSA $I_{bc}^{1)}$
Type	A	kA	kA	kA	kA	kA	kA	kA	kA	kA	kA
<b>Size S00</b>											
<b>3RV2711</b>	0.16 ... 12.5 15	65 65	65 65	65 65	65 65	-- --	-- --	10 --	10 --	-- --	-- --
<b>3RV2811</b>	0.16 ... 12.5 15	65 65	65 65	65 65	65 65	-- --	-- --	10 --	10 --	-- --	-- --
<b>Size S0</b>											
<b>3RV2721</b>	20; 22	50	50	50	50	--	--	--	--	--	--
<b>3RV2821</b>	20; 22	50	50	50	50	--	--	--	--	--	--
<b>Size S3</b>											
<b>3RV2742</b>	10; 15 20 ... 30 35 ... 60 70	65 65 65 65	65 65 65 65	65 65 65 65	65 65 65 65	65 65 -- --	65 65 -- --	20 20 20 10	20 20 20 10	20 -- -- --	20 -- -- --


-- No approval

<sup>1)</sup> Corresponds to "short-circuit breaking capacity" according to UL.

## Motor Starter Protectors/Circuit Breakers

### SIRIUS 3RV2 Motor Starter Protectors/Circuit Breakers



#### General data

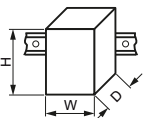
General data		3RV2.1.	3RV2.2.	3RV2.3.	3RV2.4.	3RV27, 3RV28
<b>Type</b>		S00	S0	S2	S3	S00, S0
<b>Size</b>						
<b>Dimensions (W x H x D)</b>		mm 45 x 97 x 91	45 x 97 x 91	55 x 140 x 149	70 x 165 x 169	45 x 144 x 92
• Screw terminals		mm 45 x 106 x 91	45 x 119 x 91	--	--	--
• Spring-type terminals						
<b>Standards</b>		Yes	Yes	Yes	Yes	--
• IEC/EN 60947-1 (VDE 0660 Part 100)		Yes	Yes	Yes	Yes	--
• IEC/EN 60947-2 (VDE 0660 Part 101)		Yes	Yes	Yes	Yes	--
• IEC/EN 60947-4-1 (VDE 0660 Part 102)		Yes	Yes	Yes	Yes	--
• UL 508/UL 60947-4-1, CSA C22.2 No. 14/CSA C22.2 No. 60947-4-1		Yes	Yes	Yes	Yes	--
• UL 489, CSA C22.2 No. 5		--	--	--	--	Yes
<b>Number of poles</b>		3				
<b>Max. rated current <math>I_{n \max}</math> (= max. rated operational current <math>I_e</math>)</b>		A 16	40	80	100	22
<b>Permissible ambient temperature</b>		°C	°C	°C	°C	°C
• Storage/transport		-50 ... +80	-20 ... +70	--	--	--
• Operation	$I_n$ : 0.16 ... 32 A	°C	(current reduction above +60 °C)	--	--	--
	$I_n$ : 36 ... 40 A	°C	-20 ... +40 (the devices must not be mounted side-by-side and they must not be assembled with link modules with contactors. Lateral clearance = 9 mm)	--	--	--
	$I_n$ : 14 ... 80 A	°C	--	-20 ... +70 (current reduction above +60 °C)	--	--
	$I_n$ : 40 ... 100 A	°C	--	--	-20 ... +70 (current reduction above +60 °C)	--
<b>Permissible rated current at inside temperature of control cabinet</b>		%	%	%	%	%
• +60 °C		100	100	100	100	100
• +70 °C		87	87	--	87	87
<b>Permissible rated current at ambient temperature of enclosure (applies to motor starter protector/circuit breaker inside enclosure: S00/S0 ≤ 32 A, S2 ≤ 52 A)</b>		%	%	%	%	%
• +35 °C		100	100	100	100	100
• +60 °C		87	87	--	87	87
<b>Rated operational voltage <math>U_e</math></b>		V AC	V AC	V AC	V AC	V AC
• Acc. to IEC		690 (when a molded-plastic enclosure is used only 500 V)	690	690	690	690
• Acc. to UL/CSA		600	600	600	600	600
<b>Rated frequency</b>		Hz	50/60	50/60	50/60	50/60
<b>Rated insulation voltage <math>U_i</math></b>		V	690	690	1 000	690
<b>Rated impulse withstand voltage <math>U_{imp}</math></b>		kV	6	6	8	6
<b>Utilization category</b>		A	A	A	A	A
• IEC 60947-2 (motor starter protector/circuit breaker)		A	A	A	A	A
• IEC 60947-4-1 (motor starter)		AC-3	AC-3	AC-3	AC-3	AC-3
<b>Trip class CLASS</b>	Acc. to IEC 60947-4-1	10	10	10/20	10/20	--
<b>DC short-circuit breaking capacity</b> (time constant $t = 5$ ms)		kA	kA	kA	kA	kA
• 1 conducting path 150 V DC		10	10	10	10	10
• 2 conducting paths in series 300 V DC		10	10	10	10	10
• 3 conducting paths in series 450 V DC		10	10	10	10	10
<b>Power loss <math>P_v</math> per motor starter protector</b> dependent upon rated current $I_n$ (upper setting range)		W	W	W	W	W
$I_n$ : 0.16 ... 0.63 A		5	5	5	5	5
$I_n$ : 0.8 ... 6.3 A		6	6	6	6	6
$I_n$ : 8 ... 16 A		7	7	7	7	7
$I_n$ : 14 ... 16 A		--	7	10	--	7
$I_n$ : 17 ... 25 A		--	8	12	--	8
$I_n$ : 28 ... 32 A		--	11	14	--	11
$I_n$ : 36 ... 40 A		--	14	15	--	14
$I_n$ : 45 ... 52 A		--	--	17	--	--
$I_n$ : 59 ... 65 A		--	--	19	--	--
$I_n$ : 73 ... 80 A		--	--	21	--	--
$I_n$ : 40 ... 50 A		--	--	--	21	--
$I_n$ : 63 ... 75 A		--	--	--	21	--
$I_n$ : 84 ... 93 A		--	--	--	32	--
$I_n$ : 100 A		--	--	--	38	--
<b>Shock resistance</b>	Acc. to IEC 60068-2-27 g/ms	25/11 (square and sine pulse)				

## Motor Starter Protectors/Circuit Breakers

### SIRIUS 3RV2 Motor Starter Protectors/Circuit Breakers

#### General data

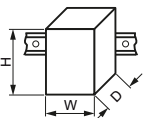General data (continued)							
<b>Type</b>			<b>3RV2.1.</b>	<b>3RV2.2.</b>	<b>3RV2.3.</b>	<b>3RV2.4.</b>	<b>3RV27, 3RV28</b>
Size			S00	S0	S2	S3	S00, S0
Dimensions (W x H x D)			mm	mm	mm	mm	mm
• Screw terminals			45 x 97 x 91	45 x 97 x 91	55 x 140 x 149	70 x 165 x 169	45 x 144 x 92
• Spring-type terminals			45 x 106 x 91	45 x 119 x 91	--	--	--
<b>Degree of protection</b>	Acc. to IEC 60529		IP20		- IP20 (front side) - Terminal IP00 (use additional terminal covers for higher degree of protection)		
<b>Touch protection</b>	Acc. to IEC 60529		Finger-safe		Finger-safe, for vertical contact from the front		
<b>Temperature compensation</b>	Acc. to IEC 60947-4-1 °C		-20 ... +60				
<b>Phase failure sensitivity</b>	Acc. to IEC 60947-4-1		Yes (not for 3RV23 motor starter protectors)				No
<b>Protection of motors in hazardous environments</b>			Yes (only for 3RV20 motor starter protectors)			On request	No
• EC type-examination certificate number according to European Directive 2014/34/EU (ATEX)			DMT 02 ATEX F 001  II (2) GD			On request	No
• according to international standard IECEx			IECEx BVS1.0102 [Ex]			On request	No
<b>Isolating function</b>	Acc. to IEC 60947-2		Yes				
<b>Main and EMERGENCY-STOP switch characteristics</b>	Acc. to EN 60204-1 VDE 0113		Yes				
(with corresponding accessories)							
<b>Protective separation between main and auxiliary circuits required for PELV applications</b>	Acc. to IEC 60947-1		Yes				
• Up to 400 V + 10 %			Yes				
• Up to 415 V + 5 % (higher voltages on request)			Yes				
<b>Permissible mounting position</b>			Any, acc. to IEC 60447 start command "I" right-hand side or top				
<b>Mechanical endurance (operating cycles)</b>			100 000		52 A: 50 000, 80 A: 20 000	25 000	100 000
<b>Electrical endurance (operating cycles)</b>			100 000		52 A: 50 000, 80 A: 20 000	25 000	100 000
<b>Max. switching frequency per hour (motor starts)</b>	1/h		15				

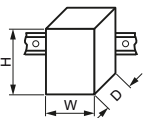General data					
<b>Type</b>			<b>3RV2742</b>	<b>3RV1611-0BD10<sup>1)</sup></b>	
Size			S3	S00	
Dimensions (W x H x D)			mm	mm	
			70 x 168 x 169	45 x 90 x 70	
<b>Standards</b>			Yes		
• IEC/EN 60947-1 (VDE 0660 Part 100)			Yes		
• IEC/EN 60947-2 (VDE 0660 Part 101)			No	Yes	
• UL 508/UL 60947-4-1, CSA C22.2 No.14/CSA 60947-4-1			Yes	No	
• UL 489, CSA C22.2 No.5					
<b>Number of poles</b>			3		
<b>Max. rated current <math>I_n</math> max (= max. rated operational current <math>I_e</math>)</b>	A		70	0.2	
<b>Permissible ambient temperature</b>			-50 ... +80		
• Storage/transport	°C		-20 ... +70 (current reduction above +60 °C)		
• Operation	°C				
<b>Permissible rated current at inside temperature of control cabinet</b>			100		
• +60 °C	%		87		
• +70 °C	%				
<b>Permissible rated current at ambient temperature of enclosure (applies to motor starter protector/circuit breaker inside enclosure):</b>			100		
• +35 °C	%		87		
• +60 °C	%				
<b>Rated operational voltage <math>U_e</math></b>			690 (with molded-plastic enclosure 500 V)		
• Acc. to IEC	V AC		600		
• Acc. to UL/CSA	V AC				
<b>Rated frequency</b>	Hz		50/60		
<b>Rated insulation voltage <math>U_i</math></b>	V		1 000	690	
<b>Rated impulse withstand voltage <math>U_{imp}</math></b>	kV		8	6	
<b>Utilization category</b>			A		
• IEC 60947-2 (motor starter protector/circuit breaker)					
<b>DC short-circuit breaking capacity</b>			On request		
(time constant $t = 5$ ms)					
• 1 conducting path 150 V DC	kA				
• 2 conducting paths in series 300 V DC	kA				
• 3 conducting paths in series 450 V DC	kA				


<sup>1)</sup> "Technical specifications" for 3RV1611 voltage transformer circuit breakers, see page 7/25.

## Motor Starter Protectors/Circuit Breakers

### SIRIUS 3RV2 Motor Starter Protectors/Circuit Breakers

#### General data

#### General data (continued)

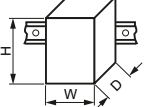General data (continued)		3RV2742	3RV1611-0BD10 <sup>1)</sup>
<b>Type</b>		S3	S00
Size		70 x 168 x 169	45 x 90 x 70
Dimensions (W x H x D)		mm	
<b>Power loss <math>P_v</math> per motor starter protector</b>	$I_n: 0.2 \text{ A}$	W	--
dependent upon	$I_n: 10 \text{ A}$	W	8
rated current $I_n$	$I_n: 15 \dots 35 \text{ A}$	W	12
(upper setting range)	$I_n: 40 \dots 70 \text{ A}$	W	20
$R_{\text{per conducting path}} = \frac{P}{I^2 \times 3}$			
<b>Shock resistance</b>	Acc. to IEC 60068-2-27	g/ms	25/11 (square and sine pulse)
<b>Degree of protection</b>	Acc. to IEC 60529		- IP20 (front side) - Connecting terminal IP00
<b>Touch protection</b>	Acc. to IEC 60529		Finger-safe, for vertical contact from the front
<b>Temperature compensation</b>	Acc. to IEC 60947-4-1	°C	-20 ... +60
<b>Phase failure sensitivity</b>	Acc. to IEC 60947-4-1		No
<b>Explosion protection – Safe operation of motors with "increased safety" type of protection</b>			No
EC type-examination certificate number according to directive 2014/34/EU (ATEX)			
<b>Isolating function</b>	Acc. to IEC 60947-2		Yes
<b>Main and EMERGENCY-STOP switch characteristics</b>	Acc. to EN 60204-1		Yes
(with corresponding accessories)			
<b>Protective separation between main and auxiliary circuits, required for PELV applications</b>	Acc. to IEC 60947-1		Yes
• Up to 400 V + 10 %			
• Up to 415 V + 5 % (higher voltages on request)			
<b>Permissible mounting position</b>			Any, acc. to IEC 60447 start command "I" right-hand side or top
<b>Mechanical endurance</b>	Operating cycles	25 000	100 000
<b>Electrical endurance</b>	Operating cycles	25 000	100 000
<b>Max. switching frequency per hour (motor starts)</b>	1/h	15	

<sup>1)</sup> "Technical specifications" for 3RV1611 voltage transformer circuit breakers, see page 7/25.

#### Rated data of the auxiliary switches and signaling switches

			Lateral auxiliary switch with	Signaling switch	Transverse auxiliary switch with	
			1 NO + 1 NC, 2 NO, 2 NC, 2 NO + 2 NC		1 CO	1 NO + 1 NC, 2 NO
<b>Max. rated voltage</b>						
• Acc. to NEMA (UL)	V AC	600			250	
• Acc. to NEMA (CSA)	V AC	600			250	
<b>Uninterrupted current</b>	A	10			5	2.5
<b>Switching capacity</b>			1 NO + 1 NC, 2 NO, 2 NC: A600, Q300; 2 NO + 2 NC: A300, Q300	A600, Q300	B600, R300	C300, R300

## Motor Starter Protectors/Circuit Breakers

### SIRIUS 3RV2 Motor Starter Protectors/Circuit Breakers

#### General data

Front transverse auxiliary switches		Switching capacity for different voltages	
		1 CO	1 NO + 1 NC, 2 NO
<b>Rated operational current <math>I_e</math></b>			
• At AC-15, alternating voltage			
- 24 V	A	4	2
- 230 V	A	3	0.5
• At AC-12 = $I_{th}$ , alternating voltage			
- 24 V	A	10	2.5
- 230 V	A	10	2.5
• At DC-13, direct voltage $L/R$ 200 ms			
- 24 V	A	1	1
- 48 V	A	--	0.3
- 60 V	A	--	0.15
- 110 V	A	0.22	--
- 220 V	A	0.1	--
<b>Minimum load capacity</b>	V	17	
	mA	1	

Front transverse solid-state compatible auxiliary switches		Switching capacity for different voltages	
		1 CO	
<b>Rated operational voltage <math>U_e</math></b>	Alternating voltage	V	125
<b>Rated operational current <math>I_e</math> /AC-14</b>	At $U_e = 125$ V	A	0.1
<b>Rated operational voltage <math>U_e</math></b>	Direct voltage $L/R$ 200 ms	V	60
<b>Rated operational current <math>I_e</math> /DC-13</b>	At $U_e = 60$ V	A	0.3
<b>Minimum load capacity</b>	V	5	
	mA	1	

Lateral auxiliary switches with signaling switch		Switching capacity for different voltages: Lateral auxiliary switch with 1 NO + 1 NC, 2 NO, 2 NC, 2 NO + 2 NC, Signaling switch	
<b>Rated operational current <math>I_e</math></b>			
• At AC-15, alternating voltage			
- 24 V	A	6	
- 230 V	A	4	
- 400 V	A	3	
- 690 V	A	1	
• At AC-12 = $I_{th}$ , alternating voltage			
- 24 V	A	10	
- 230 V	A	10	
- 400 V	A	10	
- 690 V	A	10	
• At DC-13, direct voltage $L/R$ 200 ms			
- 24 V	A	2	
- 110 V	A	0.5	
- 220 V	A	0.25	
- 440 V	A	0.1	
<b>Minimum load capacity</b>	V	17	
	mA	1	



Auxiliary releases		Undervoltage releases	Shunt releases
<b>Power consumption</b>			
• During pick-up			
- AC voltages	VA/W	20.2/13	
- DC voltages	W	20	13 ... 80
• During uninterrupted duty			
- AC voltages	VA/W	7.2/2.4	--
- DC voltages	W	2.1	--
<b>Response voltage</b>			
• Tripping	V	0.35 .. 0.7 x $U_s$	0.7 ... 1.1 x $U_s$
• Pick-up	V	0.85 ... 1.1 x $U_s$	--
<b>Opening time maximum</b>	ms	20	

Short-circuit protection for auxiliary and control circuits		
<b>Melting fuses</b> operational class gG	A	10
<b>Miniature circuit breakers</b> C characteristic	A	6 (prospective short-circuit current < 0.4 kA)

## Motor Starter Protectors/Circuit Breakers

### SIRIUS 3RV2 Motor Starter Protectors/Circuit Breakers

#### General data



Conductor cross-sections of main circuit						
Type		3RV2.11	3RV2.21	3RV2.31-4B.1., 3RV2.31-4D.1., 3RV2.31-4E.1., 3RV2.31-4P.1., 3RV2.31-4S.1., 3RV2.31-4T.1., 3RV2.31-4U.1., 3RV2.31-4V.1.	3RV2.31-4J.1., 3RV2.31-4K.1., 3RV2.31-4R.1., 3RV2.31-4W.1., 3RV2.31-4X.1., 3RV2431-4VA1., 3RV2.32	3RV27, 3RV28
Size		S00	S0	S2		S00, S0
<b>Connection type</b>		 <b>Screw terminals</b>				
<b>Terminal screw</b>		M3, Pozidriv size 2	M4, Pozidriv size 2	M6, Pozidriv size 2		M4, Pozidriv size 2
<b>Operating devices</b>	mm	∅ 5 ... 6	∅ 5 ... 6	∅ 5 ... 6		∅ 5 ... 6
<b>Prescribed tightening torque</b>	Nm	0.8 ... 1.2	2 ... 2.5	3.0 ... 4.5		2.5 ... 3
<b>Conductor cross-sections (min./max.),</b> 1 or 2 conductors can be connected						
• Solid or stranded	mm <sup>2</sup>	2 x (0.75 ... 2.5) <sup>1)</sup> , 2 x 4	2 x (1 ... 2.5) <sup>1)</sup> , 2 x (2.5 ... 10) <sup>1)</sup>	2 x (1 ... 25) <sup>1)</sup> , 1 x (1 ... 35) <sup>1)</sup>	2 x (1 ... 35) <sup>1)</sup> , 1 x (1 ... 50) <sup>1)</sup>	2 x (1 ... 10) <sup>1)</sup> , max. 1 x 25
• Finely stranded with end sleeve (DIN 46228-1)	mm <sup>2</sup>	2 x (0.5 ... 1.5) <sup>1)</sup> , 2 x (0.75 ... 2.5) <sup>1)</sup>	2 x (1 ... 2.5) <sup>1)</sup> , 2 x (2.5 ... 6) <sup>1)</sup> , 1 x 10	2 x (1 ... 16) <sup>1)</sup> , 1 x (1 ... 25) <sup>1)</sup>	2 x (1 ... 25) <sup>1)</sup> , 1 x (1 ... 35) <sup>1)</sup>	1 x (1 ... 16), max. 6 + 16
• AWG cables, solid or stranded	AWG	2 x (20 ... 16) <sup>1)</sup> , 2 x (18 ... 12) <sup>1)</sup>	2 x (18 ... 12) <sup>1)</sup> , 2 x (14 ... 8) <sup>1)</sup>	2 x (18 ... 3) <sup>1)</sup> , 1 x (18 ... 2) <sup>1)</sup>	2 x (18 ... 2) <sup>1)</sup> , 1 x (18 ... 1) <sup>1)</sup>	2 x (14 ... 10)
<b>Connection type</b>		 <b>Spring-type terminals</b>				
<b>Operating devices</b>	mm	3.0 x 0.5				
<b>Conductor cross-sections (min./max.),</b> 1 or 2 conductors can be connected						
• Solid or stranded	mm <sup>2</sup>	2 x (0.5 ... 4)	2 x (1 ... 10)	--		
• Finely stranded without end sleeve	mm <sup>2</sup>	2 x (0.5 ... 2.5)	2 x (1 ... 6)	--		
• Finely stranded with end sleeve (DIN 46228-1)	mm <sup>2</sup>	2 x (0.5 ... 2.5)	2 x (1 ... 6)	--		
• AWG cables, solid or stranded	AWG	2 x (20 ... 12)	2 x (18 ... 8)	--		
Max. external diameter of the conductor insulation	mm	3.6	6.4	--		


<sup>1)</sup> If two different conductor cross-sections are connected to one clamping point, both cross-sections must be in the range specified.

## Motor Starter Protectors/Circuit Breakers

### SIRIUS 3RV2 Motor Starter Protectors/Circuit Breakers

#### General data

Conductor cross-sections of main circuit (continued)			
Type		3RV2.4/ 3RV2742	3RV1611-0BD10 <sup>1)</sup>
Size		S3	S00
Connection type		 Screw terminals with box terminal	 Screw terminals
Terminal screw		M6	Pozidriv size 2
Prescribed tightening torque	Nm	4.5 ... 6	
<b>Conductor cross-sections (min./max.)</b> , 1 or 2 conductors can be connected			
• Solid or stranded	mm <sup>2</sup>	2 x (2.5 ... 16) <sup>2)</sup> , 2 x (10 ... 50) <sup>2)</sup> , 1 x (10 ... 70) <sup>2)</sup>	2 x (0.5 ... 1.5) <sup>2)</sup> , 2 x (0.75 ... 2.5) <sup>2)</sup>
• Finely stranded with end sleeve (DIN 46228-1)	mm <sup>2</sup>	2 x (2.5 ... 35) <sup>2)</sup> , 1 x (2.5 ... 50) <sup>2)</sup>	2 x (0.5 ... 1.5) <sup>2)</sup> , 2 x (0.75 ... 2.5) <sup>2)</sup>
• AWG cables, solid or stranded	AWG	2 x (10 ... 1/0) <sup>2)</sup> , 1 x (10 ... 2/0) <sup>2)</sup>	2 x (18 ... 14)
<b>Ribbon cable conductors</b> (number x width x thickness)	mm	2 x (6 x 9 x 0.8)	--
<b>Removable box terminals<sup>3)</sup></b>			
• With copper bars <sup>4)</sup>	mm	2 x 12 x 4	--
• With cable lugs <sup>5)</sup>			
- Terminal screw		M6	
- Prescribed tightening torque	Nm	4.5 ... 6	
- Usable ring terminal lugs	mm	d <sub>2</sub> = min. 6.3 d <sub>3</sub> = max. 19	





<sup>1)</sup> "Technical specifications" for 3RV16 voltage transformer circuit breakers, see page 7/25.

<sup>2)</sup> If two different conductor cross-sections are connected to one clamping point, both cross-sections must be in the range specified.

<sup>3)</sup> Cable lug and busbar connection possible after removing the box terminals. This does not apply for 3RV2742.

<sup>4)</sup> If bars larger than 12 mm x 10 mm are connected, a 3RT2946-4EA2 cover is needed to maintain the required phase clearance, see page 7/51.

<sup>5)</sup> If conductors larger than 25 mm<sup>2</sup> are connected, the 3RT2946-4EA2 cover is needed to maintain the required phase clearance, see page 7/51.

Conductor cross-sections for auxiliary and control circuits							
Type		3RV2.11	3RV1611- 0BD10 <sup>1)</sup>	3RV2.21	3RV2.3	3RV2.4	3RV27, 3RV28
Size		S00		S0	S2	S3	S00, S0, S3
Connection type		 Screw terminals					
Terminal screw		M3, Pozidriv size 2					
Operating devices	mm	∅ 5 ... 6					
Prescribed tightening torque	Nm	0.8 ... 1.2					
<b>Conductor cross-sections (min./max.)</b> , 1 or 2 conductors can be connected							
• Solid or stranded	mm <sup>2</sup>	2 x (0.5 ... 1.5) <sup>2)</sup> , 2 x (0.75 ... 2.5) <sup>2)</sup>					
• Finely stranded with end sleeve (DIN 46228-1)	mm <sup>2</sup>	2 x (0.5 ... 1.5) <sup>2)</sup> , 2 x (0.75 ... 2.5) <sup>2)</sup>					
• AWG cables, solid or stranded	AWG	2 x (18 ... 14) <sup>2)</sup> , 2 x (20 ... 16) <sup>2)</sup>					
Connection type		 Spring-type terminals					
Operating devices	mm	3.0 x 0.5					
<b>Conductor cross-sections (min./max.)</b> , 1 or 2 conductors can be connected							
• Solid or stranded	mm <sup>2</sup>	2 x (0.5 ... 2.5)					
• Finely stranded without end sleeve	mm <sup>2</sup>	2 x (0.5 ... 2.5)					
• Finely stranded with end sleeve (DIN 46228-1)	mm <sup>2</sup>	2 x (0.5 ... 1.5)					
• AWG cables, solid or stranded	AWG	2 x (20 ... 14)					
Max. external diameter of the conductor insulation	mm	3.6					

<sup>1)</sup> "Technical specifications" for 3RV16 voltage transformer circuit breakers, see page 7/25.


<sup>2)</sup> If two different conductor cross-sections are connected to one clamping point, both cross-sections must be in the range specified.


## Motor Starter Protectors/Circuit Breakers

### SIRIUS 3RV2 Motor Starter Protectors/Circuit Breakers

General data

**Voltage transformer circuit breakers**

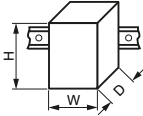General data					
<b>Type</b>			<b>3RV1611-1AG14</b>	<b>3RV1611-1CG14</b>	<b>3RV1611-1DG14</b>
Size			S00	S00	S00
Dimensions (W x H x D)		mm	45 x 90 x 70	45 x 90 x 70	45 x 90 x 70
<b>Rated current <math>I_n</math></b>	A		1.4	2.5	3
<b>Ambient temperature</b>					
• During storage/transport	°C		-50 ... +80		
• During operation	°C		-20 ... +60 (up to +70 °C possible with current reduction)		
<b>Rated operational voltage <math>U_e</math></b>	V		400		
<b>Rated frequency</b>	Hz		16.66 ... 60		
<b>Rated insulation voltage <math>U_i</math></b>	V		690		
<b>Short-circuit breaking capacity <math>I_{cu}</math> at 400 V AC</b>	kA		50		
<b>Set value of the thermal overload release</b>	A		1.4	2.5	3
<b>Response value of the instantaneous electronic release</b>	A		6 ± 20%	10.5 ± 20%	20 ± 20%
<b>Tripping time of the instantaneous electronic release</b>	ms		Approx. 6 at 12 A	Approx. 6 at 20 A	Approx. 6 at 40 A
<b>Internal resistance</b>					
• In cold state	Ω		> 0.25 ± 6.5%		
• In heated state	Ω		> 0.30 ± 6.5%		
<b>Shock resistance</b> acc. to IEC 60068-2-27	g/ms		15		
<b>Degree of protection</b> acc. to IEC 60529			IP20		
<b>Touch protection</b> acc. to IEC 60529			Finger-safe for vertical contact from the front		
<b>Service life</b>					
• Mechanical	Operating cycles		10 000		
• Electrical	Operating cycles		10 000		
<b>Permissible mounting position</b>			Any		

Type			<b>3RV1611-1AG14</b>	<b>3RV1611-1CG14</b>	<b>3RV1611-1DG14</b>
<b>Conductor cross-sections, main circuit, 1 or 2 conductors</b>					
<b>Connection type</b>			 <b>Screw terminals</b>		
<b>Terminal screw</b>			Pozidriv size 2		
<b>Conductor cross-sections (min./max.), 1 or 2 conductors can be connected</b>					
• Solid or stranded	mm <sup>2</sup>		2 x (0.5 ... 1.5) <sup>1)</sup> , 2 x (0.75 ... 2.5) <sup>1)</sup> , 2 x (1 ... 4)		
• Finely stranded with end sleeve (DIN 46228-1)	mm <sup>2</sup>		2 x (0.5 ... 1.5) <sup>1)</sup> , 2 x (0.75 ... 2.5) <sup>1)</sup>		
<b>Auxiliary switches for blocking the distance protection</b>					
<b>With defined lateral assignment for blocking distance protection</b>			1 CO (for use as 1 NO or 1 NC)		
<b>Rated operational voltage <math>U_e</math></b>	Alternating voltage	V	125		
<b>Rated operational current <math>I_e</math> /AC-14</b>	At $U_e = 125$ V	A	0.1		
<b>Rated operational voltage <math>U_e</math></b>	Direct voltage L/R 200 ms	V	60		
<b>Rated operational current <math>I_e</math> /DC-13</b>	At $U_e = 60$ V	A	0.3		
<b>Minimum load capacity</b>		V	5		
		mA	1		
<b>Short-circuit protection for auxiliary circuit</b>					
<b>Melting fuse</b>	A		250 V type FF 2A (prospective short-circuit current < 1.1 kA)		

<sup>1)</sup> If two different conductor cross-sections are connected to one clamping point, both cross-sections must be in the range specified.



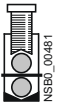


## Motor Starter Protectors/Circuit Breakers

### SIRIUS 3RV2 Motor Starter Protectors/Circuit Breakers

#### General data

#### Terminals for "Self-Protected Combination Motor Controllers (Type E) according to UL 508/UL 60947-4-1"

Type	3RV2928-1H	
<b>Prescribed tightening torque</b>	Nm	2.5 ... 3
<b>Conductor cross-sections</b>		
<ul style="list-style-type: none"> <li>• Front clamping point connected</li> </ul> 		
<ul style="list-style-type: none"> <li>- Solid</li> </ul>	mm <sup>2</sup>	1 ... 10
<ul style="list-style-type: none"> <li>- Finely stranded with end sleeve</li> </ul>	mm <sup>2</sup>	1 ... 16
<ul style="list-style-type: none"> <li>- Stranded</li> </ul>	mm <sup>2</sup>	2.5 ... 25
<ul style="list-style-type: none"> <li>- AWG cables, solid or stranded</li> </ul>	AWG	14 ... 3
<ul style="list-style-type: none"> <li>- Terminal screw</li> </ul>		M4
<ul style="list-style-type: none"> <li>• Rear clamping point connected</li> </ul> 		
<ul style="list-style-type: none"> <li>- Solid</li> </ul>	mm <sup>2</sup>	1 ... 10
<ul style="list-style-type: none"> <li>- Finely stranded with end sleeve</li> </ul>	mm <sup>2</sup>	1 ... 16
<ul style="list-style-type: none"> <li>- Stranded</li> </ul>	mm <sup>2</sup>	1.5 ... 25
<ul style="list-style-type: none"> <li>- AWG cables, solid or stranded</li> </ul>	AWG	14 ... 6
<ul style="list-style-type: none"> <li>- Terminal screw</li> </ul>		M4
<ul style="list-style-type: none"> <li>• Both clamping points connected</li> </ul> 		
<ul style="list-style-type: none"> <li>- Front clamping point:</li> </ul>		
<ul style="list-style-type: none"> <li>- Solid</li> </ul>	mm <sup>2</sup>	1 ... 10
<ul style="list-style-type: none"> <li>- Finely stranded with end sleeve</li> </ul>	mm <sup>2</sup>	1 ... 10 <sup>1)</sup> , 1 ... 6 <sup>1)</sup>
<ul style="list-style-type: none"> <li>- Stranded</li> </ul>	mm <sup>2</sup>	2.5 ... 10
<ul style="list-style-type: none"> <li>- AWG cables, solid or stranded</li> </ul>	AWG	14 ... 6
<ul style="list-style-type: none"> <li>- Terminal screw</li> </ul>		M4
<ul style="list-style-type: none"> <li>- Rear clamping point:</li> </ul>		
<ul style="list-style-type: none"> <li>- Solid</li> </ul>	mm <sup>2</sup>	1 ... 10
<ul style="list-style-type: none"> <li>- Finely stranded with end sleeve</li> </ul>	mm <sup>2</sup>	1 ... 10 <sup>1)</sup> , 1 ... 16 <sup>1)</sup>
<ul style="list-style-type: none"> <li>- Stranded</li> </ul>	mm <sup>2</sup>	2.5 ... 10
<ul style="list-style-type: none"> <li>- AWG cables, solid or stranded</li> </ul>	AWG	16 ... 3
<ul style="list-style-type: none"> <li>- Terminal screw</li> </ul>		M4

<sup>1)</sup> The following connections are possible when both clamping points are connected:

- front 1 ... 10 mm<sup>2</sup> and rear 1 ... 10 mm<sup>2</sup>,
- front 1 ... 6 mm<sup>2</sup> and rear 1 ... 16 mm<sup>2</sup>.

## Motor Starter Protectors/Circuit Breakers

### SIRIUS 3RV2 Motor Starter Protectors/Circuit Breakers

#### General data

Motor feeder connectors for motor starter protectors/circuit breakers with screw terminals			
Version	Type	3RT1900-4RE01 Motor feeder connector S0	3RT1926-4RD01 Adapter S0
<b>General data</b>			
<b>Rated insulation voltage <math>U_i</math></b> (pollution degree 3)	V	690	
<b>Rated impulse withstand voltage <math>U_{imp}</math></b> (pollution degree 3)	kV	6	
<b>Rated operational voltage <math>U_e</math></b>	V	440	
<b>Rated frequency <math>f</math></b> For AC operation	Hz	50/60	
<b>Rated operational current <math>I_e</math></b> AC-3 at 400 V	A	25	
<b>Mechanical endurance</b>	Operating cycles	10 million	
<b>Electrical endurance at <math>I_e</math></b>	Operating cycles	1 million	
<b>Protective separation according to IEC 60947-1</b> (pollution degree 3)	V	400	
<b>Permissible ambient temperature</b>			
• During operation	°C	-25 ... +60	
• During storage	°C	-50 ... +80	
<b>Degree of protection acc. to IEC 60529</b>		IP20 (front side)	
<b>Conductor cross-sections</b>			
<b>Connection type</b>		<b>⊕ Screw terminals</b>	
• Solid	mm <sup>2</sup>	1 x (0.5 ... 6)	
• Finely stranded without/with end sleeve	mm <sup>2</sup>	1 x (0.5 ... 6)	
• Stranded	mm <sup>2</sup>	1 x (0.5 ... 6)	
• AWG cables, solid or stranded	AWG	1 x (20 ... 10)	
• Tightening torque	Nm	0.6 ... 0.8	
• Corresponding opening tool		Cross-tip screwdriver PZ2	
<b>Ⓢ and Ⓜ rated data</b>			
Rated operational voltage $U_e$	V	480	
Rated insulation voltage $U_i$	V	600	
Uninterrupted current, at 40 °C	A	25	
Short-circuit protection <sup>1)</sup>			
• At 600 V	kA	5	
• CLASS RK5 fuse	A	100	
• Circuit breakers with overload protection acc. to UL 489	A	100	
<b>Combination motor controllers type E according to UL 508</b>			
	At 480 V	Type	3RV202
		A	22
		kA	65
	At 600 V	Type	3RV202
		A	22
		kA	10

<sup>1)</sup> For more information about short-circuit values, e.g. for protection against high short-circuit currents, see the [UL reports of the individual devices](http://www.siemens.com/sirius/manuals), [www.siemens.com/sirius/manuals](http://www.siemens.com/sirius/manuals).

# Motor Starter Protectors/Circuit Breakers


## SIRIUS 3RV2 Motor Starter Protectors/Circuit Breakers

For motor protection **IE3/IE4 ready**

### Selection and ordering data

**CLASS 10, without auxiliary switches**

PU (UNIT, SET, M) = 1  
 PS\* = 1 unit  
 PG = 41E

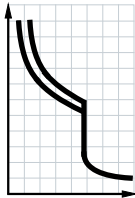

3RV2011-0AA10



3RV2011-0EA20



3RV2021-4AA10



3RV2021-4AA20

Rated current	Suitable for three-phase motors <sup>1)</sup> with P	Setting range for thermal overload release	Instantaneous electronic release	Short-circuit breaking capacity at 400 V AC	SD	Screw terminals	SD	Spring-type terminals	
$I_n$			$I >$	$I_{cu}$	d	Article No.	Price per PU	Article No.	Price per PU
A	kW	A	A	kA	d				
<b>Size S00</b>									
0.16	0.04	0.11 ... 0.16	2.1	100		3RV2011-0AA10		3RV2011-0AA20	
0.2	0.06	0.14 ... 0.2	2.6	100		3RV2011-0BA10		3RV2011-0BA20	
0.25	0.06	0.18 ... 0.25	3.3	100		3RV2011-0CA10		3RV2011-0CA20	
0.32	0.09	0.22 ... 0.32	4.2	100		3RV2011-0DA10		3RV2011-0DA20	
0.4	0.09	0.28 ... 0.4	5.2	100		3RV2011-0EA10		3RV2011-0EA20	
0.5	0.12	0.35 ... 0.5	6.5	100		3RV2011-0FA10		3RV2011-0FA20	
0.63	0.18	0.45 ... 0.63	8.2	100		3RV2011-0GA10		3RV2011-0GA20	
0.8	0.18	0.55 ... 0.8	10	100		3RV2011-0HA10		3RV2011-0HA20	
1	0.25	0.7 ... 1	13	100		3RV2011-0JA10		3RV2011-0JA20	
1.25	0.37	0.9 ... 1.25	16	100		3RV2011-0KA10		3RV2011-0KA20	
1.6	0.55	1.1 ... 1.6	21	100		3RV2011-1AA10		3RV2011-1AA20	
2	0.75	1.4 ... 2	26	100		3RV2011-1BA10		3RV2011-1BA20	
2.5	0.75	1.8 ... 2.5	33	100		3RV2011-1CA10		3RV2011-1CA20	
3.2	1.1	2.2 ... 3.2	42	100		3RV2011-1DA10		3RV2011-1DA20	
4	1.5	2.8 ... 4	52	100		3RV2011-1EA10		3RV2011-1EA20	
5	1.5	3.5 ... 5	65	100		3RV2011-1FA10		3RV2011-1FA20	
6.3	2.2	4.5 ... 6.3	82	100		3RV2011-1GA10		3RV2011-1GA20	
8	3	5.5 ... 8	104	100		3RV2011-1HA10		3RV2011-1HA20	
10	4	7 ... 10	130	100		3RV2011-1JA10		3RV2011-1JA20	
12.5	5.5	9 ... 12.5	163	100		3RV2011-1KA10		3RV2011-1KA20	
16	7.5	10 <sup>2)</sup> ... 16	208	55		3RV2011-4AA10		3RV2011-4AA20	
<b>Size S0</b>									
0.63	0.18	0.45 ... 0.63	8.2	100	5	3RV2021-0GA10	5	3RV2021-0GA20	
0.8	0.18	0.55 ... 0.8	10	100	5	3RV2021-0HA10	5	3RV2021-0HA20	
1	0.25	0.7 ... 1	13	100	5	3RV2021-0JA10	5	3RV2021-0JA20	
1.25	0.37	0.9 ... 1.25	16	100	5	3RV2021-0KA10	5	3RV2021-0KA20	
1.6	0.55	1.1 ... 1.6	21	100	5	3RV2021-1AA10	5	3RV2021-1AA20	
2	0.75	1.4 ... 2	26	100	5	3RV2021-1BA10	5	3RV2021-1BA20	
2.5	0.75	1.8 ... 2.5	33	100	5	3RV2021-1CA10	5	3RV2021-1CA20	
3.2	1.1	2.2 ... 3.2	42	100	5	3RV2021-1DA10	5	3RV2021-1DA20	
4	1.5	2.8 ... 4	52	100	5	3RV2021-1EA10	5	3RV2021-1EA20	
5	1.5	3.5 ... 5	65	100	5	3RV2021-1FA10	5	3RV2021-1FA20	
6.3	2.2	4.5 ... 6.3	82	100	5	3RV2021-1GA10	5	3RV2021-1GA20	
8	3	5.5 ... 8	104	100	5	3RV2021-1HA10	5	3RV2021-1HA20	
10	4	7 ... 10	130	100	5	3RV2021-1JA10	5	3RV2021-1JA20	
12.5	5.5	9 ... 12.5	163	100	5	3RV2021-1KA10	5	3RV2021-1KA20	
16	7.5	10 <sup>2)</sup> ... 16	208	55		3RV2021-4AA10		3RV2021-4AA20	
20	7.5	13 <sup>2)</sup> ... 20	260	55		3RV2021-4BA10		3RV2021-4BA20	
22	11	16 <sup>2)</sup> ... 22	286	55		3RV2021-4CA10		3RV2021-4CA20	
25	11	18 <sup>2)</sup> ... 25	325	55		3RV2021-4DA10		3RV2021-4DA20	
28	15	23 ... 28	364	55		3RV2021-4NA10		3RV2021-4NA20	
32 <sup>3)</sup>	15	27 ... 32	400	55		3RV2021-4EA10		3RV2021-4EA20	
36 <sup>4)</sup>	18.5	30 ... 36	432	20		3RV2021-4PA10		--	
40 <sup>4)</sup>	18.5	34 ... 40	480	20		3RV2021-4FA10		--	

1) Guide value for 4-pole standard motors at 50 Hz 400 V AC. The actual starting and rated data of the motor to be protected must be considered when selecting the units.  
 2) The setting range of the thermal overload releases has been extended.  
 3) Suitable for use with IE3/IE4 motors up to a starting current of 256 A. For higher starting currents we recommend using 3RV2 motor starter protectors size S2.

4) The devices must not be mounted side-by-side and they must not be assembled with link modules with contactors. A lateral clearance of 9 mm is required. For use with IE3/IE4 motors we recommend using 3RV2 motor starter protectors size S2.

Auxiliary switches and other accessories can be ordered separately (see "Accessories" from page 7/42 onwards).


## Motor Starter Protectors/Circuit Breakers

### SIRIUS 3RV2 Motor Starter Protectors/Circuit Breakers

IE3/IE4 ready

For motor protection

#### CLASS 10, without auxiliary switches

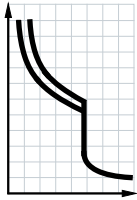

3RV2031-4SA10



3RV2032-4RA10



3RV2042-4MA10

Rated current	Suitable for three-phase motors <sup>1)</sup> with P	Setting range for thermal overload release	Instantaneous electronic release	Short-circuit breaking capacity at 400 V AC	SD	Screw terminals	PU (UNIT, SET, M)	PS*	PG
$I_n$				$I_{cu}$	d	Article No.	Price per PU		
A	kW	A	A	kA					
<b>Size S2</b>									
14	5.5	9.5 ... 14	208	65	▶	3RV2031-4SA10	1	1 unit	41E
17	7.5	12 ... 17	260	65	▶▶	3RV2031-4TA10	1	1 unit	41E
20	7.5	14 ... 20	260	65	▶▶▶	3RV2031-4BA10	1	1 unit	41E
25	11	18 ... 25	325	65	▶▶▶▶	3RV2031-4DA10	1	1 unit	41E
32	15	22 ... 32	416	65	▶▶▶▶▶	3RV2031-4EA10	1	1 unit	41E
36	18.5	28 ... 36	520	65	▶▶▶▶▶▶	3RV2031-4PA10	1	1 unit	41E
40	18.5	32 ... 40	585	65	▶▶▶▶▶▶▶	3RV2031-4UA10	1	1 unit	41E
45	22	35 ... 45	650	65	▶▶▶▶▶▶▶▶	3RV2031-4VA10	1	1 unit	41E
52	22	42 ... 52	741	65	▶▶▶▶▶▶▶▶▶	3RV2031-4WA10	1	1 unit	41E
59	30	49 ... 59	845	65	▶▶▶▶▶▶▶▶▶▶	3RV2031-4XA10	1	1 unit	41E
65	30	54 ... 65	845	65	▶▶▶▶▶▶▶▶▶▶▶	3RV2031-4JA10	1	1 unit	41E
73	37	62 ... 73	949	65	▶▶▶▶▶▶▶▶▶▶▶▶	3RV2031-4KA10	1	1 unit	41E
80 <sup>2)</sup>	37	70 ... 80	1 040	65	▶▶▶▶▶▶▶▶▶▶▶▶▶	3RV2031-4RA10	1	1 unit	41E
<b>Size S2, with increased switching capacity</b>									
14	5.5	9.5 ... 14	208	100	▶	3RV2032-4SA10	1	1 unit	41E
17	7.5	12 ... 17	260	100	▶▶	3RV2032-4TA10	1	1 unit	41E
20	7.5	14 ... 20	260	100	▶▶▶	3RV2032-4BA10	1	1 unit	41E
25	11	18 ... 25	325	100	▶▶▶▶	3RV2032-4DA10	1	1 unit	41E
32	15	22 ... 32	416	100	▶▶▶▶▶	3RV2032-4EA10	1	1 unit	41E
36	18.5	28 ... 36	520	100	▶▶▶▶▶▶	3RV2032-4PA10	1	1 unit	41E
40	18.5	32 ... 40	585	100	▶▶▶▶▶▶▶	3RV2032-4UA10	1	1 unit	41E
45	22	35 ... 45	650	100	▶▶▶▶▶▶▶▶	3RV2032-4VA10	1	1 unit	41E
52	22	42 ... 52	741	100	▶▶▶▶▶▶▶▶▶	3RV2032-4WA10	1	1 unit	41E
59	30	49 ... 59	845	100	▶▶▶▶▶▶▶▶▶▶	3RV2032-4XA10	1	1 unit	41E
65	30	54 ... 65	845	100	▶▶▶▶▶▶▶▶▶▶▶	3RV2032-4JA10	1	1 unit	41E
73	37	62 ... 73	949	100	▶▶▶▶▶▶▶▶▶▶▶▶	3RV2032-4KA10	1	1 unit	41E
80 <sup>2)</sup>	37	70 ... 80	1 040	100	▶▶▶▶▶▶▶▶▶▶▶▶▶	3RV2032-4RA10	1	1 unit	41E
<b>Size S3</b>									
40	18.5	28 ... 40	520	65	1	3RV2041-4FA10	1	1 unit	41E
50	22	36 ... 50	650	65	1	3RV2041-4HA10	1	1 unit	41E
63	30	45 ... 63	819	65	1	3RV2041-4JA10	1	1 unit	41E
75	37	57 ... 75	975	65	1	3RV2041-4KA10	1	1 unit	41E
84	45	65 ... 84	1 170	65	1	3RV2041-4RA10	1	1 unit	41E
93	45	75 ... 93	1 300	65	1	3RV2041-4YA10	1	1 unit	41E
100 <sup>3)</sup>	45, 55	80 ... 100	1 300	65	1	3RV2041-4MA10	1	1 unit	41E
<b>Size S3, with increased switching capacity</b>									
40	18.5	28 ... 40	520	100	1	3RV2042-4FA10	1	1 unit	41E
50	22	36 ... 50	650	100	1	3RV2042-4HA10	1	1 unit	41E
63	30	45 ... 63	819	100	1	3RV2042-4JA10	1	1 unit	41E
75	37	57 ... 75	975	100	1	3RV2042-4KA10	1	1 unit	41E
84	45	65 ... 84	1 170	100	1	3RV2042-4RA10	1	1 unit	41E
93	45	75 ... 93	1 300	100	1	3RV2042-4YA10	1	1 unit	41E
100 <sup>3)</sup>	45, 55	80 ... 100	1 300	100	1	3RV2042-4MA10	1	1 unit	41E

<sup>1)</sup> Guide value for 4-pole standard motors at 50 Hz 400 V AC. The actual starting and rated data of the motor to be protected must be considered when selecting the units.

<sup>2)</sup> Suitable for use with IE3/IE4 motors up to a starting current of 720 A. For higher starting currents we recommend using motor starter protectors size S3.

<sup>3)</sup> Suitable for use with IE3/IE4 motors up to a starting current of 780 A. For higher starting currents we recommend using 3VA circuit breakers (see Catalog LV 10).

Auxiliary switches and other accessories can be ordered separately (see "Accessories" from page 7/42 onwards).


# Motor Starter Protectors/Circuit Breakers

## SIRIUS 3RV2 Motor Starter Protectors/Circuit Breakers

For motor protection **IE3/IE4 ready**

**CLASS 10, with transverse auxiliary switch (1 NO + 1 NC)**

PU (UNIT, SET, M) = 1  
 PS\* = 1 UNIT  
 PG = 41E

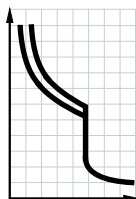

3RV2011-4AA15 with integrated transverse auxiliary switch



3RV2011-0EA25 with integrated transverse auxiliary switch



3RV2021-4AA15 with integrated transverse auxiliary switch



3RV2021-4AA25 with integrated transverse auxiliary switch

Rated current	Suitable for three-phase motors <sup>1)</sup> with P	Setting range for thermal overload release	Instantaneous electronic release	Short-circuit breaking capacity at 400 V AC	SD	Screw terminals	SD	Spring-type terminals	
$I_n$			$I >$	$I_{cu}$	d	Article No.	Price per PU	Article No.	Price per PU
A	kW	A	A	kA			d		
<b>Size S00</b>									
0.16	0.04	0.11 ... 0.16	2.1	100	▶	3RV2011-0AA15	▶	3RV2011-0AA25	
0.2	0.06	0.14 ... 0.2	2.6	100	▶▶	3RV2011-0BA15	▶▶	3RV2011-0BA25	
0.25	0.06	0.18 ... 0.25	3.3	100	▶▶▶	3RV2011-0CA15	▶▶▶	3RV2011-0CA25	
0.32	0.09	0.22 ... 0.32	4.2	100	▶▶▶▶	3RV2011-0DA15	▶▶▶▶	3RV2011-0DA25	
0.4	0.09	0.28 ... 0.4	5.2	100	▶▶▶▶▶	3RV2011-0EA15	▶▶▶▶▶	3RV2011-0EA25	
0.5	0.12	0.35 ... 0.5	6.5	100	▶▶▶▶▶▶	3RV2011-0FA15	▶▶▶▶▶▶	3RV2011-0FA25	
0.63	0.18	0.45 ... 0.63	8.2	100	▶▶▶▶▶▶▶	3RV2011-0GA15	▶▶▶▶▶▶▶	3RV2011-0GA25	
0.8	0.18	0.55 ... 0.8	10	100	▶▶▶▶▶▶▶▶	3RV2011-0HA15	▶▶▶▶▶▶▶▶	3RV2011-0HA25	
1	0.25	0.7 ... 1	13	100	▶▶▶▶▶▶▶▶▶	3RV2011-0JA15	▶▶▶▶▶▶▶▶▶	3RV2011-0JA25	
1.25	0.37	0.9 ... 1.25	16	100	▶▶▶▶▶▶▶▶▶▶	3RV2011-0KA15	▶▶▶▶▶▶▶▶▶▶	3RV2011-0KA25	
1.6	0.55	1.1 ... 1.6	21	100	▶▶▶▶▶▶▶▶▶▶▶	3RV2011-1AA15	▶▶▶▶▶▶▶▶▶▶▶	3RV2011-1AA25	
2	0.75	1.4 ... 2	26	100	▶▶▶▶▶▶▶▶▶▶▶▶	3RV2011-1BA15	▶▶▶▶▶▶▶▶▶▶▶▶	3RV2011-1BA25	
2.5	0.75	1.8 ... 2.5	33	100	▶▶▶▶▶▶▶▶▶▶▶▶▶	3RV2011-1CA15	▶▶▶▶▶▶▶▶▶▶▶▶▶	3RV2011-1CA25	
3.2	1.1	2.2 ... 3.2	42	100	▶▶▶▶▶▶▶▶▶▶▶▶▶▶	3RV2011-1DA15	▶▶▶▶▶▶▶▶▶▶▶▶▶▶	3RV2011-1DA25	
4	1.5	2.8 ... 4	52	100	▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶	3RV2011-1EA15	▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶	3RV2011-1EA25	
5	1.5	3.5 ... 5	65	100	▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶	3RV2011-1FA15	▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶	3RV2011-1FA25	
6.3	2.2	4.5 ... 6.3	82	100	▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶	3RV2011-1GA15	▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶	3RV2011-1GA25	
8	3	5.5 ... 8	104	100	▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶	3RV2011-1HA15	▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶	3RV2011-1HA25	
10	4	7 ... 10	130	100	▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶	3RV2011-1JA15	▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶	3RV2011-1JA25	
12.5	5.5	9 ... 12.5	163	100	▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶	3RV2011-1KA15	▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶	3RV2011-1KA25	
16	7.5	10 <sup>2)</sup> ... 16	208	55	▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶	3RV2011-4AA15	▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶	3RV2011-4AA25	
<b>Size S0</b>									
16	7.5	10 <sup>2)</sup> ... 16	208	55	▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶	3RV2021-4AA15	▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶	3RV2021-4AA25	
20	7.5	13 <sup>2)</sup> ... 20	260	55	▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶	3RV2021-4BA15	▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶	3RV2021-4BA25	
22	11	16 <sup>2)</sup> ... 22	286	55	▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶	3RV2021-4CA15	▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶	3RV2021-4CA25	
25	11	18 <sup>2)</sup> ... 25	325	55	▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶	3RV2021-4DA15	▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶	3RV2021-4DA25	
28	15	23 ... 28	364	55	▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶	3RV2021-4NA15	▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶	3RV2021-4NA25	
32 <sup>3)</sup>	15	27 ... 32	400	55	▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶	3RV2021-4EA15	▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶	3RV2021-4EA25	
36 <sup>4)</sup>	18.5	30 ... 36	432	20	▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶	3RV2021-4PA15	▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶	--	
40 <sup>4)</sup>	18.5	34 ... 40	480	20	▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶	3RV2021-4FA15	▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶▶	--	


1) Guide value for 4-pole standard motors at 50 Hz 400 V AC. The actual starting and rated data of the motor to be protected must be considered when selecting the units.  
 2) The setting range of the thermal overload releases has been extended.  
 3) Suitable for use with IE3/IE4 motors up to a starting current of 256 A. For higher starting currents we recommend using 3RV2 motor starter protectors size S2.  
 4) The devices must not be mounted side-by-side and they must not be assembled with link modules with contactors. A lateral clearance of 9 mm is required. For use with IE3/IE4 motors we recommend using 3RV2 motor starter protectors size S2.

Auxiliary switches and other accessories can be ordered separately (see "Accessories" from page 7/42 onwards).

## Motor Starter Protectors/Circuit Breakers




### SIRIUS 3RV2 Motor Starter Protectors/Circuit Breakers

**IE3/IE4 ready** For motor protection

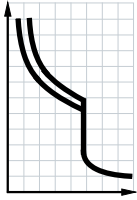**CLASS 10, with transverse auxiliary switch (1 NO + 1 NC)**

**3RV2031-4SA15**  
With integrated  
auxiliary switch

**3RV2032-4SA15**  
With integrated  
auxiliary switch

**3RV2041-4FA15**  
With integrated  
auxiliary switch

Rated current	Suitable for three-phase motors <sup>1)</sup> with P	Setting range for thermal overload release	Instantaneous electronic release	Short-circuit breaking capacity at 400 V AC	SD	Screw terminals 	PU (UNIT, SET, M)	PS*	PG
$I_n$				$I_{cu}$		Article No.	Price per PU		
A	kW	A	A	kA	d				
<b>Size S2 <span style="color: green;">NEW</span></b>									
14	5.5	9.5 ... 14	208	65	5	<b>3RV2031-4SA15</b>	1	1 unit	41E
17	7.5	12 ... 17	260	65	5	<b>3RV2031-4TA15</b>	1	1 unit	41E
20	7.5	14 ... 20	260	65	5	<b>3RV2031-4BA15</b>	1	1 unit	41E
25	11	18 ... 25	325	65	5	<b>3RV2031-4DA15</b>	1	1 unit	41E
32	15	22 ... 32	416	65	5	<b>3RV2031-4EA15</b>	1	1 unit	41E
36	18.5	28 ... 36	520	65	5	<b>3RV2031-4PA15</b>	1	1 unit	41E
40	18.5	32 ... 40	585	65	5	<b>3RV2031-4UA15</b>	1	1 unit	41E
45	22	35 ... 45	650	65	5	<b>3RV2031-4VA15</b>	1	1 unit	41E
52	22	42 ... 52	741	65	5	<b>3RV2031-4WA15</b>	1	1 unit	41E
59	30	49 ... 59	845	65	5	<b>3RV2031-4XA15</b>	1	1 unit	41E
65	30	54 ... 65	845	65	5	<b>3RV2031-4JA15</b>	1	1 unit	41E
73	37	62 ... 73	949	65	5	<b>3RV2031-4KA15</b>	1	1 unit	41E
80 <sup>2)</sup>	37	70 ... 80	1 040	65	5	<b>3RV2031-4RA15</b>	1	1 unit	41E
<b>Size S2, with increased switching capacity <span style="color: green;">NEW</span></b>									
14	5.5	9.5 ... 14	208	10	5	<b>3RV2032-4SA15</b>	1	1 unit	41E
17	7.5	12 ... 17	260	100	5	<b>3RV2032-4TA15</b>	1	1 unit	41E
20	7.5	14 ... 20	260	100	5	<b>3RV2032-4BA15</b>	1	1 unit	41E
25	11	18 ... 25	325	100	5	<b>3RV2032-4DA15</b>	1	1 unit	41E
32	15	22 ... 32	416	100	5	<b>3RV2032-4EA15</b>	1	1 unit	41E
36	18.5	28 ... 36	520	100	5	<b>3RV2032-4PA15</b>	1	1 unit	41E
40	18.5	32 ... 40	585	100	5	<b>3RV2032-4UA15</b>	1	1 unit	41E
45	22	35 ... 45	650	100	5	<b>3RV2032-4VA15</b>	1	1 unit	41E
52	22	42 ... 52	741	100	5	<b>3RV2032-4WA15</b>	1	1 unit	41E
59	30	49 ... 59	845	100	5	<b>3RV2032-4XA15</b>	1	1 unit	41E
65	30	54 ... 65	845	100	5	<b>3RV2032-4JA15</b>	1	1 unit	41E
73	37	62 ... 73	949	100	5	<b>3RV2032-4KA15</b>	1	1 unit	41E
80 <sup>2)</sup>	37	70 ... 80	1 040	100	5	<b>3RV2032-4RA15</b>	1	1 unit	41E
<b>Size S3 <span style="color: green;">NEW</span></b>									
40	18.5	28 ... 40	520	65	5	<b>3RV2041-4FA15</b>	1	1 unit	41E
50	22	36 ... 50	650	65	5	<b>3RV2041-4HA15</b>	1	1 unit	41E
63	30	45 ... 63	819	65	3	<b>3RV2041-4JA15</b>	1	1 unit	41E
75	37	57 ... 75	975	65	5	<b>3RV2041-4KA15</b>	1	1 unit	41E
84	45	65 ... 84	1 170	65	▶	<b>3RV2041-4RA15</b>	1	1 unit	41E
93	45	75 ... 93	1 300	65	▶	<b>3RV2041-4YA15</b>	1	1 unit	41E
100 <sup>3)</sup>	45, 55	80 ... 100	1 300	65	5	<b>3RV2041-4MA15</b>	1	1 unit	41E

<sup>1)</sup> Guide value for 4-pole standard motors at 50 Hz 400 V AC. The actual starting and rated data of the motor to be protected must be considered when selecting the units.

<sup>2)</sup> Suitable for use with IE3/IE4 motors up to a starting current of 720 A. For higher starting currents we recommend using size S3 motor starter protectors.

<sup>3)</sup> Suitable for use with IE3/IE4 motors up to a starting current of 780 A. For higher starting currents we recommend using 3VA circuit breakers (see Catalog LV 10).


Auxiliary switches and other accessories can be ordered separately (see "Accessories" from page 7/42 onwards).

## Motor Starter Protectors/Circuit Breakers

### SIRIUS 3RV2 Motor Starter Protectors/Circuit Breakers

For motor protection **IE3/IE4 ready**

**CLASS 20, without auxiliary switches**

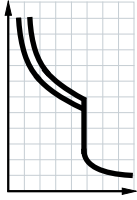

3RV2031-4SB10






3RV2031-4WB10



3RV2042-4FB10



3RV2042-4KB10

Rated current	Suitable for three-phase motors <sup>1)</sup> with P	Setting range for thermal overload release	Instantaneous electronic release	Short-circuit breaking capacity at 400 V AC	SD	Screw terminals 	PU (UNIT, SET, M)	PS*	PG
$I_n$				$I_{cu}$	d	Article No.	Price per PU		
A	kW	A	A	kA					
<b>Size S2</b>									
14	5.5	9.5 ... 14	208	65	2	3RV2031-4SB10	1	1 unit	41E
17	7.5	12 ... 17	260	65	2	3RV2031-4TB10	1	1 unit	41E
20	7.5	14 ... 20	260	65	2	3RV2031-4BB10	1	1 unit	41E
25	11	18 ... 25	325	65	2	3RV2031-4DB10	1	1 unit	41E
32	15	22 ... 32	416	65	2	3RV2031-4EB10	1	1 unit	41E
36	18.5	28 ... 36	520	65	2	3RV2031-4PB10	1	1 unit	41E
40	18.5	32 ... 40	585	65	2	3RV2031-4UB10	1	1 unit	41E
45	22	35 ... 45	650	65	2	3RV2031-4VB10	1	1 unit	41E
52	22	42 ... 52	741	65	2	3RV2031-4WB10	1	1 unit	41E
59	30	49 ... 59	845	65	▶	3RV2031-4XB10	1	1 unit	41E
65	30	54 ... 65	845	65	▶	3RV2031-4JB10	1	1 unit	41E
<b>Size S3, with increased switching capacity</b>									
40	18.5	28 ... 40	520	100	2	3RV2042-4FB10	1	1 unit	41E
50	22	36 ... 50	650	100	2	3RV2042-4HB10	1	1 unit	41E
63	30	45 ... 63	819	100	2	3RV2042-4JB10	1	1 unit	41E
75	37	57 ... 75	975	100	2	3RV2042-4KB10	1	1 unit	41E
84	45	65 ... 84	1 170	100	2	3RV2042-4RB10	1	1 unit	41E
93	45	75 ... 93	1 300	100	2	3RV2042-4YB10	1	1 unit	41E
100 <sup>2)</sup>	45, 55	80 ... 100	1 300	100	2	3RV2042-4MB10	1	1 unit	41E

<sup>1)</sup> Guide value for 4-pole standard motors at 50 Hz 400 V AC. The actual starting and rated data of the motor to be protected must be considered when selecting the units.

<sup>2)</sup> Suitable for use with IE3/IE4 motors up to a starting current of 780 A. For higher starting currents we recommend using 3VA circuit breakers (see Catalog LV 10).

Auxiliary switches and other accessories can be ordered separately (see "Accessories" from page 7/42 onwards).


## Motor Starter Protectors/Circuit Breakers

### SIRIUS 3RV2 Motor Starter Protectors/Circuit Breakers

IE3/IE4 ready

For motor protection

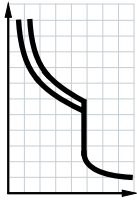


#### CLASS 20, with transverse auxiliary switch (1 NO + 1 NC)



3RV2031-4SB15



3RV2031-4WB15

Rated current	Suitable for three-phase motors <sup>1)</sup> with P	Setting range for thermal overload release	Instantaneous electronic release	Short-circuit breaking capacity at 400 V AC	SD	Screw terminals 	PU (UNIT, SET, M)	PS*	PG
$I_n$				$I_{cu}$	d	Article No.	Price per PU		
A	kW	A	A	kA					
<b>Size S2 <span style="color: red;">NEW</span></b>									
14	5.5	9.5 ... 14	208	65	5	<b>3RV2031-4SB15</b>	1	1 unit	41E
17	7.5	12 ... 17	260	65	5	<b>3RV2031-4TB15</b>	1	1 unit	41E
20	7.5	14 ... 20	260	65	5	<b>3RV2031-4BB15</b>	1	1 unit	41E
25	11	18 ... 25	325	65	5	<b>3RV2031-4DB15</b>	1	1 unit	41E
32	15	22 ... 32	416	65	5	<b>3RV2031-4EB15</b>	1	1 unit	41E
36	18.5	28 ... 36	520	65	5	<b>3RV2031-4PB15</b>	1	1 unit	41E
40	18.5	32 ... 40	585	65	5	<b>3RV2031-4UB15</b>	1	1 unit	41E
45	22	35 ... 45	650	65	5	<b>3RV2031-4VB15</b>	1	1 unit	41E
52	22	42 ... 52	741	65	5	<b>3RV2031-4WB15</b>	1	1 unit	41E
59	30	49 ... 59	845	65	5	<b>3RV2031-4XB15</b>	1	1 unit	41E
65	30	54 ... 65	845	65	▶ 5	<b>3RV2031-4JB15</b>	1	1 unit	41E

<sup>1)</sup> Guide value for 4-pole standard motors at 50 Hz 400 V AC. The actual starting and rated data of the motor to be protected must be considered when selecting the units.

Auxiliary switches and other accessories can be ordered separately (see "Accessories" from page 7/42 onwards).




## Motor Starter Protectors/Circuit Breakers

### SIRIUS 3RV2 Motor Starter Protectors/Circuit Breakers

For motor protection with overload relay function **IE3/IE4 ready**

#### Selection and ordering data

**CLASS 10, with overload relay function (automatic RESET), without auxiliary switches**

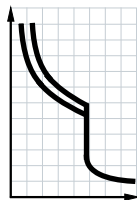

3RV2111-4FA10






3RV2111-0BA10



3RV2131-4WB10



3RV2142-4FA10

Rated current	Suitable for three-phase motors <sup>1)</sup> with P	Setting range for thermal overload release	Instantaneous electronic release	Short-circuit breaking capacity at 400 V AC	SD	Screw terminals 	PU (UNIT, SET, M)	PS*	PG
$I_n$				$I_{cu}$	d	Article No.	Price per PU		
A	kW	A	A	kA					
<b>Size S00<sup>2)</sup></b>									
0.16	0.04	0.11 ... 0.16	2.1	100	2	3RV2111-0AA10		1	1 unit 41E
0.2	0.06	0.14 ... 0.2	2.6	100	2	3RV2111-0BA10		1	1 unit 41E
0.25	0.06	0.18 ... 0.25	3.3	100	2	3RV2111-0CA10		1	1 unit 41E
0.32	0.09	0.22 ... 0.32	4.2	100	2	3RV2111-0DA10		1	1 unit 41E
0.4	0.09	0.28 ... 0.4	5.2	100	2	3RV2111-0EA10		1	1 unit 41E
0.5	0.12	0.35 ... 0.5	6.5	100	2	3RV2111-0FA10		1	1 unit 41E
0.63	0.18	0.45 ... 0.63	8.2	100	2	3RV2111-0GA10		1	1 unit 41E
0.8	0.18	0.55 ... 0.8	10	100	2	3RV2111-0HA10		1	1 unit 41E
1	0.25	0.7 ... 1	13	100	2	3RV2111-0JA10		1	1 unit 41E
1.25	0.37	0.9 ... 1.25	16	100	2	3RV2111-0KA10		1	1 unit 41E
1.6	0.55	1.1 ... 1.6	21	100	2	3RV2111-1AA10		1	1 unit 41E
2	0.75	1.4 ... 2	26	100	2	3RV2111-1BA10		1	1 unit 41E
2.5	0.75	1.8 ... 2.5	33	100	2	3RV2111-1CA10		1	1 unit 41E
3.2	1.1	2.2 ... 3.2	42	100	2	3RV2111-1DA10		1	1 unit 41E
4	1.5	2.8 ... 4	52	100	2	3RV2111-1EA10		1	1 unit 41E
5	1.5	3.5 ... 5	65	100	2	3RV2111-1FA10		1	1 unit 41E
6.3	2.2	4.5 ... 6.3	82	100	2	3RV2111-1GA10		1	1 unit 41E
8	3	5.5 ... 8	104	100	2	3RV2111-1HA10		1	1 unit 41E
10	4	7 ... 10	130	100	2	3RV2111-1JA10		1	1 unit 41E
12.5	5.5	9 ... 12.5	163	100	2	3RV2111-1KA10		1	1 unit 41E
16	7.5	10 <sup>3)</sup> ... 16	208	55	2	3RV2111-4AA10		1	1 unit 41E
<b>Size S0<sup>2)</sup></b>									
16	7.5	10 <sup>3)</sup> ... 16	208	55	2	3RV2121-4AA10		1	1 unit 41E
20	7.5	13 <sup>3)</sup> ... 20	260	55	2	3RV2121-4BA10		1	1 unit 41E
22	11	16 <sup>3)</sup> ... 22	286	55	2	3RV2121-4CA10		1	1 unit 41E
25	11	18 <sup>3)</sup> ... 25	325	55	2	3RV2121-4DA10		1	1 unit 41E
28	15	23 ... 28	364	55	2	3RV2121-4NA10		1	1 unit 41E
32 <sup>4)</sup>	15	27 ... 32	400	55	2	3RV2121-4EA10		1	1 unit 41E
<b>Size S2<sup>2)</sup></b>									
14	5.5	9.5 ... 14	208	65	2	3RV2131-4SA10		1	1 unit 41E
17	7.5	12 ... 17	260	65	2	3RV2131-4TA10		1	1 unit 41E
20	7.5	14 ... 20	260	65	2	3RV2131-4BA10		1	1 unit 41E
25	11	18 ... 25	325	65	2	3RV2131-4DA10		1	1 unit 41E
32	15	22 ... 32	416	65	2	3RV2131-4EA10		1	1 unit 41E
36	18.5	28 ... 36	520	65	2	3RV2131-4PA10		1	1 unit 41E
40	18.5	32 ... 40	585	65	2	3RV2131-4UA10		1	1 unit 41E
45	22	35 ... 45	650	65	2	3RV2131-4VA10		1	1 unit 41E
52	32	42 ... 52	741	65	2	3RV2131-4WA10		1	1 unit 41E
59	30	49 ... 59	845	65	2	3RV2131-4XA10		1	1 unit 41E
65	30	54 ... 65	845	65	2	3RV2131-4JA10		1	1 unit 41E
73	37	62 ... 73	949	65	2	3RV2131-4KA10		1	1 unit 41E
80 <sup>5)</sup>	37	70 ... 80	1 040	65	2	3RV2131-4RA10		1	1 unit 41E

<sup>1)</sup> Guide value for 4-pole standard motors at 50 Hz 400 V AC. The actual starting and rated data of the motor to be protected must be considered when selecting the units.

<sup>2)</sup> Accessories for mounting on the right and 3RV2915 three-phase busbars cannot be used.

<sup>3)</sup> The setting range of the thermal overload releases has been extended.

<sup>4)</sup> Suitable for use with IE3/IE4 motors up to a starting current of 256 A. For higher starting currents we recommend using 3RV2 motor starter protectors size S2.

<sup>5)</sup> Suitable for use with IE3/IE4 motors up to a starting current of 720 A. For higher starting currents we recommend using 3RV2 motor starter protectors size S3.


Auxiliary switches and other accessories can be ordered separately (see "Accessories" from page 7/42 onwards).

## Motor Starter Protectors/Circuit Breakers

### SIRIUS 3RV2 Motor Starter Protectors/Circuit Breakers

**IE3/IE4 ready** For motor protection with overload relay function

**CLASS 10, with overload relay function (automatic RESET), without auxiliary switches (continued)**

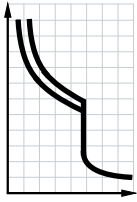

3RV2111-4FA10






3RV2111-0BA10



3RV2131-4WB10



3RV2142-4FA10

Rated current	Suitable for three-phase motors <sup>1)</sup> with $P$	Setting range for thermal overload release	Instantaneous electronic release	Short-circuit breaking capacity at 400 V AC	SD	Screw terminals 	PU (UNIT, SET, M)	PS*	PG
$I_n$				$I_{cu}$	d	Article No.	Price per PU		
A	kW	A	A	kA					
<b>Size S3, with increased switching capacity<sup>2)</sup></b>									
40	18.5	28 ... 40	520	100	2	<b>3RV2142-4FA10</b>	1	1 unit	41E
50	22	36 ... 50	650	100	2	<b>3RV2142-4HA10</b>	1	1 unit	41E
63	30	45 ... 63	819	100	2	<b>3RV2142-4JA10</b>	1	1 unit	41E
75	37	57 ... 75	975	100	2	<b>3RV2142-4KA10</b>	1	1 unit	41E
84	45	65 ... 84	1 170	100	2	<b>3RV2142-4RA10</b>	1	1 unit	41E
93	45	75 ... 93	1 300	100	2	<b>3RV2142-4YA10</b>	1	1 unit	41E
100 <sup>3)</sup>	45, 55	80 ... 100	1 300	100	2	<b>3RV2142-4MA10</b>	1	1 unit	41E

<sup>1)</sup> Guide value for 4-pole standard motors at 50 Hz 400 V AC. The actual starting and rated data of the motor to be protected must be considered when selecting the units.

<sup>2)</sup> Accessories for mounting on the right and 3RV2915 three-phase busbars cannot be used.

<sup>3)</sup> Suitable for use with IE3/IE4 motors up to a starting current of 780 A. For higher starting currents we recommend using 3VA circuit breakers (see Catalog LV 10).

Auxiliary switches and other accessories can be ordered separately (see "Accessories" from page 7/42 onwards).

## Motor Starter Protectors/Circuit Breakers


### SIRIUS 3RV2 Motor Starter Protectors/Circuit Breakers

For starter combinations **IE3/IE4 ready**

#### Selection and ordering data

##### Without auxiliary switches

PU (UNIT, SET, M) = 1  
 PS\* = 1 UNIT  
 PG = 41E

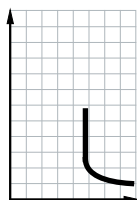

3RV2311-4AC10



3RV2311-0JC20



3RV2321-4AC10



3RV2321-4AC20

Rated current $I_n$ A	Suitable for three-phase motors <sup>1)</sup> with P kW	Thermal overload releases <sup>2)</sup> A	Instantaneous electronic release $I >$ A	Short-circuit breaking capacity at 400 V AC $I_{cu}$ kA	SD d	Screw terminals		Spring-type terminals	
						Article No.	Price per PU	Article No.	Price per PU
<b>Size S00</b>									
0.16	0.04	Without	2.1	100	5	3RV2311-0AC10	5	3RV2311-0AC20	5
0.2	0.06	Without	2.6	100	5	3RV2311-0BC10	5	3RV2311-0BC20	5
0.25	0.06	Without	3.3	100	5	3RV2311-0CC10	5	3RV2311-0CC20	5
0.32	0.09	Without	4.2	100	5	3RV2311-0DC10	5	3RV2311-0DC20	5
0.4	0.09	Without	5.2	100	5	3RV2311-0EC10	5	3RV2311-0EC20	5
0.5	0.12	Without	6.5	100	5	3RV2311-0FC10	5	3RV2311-0FC20	5
0.63	0.18	Without	8.2	100	5	3RV2311-0GC10	5	3RV2311-0GC20	5
0.8	0.18	Without	10	100	5	3RV2311-0HC10	5	3RV2311-0HC20	5
1	0.25	Without	13	100	5	3RV2311-0JC10	5	3RV2311-0JC20	5
1.25	0.37	Without	16	100	5	3RV2311-0KC10	5	3RV2311-0KC20	5
1.6	0.55	Without	21	100	5	3RV2311-1AC10	5	3RV2311-1AC20	5
2	0.75	Without	26	100	5	3RV2311-1BC10	5	3RV2311-1BC20	5
2.5	0.75	Without	33	100	5	3RV2311-1CC10	5	3RV2311-1CC20	5
3.2	1.1	Without	42	100	5	3RV2311-1DC10	5	3RV2311-1DC20	5
4	1.5	Without	52	100	5	3RV2311-1EC10	5	3RV2311-1EC20	5
5	1.5	Without	65	100	5	3RV2311-1FC10	5	3RV2311-1FC20	5
6.3	2.2	Without	82	100	5	3RV2311-1GC10	5	3RV2311-1GC20	5
8	3	Without	104	100	5	3RV2311-1HC10	5	3RV2311-1HC20	5
10	4	Without	130	100	5	3RV2311-1JC10	5	3RV2311-1JC20	5
12.5	5.5	Without	163	100	5	3RV2311-1KC10	5	3RV2311-1KC20	5
16	7.5	Without	208	55	5	3RV2311-4AC10	5	3RV2311-4AC20	5
<b>Size S0</b>									
1.6	0.55	Without	21	100	5	3RV2321-1AC10	5	3RV2321-1AC20	5
2	0.75	Without	26	100	5	3RV2321-1BC10	5	3RV2321-1BC20	5
2.5	0.75	Without	33	100	5	3RV2321-1CC10	5	3RV2321-1CC20	5
3.2	1.1	Without	42	100	5	3RV2321-1DC10	5	3RV2321-1DC20	5
4	1.5	Without	52	100	5	3RV2321-1EC10	5	3RV2321-1EC20	5
5	1.5	Without	65	100	5	3RV2321-1FC10	5	3RV2321-1FC20	5
6.3	2.2	Without	82	100	5	3RV2321-1GC10	5	3RV2321-1GC20	5
8	3	Without	104	100	5	3RV2321-1HC10	5	3RV2321-1HC20	5
10	4	Without	130	100	5	3RV2321-1JC10	5	3RV2321-1JC20	5
12.5	5.5	Without	163	100	5	3RV2321-1KC10	5	3RV2321-1KC20	5
16	7.5	Without	208	55	5	3RV2321-4AC10	5	3RV2321-4AC20	5
20	7.5	Without	260	55	5	3RV2321-4BC10	5	3RV2321-4BC20	5
22	11	Without	286	55	5	3RV2321-4CC10	5	3RV2321-4CC20	5
25	11	Without	325	55	5	3RV2321-4DC10	5	3RV2321-4DC20	5
28	15	Without	364	55	5	3RV2321-4NC10	5	3RV2321-4NC20	5
32 <sup>3)</sup>	15	Without	400	55	5	3RV2321-4EC10	5	3RV2321-4EC20	5
36 <sup>4)</sup>	18.5	Without	432	20	5	3RV2321-4PC10		--	
40 <sup>4)</sup>	18.5	Without	480	20	5	3RV2321-4FC10		--	

<sup>1)</sup> Guide value for 4-pole standard motors at 50 Hz 400 V AC. The actual starting and rated data of the motor to be protected must be considered when selecting the units.

<sup>2)</sup> For overload protection of the motors, appropriate overload relays must be used.

<sup>3)</sup> Suitable for use with IE3/IE4 motors up to a starting current of 256 A. For higher starting currents we recommend using 3RV2 motor starter protectors size S2.

<sup>4)</sup> The devices must not be mounted side-by-side and they must not be assembled with link modules with contactors. A lateral clearance of 9 mm is required. For use with IE3/IE4 motors we recommend using 3RV2 motor starter protectors size S2.


Sizes S2 and S3, see page 7/37.




Auxiliary switches and other accessories can be ordered separately (see "Accessories" from page 7/42 onwards).

## Motor Starter Protectors/Circuit Breakers

### SIRIUS 3RV2 Motor Starter Protectors/Circuit Breakers

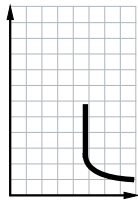**IE3/IE4 ready** For starter combinations

**Without auxiliary switches (continued)**


Rated current	Suitable for three-phase motors <sup>1)</sup> with P	Thermal overload releases <sup>2)</sup>	Instantaneous electronic release	Short-circuit breaking capacity at 400 V AC	SD	Screw terminals 	PU (UNIT, SET, M)	PS*	PG
$I_n$	kW			$I_{cu}$	d	Article No.	Price per PU		
A		A	A	kA					
<b>Size S2</b>									
14	5.5	Without	208	65	2	<b>3RV2331-4SC10</b>	1	1 unit	41E
17	7.5	Without	260	65	2	<b>3RV2331-4TC10</b>	1	1 unit	41E
20	7.5	Without	260	65	2	<b>3RV2331-4BC10</b>	1	1 unit	41E
25	11	Without	325	65	2	<b>3RV2331-4DC10</b>	1	1 unit	41E
32	15	Without	416	65	2	<b>3RV2331-4EC10</b>	1	1 unit	41E
36	18.5	Without	520	65	2	<b>3RV2331-4PC10</b>	1	1 unit	41E
40	18.5	Without	585	65	2	<b>3RV2331-4UC10</b>	1	1 unit	41E
45	22	Without	650	65	2	<b>3RV2331-4VC10</b>	1	1 unit	41E
52	22	Without	741	65	2	<b>3RV2331-4WC10</b>	1	1 unit	41E
59	30	Without	845	65	2	<b>3RV2331-4XC10</b>	1	1 unit	41E
65	30	Without	845	65	2	<b>3RV2331-4JC10</b>	1	1 unit	41E
73	37	Without	949	65	2	<b>3RV2331-4KC10</b>	1	1 unit	41E
80 <sup>3)</sup>	37	Without	1 040	65	2	<b>3RV2331-4RC10</b>	1	1 unit	41E
<b>Size S2, with increased switching capacity</b>									
14	5.5	Without	208	100	2	<b>3RV2332-4SC10</b>	1	1 unit	41E
17	7.5	Without	260	100	2	<b>3RV2332-4TC10</b>	1	1 unit	41E
20	7.5	Without	260	100	2	<b>3RV2332-4BC10</b>	1	1 unit	41E
25	11	Without	325	100	2	<b>3RV2332-4DC10</b>	1	1 unit	41E
32	15	Without	416	100	2	<b>3RV2332-4EC10</b>	1	1 unit	41E
36	18.5	Without	520	100	2	<b>3RV2332-4PC10</b>	1	1 unit	41E
40	18.5	Without	585	100	2	<b>3RV2332-4UC10</b>	1	1 unit	41E
45	22	Without	650	100	2	<b>3RV2332-4VC10</b>	1	1 unit	41E
52	22	Without	741	100	2	<b>3RV2332-4WC10</b>	1	1 unit	41E
59	30	Without	845	100	2	<b>3RV2332-4XC10</b>	1	1 unit	41E
65	30	Without	845	100	2	<b>3RV2332-4JC10</b>	1	1 unit	41E
73	37	Without	949	100	2	<b>3RV2332-4KC10</b>	1	1 unit	41E
80 <sup>3)</sup>	37	Without	1 040	100	2	<b>3RV2332-4RC10</b>	1	1 unit	41E
<b>Size S3</b>									
40	18.5	Without	520	65	2	<b>3RV2341-4FC10</b>	1	1 unit	41E
50	22	Without	650	65	2	<b>3RV2341-4HC10</b>	1	1 unit	41E
63	30	Without	819	65	2	<b>3RV2341-4JC10</b>	1	1 unit	41E
75	37	Without	975	65	2	<b>3RV2341-4KC10</b>	1	1 unit	41E
84	45	Without	1 170	65	2	<b>3RV2341-4RC10</b>	1	1 unit	41E
93	45	Without	1 300	65	2	<b>3RV2341-4YC10</b>	1	1 unit	41E
100 <sup>4)</sup>	45, 55	Without	1 300	65	2	<b>3RV2341-4MC10</b>	1	1 unit	41E
<b>Size S3, with increased switching capacity</b>									
40	18.5	Without	520	100	2	<b>3RV2342-4FC10</b>	1	1 unit	41E
50	22	Without	650	100	2	<b>3RV2342-4HC10</b>	1	1 unit	41E
63	30	Without	819	100	2	<b>3RV2342-4JC10</b>	1	1 unit	41E
75	37	Without	975	100	2	<b>3RV2342-4KC10</b>	1	1 unit	41E
84	45	Without	1 170	100	2	<b>3RV2342-4RC10</b>	1	1 unit	41E
93	45	Without	1 300	100	2	<b>3RV2342-4YC10</b>	1	1 unit	41E
100 <sup>4)</sup>	45, 55	Without	1 300	100	2	<b>3RV2342-4MC10</b>	1	1 unit	41E

<sup>1)</sup> Guide value for 4-pole standard motors at 50 Hz 400 V AC. The actual starting and rated data of the motor to be protected must be considered when selecting the units.

<sup>2)</sup> For overload protection of the motors, appropriate overload relays must be used.

<sup>3)</sup> Suitable for use with IE3/IE4 motors up to a starting current of 720 A. For higher starting currents we recommend using 3RV2 motor starter protectors size S3.

<sup>4)</sup> Suitable for use with IE3/IE4 motors up to a starting current of 780 A. For higher starting currents we recommend using 3VA circuit breakers (see Catalog LV 10).

Auxiliary switches and other accessories can be ordered separately (see "Accessories" from page 7/42 onwards).

## Motor Starter Protectors/Circuit Breakers

### SIRIUS 3RV2 Motor Starter Protectors/Circuit Breakers


For transformer protection

#### Selection and ordering data

##### CLASS 10, without auxiliary switches

Motor starter protectors for the protection of transformers with high inrush current

PU (UNIT, SET, M) = 1  
 PS\* = 1 UNIT  
 PG = 41E

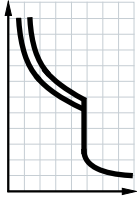

3RV2411-0AA10



3RV2411-0AA20



3RV2421-4AA10



3RV2421-4AA20



3RV2431-4WA10

Rated current	Setting range for thermal overload release	Instantaneous electronic release	Short-circuit breaking capacity at 400 V AC	SD	Screw terminals	SD	Spring-type terminals	
$I_n$		$I >$	$I_{cu}$	d	Article No.	Price per PU	Article No.	Price per PU
A	A	A	kA			d		
<b>Size S00</b>								
0.16	0.11 ... 0.16	3.3	100	▶	3RV2411-0AA10	2	3RV2411-0AA20	
0.2	0.14 ... 0.2	4.2	100	▶	3RV2411-0BA10	2	3RV2411-0BA20	
0.25	0.18 ... 0.25	5.2	100	▶	3RV2411-0CA10	2	3RV2411-0CA20	
0.32	0.22 ... 0.32	6.5	100	▶	3RV2411-0DA10	2	3RV2411-0DA20	
0.4	0.28 ... 0.4	8.2	100	▶	3RV2411-0EA10	2	3RV2411-0EA20	
0.5	0.35 ... 0.5	10	100	▶	3RV2411-0FA10	2	3RV2411-0FA20	
0.63	0.45 ... 0.63	13	100	▶	3RV2411-0GA10	2	3RV2411-0GA20	
0.8	0.55 ... 0.8	16	100	▶	3RV2411-0HA10	2	3RV2411-0HA20	
1	0.7 ... 1	21	100	▶	3RV2411-0JA10	2	3RV2411-0JA20	
1.25	0.9 ... 1.25	26	100	▶	3RV2411-0KA10	2	3RV2411-0KA20	
1.6	1.1 ... 1.6	33	100	▶	3RV2411-1AA10	2	3RV2411-1AA20	
2	1.4 ... 2	42	100	▶	3RV2411-1BA10	2	3RV2411-1BA20	
2.5	1.8 ... 2.5	52	100	▶	3RV2411-1CA10	2	3RV2411-1CA20	
3.2	2.2 ... 3.2	65	100	▶	3RV2411-1DA10	2	3RV2411-1DA20	
4	2.8 ... 4	82	100	▶	3RV2411-1EA10	2	3RV2411-1EA20	
5	3.5 ... 5	104	100	▶	3RV2411-1FA10	2	3RV2411-1FA20	
6.3	4.5 ... 6.3	130	100	▶	3RV2411-1GA10	2	3RV2411-1GA20	
8	5.5 ... 8	163	100	▶	3RV2411-1HA10	2	3RV2411-1HA20	
10	7 ... 10	208	100	▶	3RV2411-1JA10	2	3RV2411-1JA20	
12.5	9 ... 12.5	260	100	▶	3RV2411-1KA10	2	3RV2411-1KA20	
16	10 <sup>1)</sup> ... 16	286	55	▶	3RV2411-4AA10	2	3RV2411-4AA20	
<b>Size S0</b>								
16	10 <sup>1)</sup> ... 16	286	55	▶	3RV2421-4AA10	2	3RV2421-4AA20	
20	13 <sup>1)</sup> ... 20	325	55	▶	3RV2421-4BA10	2	3RV2421-4BA20	
22	16 <sup>1)</sup> ... 22	364	55	▶	3RV2421-4CA10	2	3RV2421-4CA20	
25	18 <sup>1)</sup> ... 25	400	55	▶	3RV2421-4DA10	2	3RV2421-4DA20	
<b>Size S2</b>								
14	9.5 ... 14	328	65	▶	3RV2431-4SA10		---	
17	12 ... 17	410	65	▶	3RV2431-4TA10		---	
20	14 ... 20	410	65	▶	3RV2431-4BA10		---	
25	18 ... 25	512	65	▶	3RV2431-4DA10		---	
32	22 ... 32	656	65	▶	3RV2431-4EA10		---	
36	28 ... 36	820	65	▶	3RV2431-4PA10		---	
40	32 ... 40	820	65	▶	3RV2431-4UA10		---	
45	35 ... 45	922	65	▶	3RV2431-4VA10		---	
52	42 ... 52	1 025	65	▶	3RV2431-4WA10		---	
59	49 ... 59	1 040	65	▶	3RV2431-4XA10		---	
65	54 ... 65	1 040	65	▶	3RV2431-4JA10		---	

<sup>1)</sup> The setting range of the thermal overload releases has been extended.

Auxiliary switches and other accessories can be ordered separately (see "Accessories" from page 7/42 onwards).

## Motor Starter Protectors/Circuit Breakers


### SIRIUS 3RV2 Motor Starter Protectors/Circuit Breakers

For system protection according to UL 489/CSA C22.2 No. 5

#### Selection and ordering data

##### Without auxiliary switches




Circuit breakers for system protection and non-motor loads according to UL/CSA

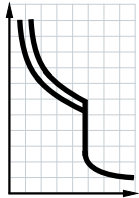

3RV2711-0AD10



3RV2742-5FD10

Rated current <sup>1)</sup>	Thermal overload release (non-adjustable)	Instantaneous electronic release	Short-circuit breaking capacity at 480 Y/277 V AC <sup>2)</sup>	480 V AC	SD	Screw terminals 	PU (UNIT, SET, M)	PS*	PG
$I_n$ <sup>1)</sup>			$I_{bc}$		d	Article No.	Price per PU		
A	A	A	kA						
<b>Size S00</b>									
0.16	0.16	2.1	65	--	5	3RV2711-0AD10		1	1 unit 41E
0.2	0.2	2.6	65	--	5	3RV2711-0BD10		1	1 unit 41E
0.25	0.25	3.3	65	--	5	3RV2711-0CD10		1	1 unit 41E
0.32	0.32	4.2	65	--	5	3RV2711-0DD10		1	1 unit 41E
0.4	0.4	5.2	65	--	5	3RV2711-0ED10		1	1 unit 41E
0.5	0.5	6.5	65	--	5	3RV2711-0FD10		1	1 unit 41E
0.63	0.63	8.2	65	--	5	3RV2711-0GD10		1	1 unit 41E
0.8	0.8	10	65	--	5	3RV2711-0HD10		1	1 unit 41E
1	1	13	65	--	5	3RV2711-0JD10		1	1 unit 41E
1.25	1.25	16	65	--	5	3RV2711-0KD10		1	1 unit 41E
1.6	1.6	21	65	--	5	3RV2711-1AD10		1	1 unit 41E
2	2	26	65	--	5	3RV2711-1BD10		1	1 unit 41E
2.5	2.5	33	65	--	5	3RV2711-1CD10		1	1 unit 41E
3.2	3.2	42	65	--	5	3RV2711-1DD10		1	1 unit 41E
4	4	52	65	--	5	3RV2711-1ED10		1	1 unit 41E
5	5	65	65	--	5	3RV2711-1FD10		1	1 unit 41E
6.3	6.3	82	65	--	5	3RV2711-1GD10		1	1 unit 41E
8	8	104	65	--	5	3RV2711-1HD10		1	1 unit 41E
10	10	130	65	--	5	3RV2711-1JD10		1	1 unit 41E
12.5	12.5	163	65	--	5	3RV2711-1KD10		1	1 unit 41E
15	15	208	65	--	5	3RV2711-4AD10		1	1 unit 41E
<b>Size S0</b>									
20	20	260	50	--	5	3RV2721-4BD10		1	1 unit 41E
22	22	286	50	--	5	3RV2721-4CD10		1	1 unit 41E
<b>Size S3<sup>3)</sup></b>									
10	10	150	65	65	5	3RV2742-5AD10		1	1 unit 41E
15	15	225	65	65	5	3RV2742-5BD10		1	1 unit 41E
20	20	260	65	65	5	3RV2742-5CD10		1	1 unit 41E
25	25	325	65	65	5	3RV2742-5DD10		1	1 unit 41E
30	30	390	65	65	5	3RV2742-5ED10		1	1 unit 41E
35	35	455	65	--	5	3RV2742-5FD10		1	1 unit 41E
40	40	520	65	--	5	3RV2742-5GD10		1	1 unit 41E
45	45	585	65	--	5	3RV2742-5HD10		1	1 unit 41E
50	50	650	65	--	5	3RV2742-5JD10		1	1 unit 41E
60	60	780	65	--	5	3RV2742-5LD10		1	1 unit 41E
70	70	910	65	--	5	3RV2742-5QD10		1	1 unit 41E

<sup>1)</sup> Rated value 100 % according to UL 489 and IEC 60947-2 ("100 % rated breaker").

<sup>2)</sup> Values for 600 Y/347 V AC, see page 7/18.

<sup>3)</sup> Transverse auxiliary switches cannot be used for 3RV2742.

Lateral and transverse auxiliary switches can be ordered separately (see "Accessories" page 7/42 onwards).

## Motor Starter Protectors/Circuit Breakers


### SIRIUS 3RV2 Motor Starter Protectors/Circuit Breakers

For transformer protection according to UL 489/CSA C22.2 No.5



#### Selection and ordering data

##### Without auxiliary switches

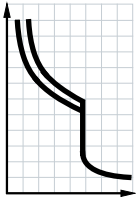Circuit breakers for system and transformer protection according to UL/CSA, specially designed for transformers with high inrush current



3RV2811-0AD10

Rated current <sup>1)</sup>	Thermal overload release (non-adjustable)	Instantaneous electronic release	Short-circuit breaking capacity at 480 Y/277 V AC <sup>2)</sup>	SD	Screw terminals 	PU (UNIT, SET, M)	PS*	PG
$I_n$ <sup>1)</sup>		$I >$	$I_{bc}$		Article No.	Price per PU		
A	A	A	kA	d				
<b>Size S00</b>								
0.16	0.16	3.3	65	5	3RV2811-0AD10		1	1 unit 41E
0.2	0.2	4.2	65	5	3RV2811-0BD10		1	1 unit 41E
0.25	0.25	5.2	65	5	3RV2811-0CD10		1	1 unit 41E
0.32	0.32	6.5	65	5	3RV2811-0DD10		1	1 unit 41E
0.4	0.4	8.2	65	5	3RV2811-0ED10		1	1 unit 41E
0.5	0.5	10	65	5	3RV2811-0FD10		1	1 unit 41E
0.63	0.63	13	65	5	3RV2811-0GD10		1	1 unit 41E
0.8	0.8	16	65	5	3RV2811-0HD10		1	1 unit 41E
1	1	21	65	5	3RV2811-0JD10		1	1 unit 41E
1.25	1.25	26	65	5	3RV2811-0KD10		1	1 unit 41E
1.6	1.6	33	65	5	3RV2811-1AD10		1	1 unit 41E
2	2	42	65	5	3RV2811-1BD10		1	1 unit 41E
2.5	2.5	52	65	5	3RV2811-1CD10		1	1 unit 41E
3.2	3.2	65	65	5	3RV2811-1DD10		1	1 unit 41E
4	4	82	65	5	3RV2811-1ED10		1	1 unit 41E
5	5	104	65	5	3RV2811-1FD10		1	1 unit 41E
6.3	6.3	130	65	5	3RV2811-1GD10		1	1 unit 41E
8	8	163	65	5	3RV2811-1HD10		1	1 unit 41E
10	10	208	65	5	3RV2811-1JD10		1	1 unit 41E
12.5	12.5	260	65	5	3RV2811-1KD10		1	1 unit 41E
15	15	286	65	5	3RV2811-4AD10		1	1 unit 41E
<b>Size S0</b>								
20	20	325	50	5	3RV2821-4BD10		1	1 unit 41E
22	22	364	50	5	3RV2821-4CD10		1	1 unit 41E

<sup>1)</sup> Rated value 100 % according to UL 489 and IEC 60947-2 ("100 % rated breaker").

<sup>2)</sup> Values for 600 Y/347 V AC, see page 7/18.

Lateral and transverse auxiliary switches can be ordered separately (see "Accessories" page 7/42 onwards).

# Motor Starter Protectors/Circuit Breakers

## SIRIUS 3RV2 Motor Starter Protectors/Circuit Breakers

### Accessories

Mountable accessories

#### Overview

##### Mounting location and function

The 3RV2 motor starter protectors/circuit breakers have three main contact elements. In order to achieve maximum flexibility, auxiliary switches, signaling switches, auxiliary releases and isolator modules can be supplied separately.

These components are easily fitted to the switches without the use of any tools according to requirements.

Overview graphic, [see page 7/7](#).

<p><b>Front side</b></p> <p><u>Note:</u></p> <ul style="list-style-type: none"> <li>A maximum of four auxiliary contacts with auxiliary switches can be mounted on each motor starter protector/circuit breaker</li> <li>Transverse auxiliary switches cannot be used for circuit breaker 3RV2742 (size S3).</li> </ul>	<p><b>Transverse auxiliary switches, solid-state compatible transverse auxiliary switches</b></p> <p>1 NO + 1 NC or 2 NO or 1 CO</p>	<p>An auxiliary switch block can be inserted transversely on the front. The overall width of the motor starter protectors/circuit breakers remains unchanged.</p>
<p><b>Left-hand side</b></p> <p><u>Notes:</u></p> <ul style="list-style-type: none"> <li>A maximum of four auxiliary contacts with auxiliary switches can be mounted on each motor starter protector/circuit breaker</li> <li>Lateral auxiliary switches (two contacts) and signaling switches can be mounted separately or together</li> <li>Signaling switches cannot be used for 3RV27 and 3RV28 circuit breakers</li> <li>Only lateral auxiliary switches can be used for 3RV2742 (size S3)</li> </ul>	<p><b>Lateral auxiliary switches (2 contacts)</b></p> <p>1 NO + 1 NC or 2 NO or 2 NC</p> <p><b>Lateral auxiliary switches (4 contacts)</b></p> <p>2 NO + 2 NC</p>	<p>One of the three lateral auxiliary switches can be mounted on the left side per motor starter protector/circuit breaker. The contacts of the auxiliary switch close and open together with the main contacts of the motor starter protector/circuit breaker.</p> <p>The width of the lateral auxiliary switch with two contacts is 9 mm.</p> <p>One lateral auxiliary switch with four contacts can be mounted on the left side per motor starter protector/circuit breaker. The contacts of the auxiliary switch close and open together with the main contacts of the motor starter protector/circuit breaker.</p> <p>The width of the lateral auxiliary switch with four contacts is 18 mm.</p>
	<p><b>Signaling switches</b></p> <p>Tripping 1 NO + 1 NC Short circuit 1 NO + 1 NC</p>	<p>One signaling switch can be mounted on the left side of each motor starter protector.</p> <p>The signaling switch has two contact systems.</p> <p>One contact system always signals <b>tripping</b> irrespective of whether this was caused by a short circuit, an overload or an auxiliary release. The other contact system only switches in the event of a short circuit. There is no signaling as a result of <b>switching off</b> with the actuator.</p> <p>In order to be able to switch on the motor starter protector again after a short circuit, the signaling switch must be reset manually after the error cause has been eliminated.</p> <p>The width of the signaling switch is 18 mm.</p>
<p><b>Right-hand side</b></p> <p><u>Notes:</u></p> <ul style="list-style-type: none"> <li>One auxiliary release can be mounted per motor starter protector/circuit breaker</li> <li>Accessories cannot be mounted on the right-hand side of the 3RV21 motor starter protectors for motor protection with overload relay function</li> </ul>	<p><b>Auxiliary releases</b></p> <p>Shunt releases or Undervoltage releases or Undervoltage releases with leading auxiliary contacts 2 NO</p>	<p>For remote-controlled tripping of the motor starter protector/circuit breaker. The release coil should only be energized for short periods (see circuit diagrams).</p> <p>Trips the motor starter protector/circuit breaker when the voltage is interrupted and prevents the motor from being restarted accidentally when the voltage is restored. Used for remote-controlled tripping of the motor starter protector/circuit breaker.</p> <p>Particularly suitable for EMERGENCY-STOP disconnection by way of corresponding EMERGENCY-STOP pushbuttons according to EN 60204-1.</p> <p>Function and use as for the undervoltage release without leading auxiliary contacts, but with the following additional function: the auxiliary contacts will open in switch position OFF to deenergize the coil of the undervoltage release, thus interrupting energy consumption. In the "tripped" position, these auxiliary contacts are not guaranteed to open. The leading contacts permit the motor starter protector/circuit breaker to reclose.</p> <p>The width of the auxiliary release is 18 mm.</p>
<p><b>Top</b></p> <p><u>Notes:</u></p> <ul style="list-style-type: none"> <li>Isolator modules cannot be used for 3RV27 and 3RV28 circuit breakers</li> <li>Isolator module for size S2: <ul style="list-style-type: none"> <li>only with 3RV2 motor starter protectors/circuit breakers up to max. 65 A</li> <li>not with the transverse auxiliary switch</li> </ul> </li> <li>Terminal screws of the transverse auxiliary switch are covered by the isolator module; Recommendation: Lateral auxiliary switches should be used in combination with the isolator module, or the isolator module should not be mounted until the auxiliary switch has been wired up</li> </ul>	<p><b>Isolator modules</b></p>	<p>Isolator modules can be mounted to the upper connection side of the motor starter protectors.</p> <p>The supply cable is connected to the motor starter protector through the isolator module.</p> <p>The plug can only be unplugged when the motor starter protector is open and isolates all 3 poles of the motor starter protector from the network. The shock-protected isolation point is clearly visible and secured with a padlock to prevent reinsertion of the plug.</p>

For a complete overview of which accessories can be used for the various motor starter protectors/circuit breakers, [see page 7/2](#).



# Motor Starter Protectors/Circuit Breakers

## SIRIUS 3RV2 Motor Starter Protectors/Circuit Breakers

### Accessories

#### Mountable accessories

#### Selection and ordering data

PU (UNIT, SET, M) = 1  
 PS\* = 1 unit (unless otherwise specified)  
 PG = 41E

Version	For motor starter protectors/circuit breakers	SD	Screw terminals 	SD	Spring-type terminals 	
		Size	Article No.	Price per PU	Article No.	Price per PU
<b>Auxiliary switches<sup>1)</sup></b>						
	<b>Transverse auxiliary switches</b> For mounting on the front	S00 ... S3	<b>3RV2901-1D</b> <b>3RV2901-1E</b> <b>3RV2901-1F</b>		-- <b>3RV2901-2E</b> <b>3RV2901-2F</b>	
	<b>Solid-state compatible transverse auxiliary switches</b> For mounting on the front, for operation in dusty atmosphere and in solid-state circuits with low operating currents	S00 ... S3				
	1 CO	S00 ... S3	<b>3RV2901-1G</b>		--	
	<b>Covers for transverse auxiliary switches</b> (PS* = 10 units)	S00 ... S3	<b>3RV2901-0H</b>		--	
	<b>Lateral auxiliary switches</b> For mounting on the left	S00 ... S3	<b>3RV2901-1A</b> <b>3RV2901-1B</b> <b>3RV2901-1C</b> <b>3RV2901-1J</b>		<b>3RV2901-2A</b> <b>3RV2901-2B</b> <b>3RV2901-2C</b> --	
	1 NO + 1 NC 2 NO 2 NC 2 NO + 2 NC	S00 ... S3				
<b>3RV2901-1A</b>	<b>3RV2901-2A</b>					
<b>Signaling switches<sup>2)</sup></b>						
	<b>Signaling switches</b> One signaling switch can be mounted on the left per motor starter protector. Separate tripped and short-circuit alarms, 1 NO + 1 NC each	S00 ... S3	<b>3RV2921-1M</b>		<b>3RV2921-2M</b>	
						
<b>3RV2921-1M</b>	<b>3RV2921-2M</b>					
<b>Isolator modules<sup>2)</sup></b>						
	<b>Isolator modules<sup>3)</sup></b> Visible isolating distance for isolating individual motor starter protectors from the network, lockable in disconnected position	S00, S0 S2 <sup>4)</sup>	<b>3RV2928-1A</b> <b>3RV2938-1A</b>		-- --	
						
<b>3RV2928-1A</b>	<b>3RV2938-1A</b>					

<sup>1)</sup> Each motor starter protector/circuit breaker can be fitted with one transverse and one lateral auxiliary switch. The lateral auxiliary switch with 2 NO + 2 NC is used without a transverse auxiliary switch.

<sup>2)</sup> This accessory cannot be used for the 3RV27 and 3RV28 circuit breakers (sizes S00, S0, S3).

<sup>3)</sup> The isolator module for size S2 can be used only with 3RV2 motor starter protectors/circuit breakers up to max. 65 A. Similarly, it cannot be used with the transverse auxiliary switch.

# Motor Starter Protectors/Circuit Breakers

## SIRIUS 3RV2 Motor Starter Protectors/Circuit Breakers

### Accessories

Mountable accessories

PU (UNIT, SET, M) = 1  
 PS\* = 1 UNIT  
 PG = 41E



3RV2902-1AV0



3RV2902-2AV0



3RV2922-1CP0



3RV2902-2DB0

Rated control supply voltage $U_s$					For motor starter protectors/circuit breakers	SD	Screw terminals		Spring-type terminals	
AC 50 Hz	AC 60 Hz	AC 50/60 Hz	AC/DC 50/60 Hz, DC	DC			Article No.	Price per PU	Article No.	Price per PU
V	V	V	V	V	Size	d				
<b>Auxiliary releases<sup>3)</sup></b>										
<b>Undervoltage releases</b>										
--	--	--	--	24	S00 ... S3	2	3RV2902-1AB4	--	--	--
24	24	--	--	--	S00 ... S3	2	3RV2902-1AB0	--	--	--
110	120	--	--	--	S00 ... S3	2	3RV2902-1AF0	--	--	--
--	208	--	--	--	S00 ... S3	2	3RV2902-1AM1	--	--	--
230	240	--	--	--	S00 ... S3	▶	3RV2902-1AP0	▶	3RV2902-2AP0	--
400	440	--	--	--	S00 ... S3	▶	3RV2902-1AV0	▶	3RV2902-2AV0	--
415	480	--	--	--	S00 ... S3	2	3RV2902-1AV1	--	--	--
500	600	--	--	--	S00 ... S3	2	3RV2902-1AS0	--	--	--
<b>Undervoltage releases with leading auxiliary contacts 2 NO</b>										
24	24	--	--	--	S00 ... S3	5	3RV2922-1CB0	--	--	--
230	240	--	--	--	S00 ... S3	2	3RV2922-1CP0	2	3RV2922-2CP0	--
400	440	--	--	--	S00 ... S3	2	3RV2922-1CV0	2	3RV2922-2CV0	--
415	480	--	--	--	S00 ... S3	2	3RV2922-1CV1	2	3RV2922-2CV1	--
<b>Shunt releases</b>										
--	--	20 ... 24	20 ... 70	--	S00 ... S3	▶	3RV2902-1DB0	▶	3RV2902-2DB0	--
--	--	90 ... 110	70 ... 190	--	S00 ... S3	2	3RV2902-1DF0	2	3RV2902-2DF0	--
--	--	210 ... 240	190 ... 330	--	S00 ... S3	2	3RV2902-1DP0	▶	3RV2902-2DP0	--
--	--	350 ... 415	330 ... 500	--	S00 ... S3	2	3RV2902-1DV0	--	--	--
--	--	500	500	--	S00 ... S3	2	3RV2902-1DS0	--	--	--

- <sup>1)</sup> The voltage range is valid for 100 % (infinite) ON period. The response voltage lies at 0.9 of the lower limit of the voltage range.  
<sup>2)</sup> The voltage range is valid for 5 s ON period at AC 50/60 Hz and DC. The response voltage lies at 0.85 of the lower limit of the voltage range.

- <sup>3)</sup> One auxiliary release can be mounted on the right per motor starter protector/circuit breaker (does not apply to 3RV21 motor starter protectors with overload relay function).

## Motor Starter Protectors/Circuit Breakers

### SIRIUS 3RV2 Motor Starter Protectors/Circuit Breakers

#### Accessories

#### Busbar accessories

#### Overview


##### Insulated three-phase busbar system

Three-phase busbar systems provide an easy, time-saving and clearly arranged means of feeding 3RV2 motor starter protectors/circuit breakers with screw terminals. Different versions are available for sizes S00 to S2 and can be used for the various different types of motor starter protectors/circuit breakers (size S0 up to 32 A).


The 3RV1915 and 3RV1935 three-phase busbar systems are generally unsuitable for the 3RV21 motor starter protectors for motor protection with overload relay function and 3RV27 and 3RV28 circuit breakers according to UL 489/CSA C22.2 No. 5.

The busbars are suitable for between two and five motor starter protectors/circuit breakers. However, any kind of extension is possible by clamping the tags of an additional busbar (rotated by 180°) underneath the terminals of the respective last motor starter protector/circuit breaker.

A combination of motor starter protectors/circuit breakers of size S00 and S0 is possible. The motor starter protectors/circuit breakers are supplied by appropriate infeed terminals.

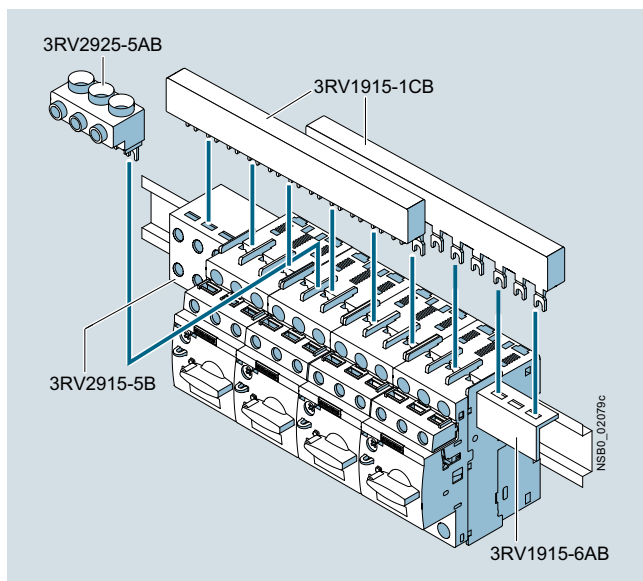

SIRIUS three-phase busbar system size S00/S0

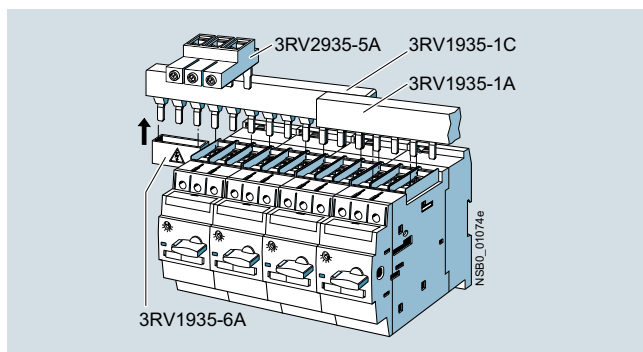

SIRIUS three-phase busbar system size S2

The three-phase busbar systems are finger-safe. They are designed for any short-circuit stress which can occur at the output side of connected motor starter protectors/circuit breakers.

The three-phase busbar systems can also be used to construct "Type E Starters" according to UL/CSA. Special infeed terminals must be used for this purpose, however (see "Selection and ordering data", page 7/45).


##### 8US busbar adapters for 60 mm systems

The motor starter protectors/circuit breakers are mounted directly with the aid of busbar adapters on busbar systems with 60 mm center-to-center clearance in order to save space and to reduce infeed times and costs.

Busbar adapters for busbar systems with 60 mm center-to-center clearance are suitable for copper busbars with a width of 12 mm to 30 mm. The busbars can be 5 mm or 10 mm thick.

The motor starter protectors/circuit breakers are snapped onto the adapter and connected on the line side. This prepared unit is then plugged directly onto the busbar system, and is thus connected both mechanically and electrically at the same time.

For further busbar adapters for snap-mounting direct-on-line starters and reversing starters as well as additional accessories such as line terminals and outgoing terminals, flat copper profile, etc., see [Catalog LV 10](#).

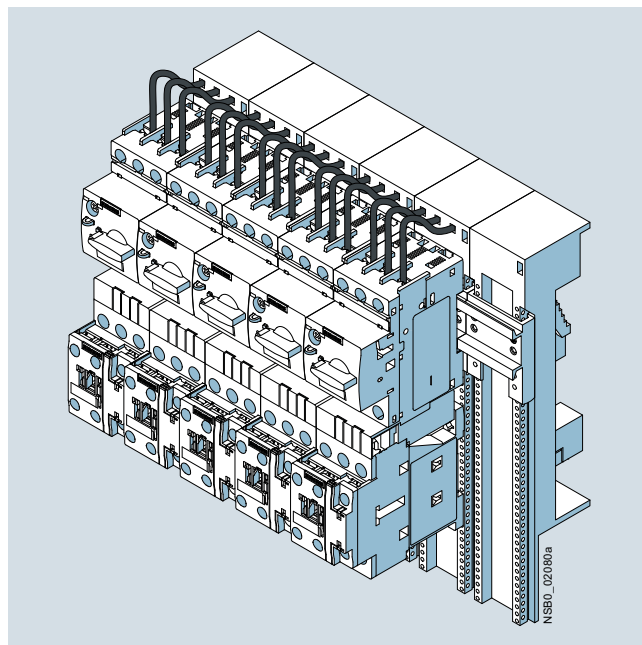

SIRIUS load feeders with busbar adapters snapped onto busbars





# Motor Starter Protectors/Circuit Breakers

## SIRIUS 3RV2 Motor Starter Protectors/Circuit Breakers

### Accessories

#### Busbar accessories

#### Selection and ordering data

	Modular spacing mm	Number of motor starter protectors that can be connected			Rated current $I_n$ at 690 V A	For motor starter protectors Size	SD d	Article No.	Price per PU	PU (UNIT, SET, M)	PS*	PG
		Without lateral accessories	With lateral auxiliary switch	Incl. auxiliary release								
<b>Three-phase busbars<sup>1)</sup></b>												
	For feeding several motor starter protectors with screw terminals, mounted side by side on standard mounting rails, insulated, with touch protection											
 3RV1915-1AB	45 <sup>3)</sup>	2	--	--	63	S00, S0 <sup>2)</sup>	▶	<b>3RV1915-1AB</b>		1	1 unit	41E
		3	--	--	63	S00, S0 <sup>2)</sup>	▶	<b>3RV1915-1BB</b>		1	1 unit	41E
		4	--	--	63	S00, S0 <sup>2)</sup>	▶	<b>3RV1915-1CB</b>		1	1 unit	41E
		5	--	--	63	S00, S0 <sup>2)</sup>	▶	<b>3RV1915-1DB</b>		1	1 unit	41E
 3RV1915-1BB	55 <sup>4)</sup>	--	2	--	63	S00, S0 <sup>2)</sup>	▶	<b>3RV1915-2AB</b>		1	1 unit	41E
		--	3	--	63	S00, S0 <sup>2)</sup>	▶	<b>3RV1915-2BB</b>		1	1 unit	41E
		--	4	--	63	S00, S0 <sup>2)</sup>	▶	<b>3RV1915-2CB</b>		1	1 unit	41E
		--	5	--	63	S00, S0 <sup>2)</sup>	▶	<b>3RV1915-2DB</b>		1	1 unit	41E
 3RV1915-1CB		2	--	--	108	S2	▶	<b>3RV1935-1A</b>		1	1 unit	41E
		3	--	--	108	S2	▶	<b>3RV1935-1B</b>		1	1 unit	41E
		4	--	--	108	S2	▶	<b>3RV1935-1C</b>		1	1 unit	41E
 3RV1915-1DB	63 <sup>5)</sup>	--	--	2	63	S00, S0 <sup>2)</sup>	▶	<b>3RV1915-3AB</b>		1	1 unit	41E
		--	--	4	63	S00, S0 <sup>2)</sup>	▶	<b>3RV1915-3CB</b>		1	1 unit	41E
	75 <sup>5)</sup>	--	2	2	108	S2	▶	<b>3RV1935-3A</b>		1	1 unit	41E
		--	3	3	108	S2	▶	<b>3RV1935-3B</b>		1	1 unit	41E
		--	4	4	108	S2	▶	<b>3RV1935-3C</b>		1	1 unit	41E






1) Not suitable for 3RV21 motor starter protectors for motor protection with overload relay function and for 3RV27 and 3RV28 circuit breakers according to UL 489/CSA C22.2 No. 5.

2) Approved for motor starter protectors size S0 with  $I_n \leq 32$  A.

3) For 3RV2 motor starter protectors without accessories mounted on the side.

4) For 3RV2 motor starter protectors with auxiliary switches with 1 NO + 1 NC, 2 NO and 2 NC mounted on the left (9 mm wide).

5) For 3RV2 motor starter protectors with mounted accessories (18 mm wide). Auxiliary switches with 2 NO + 2 NC or signaling switch (mounted on the left) or with auxiliary release (mounted on the right).

	Conductor cross-section			Tightening torque Nm	For motor starter protectors/circuit breakers Size	SD d	Article No.	Price per PU	PU (UNIT, SET, M)	PS*	PG
	Solid or stranded mm <sup>2</sup>	Finely stranded with end sleeve mm <sup>2</sup>	AWG cables, solid or stranded AWG								
<b>Three-phase infeed terminals</b>											
	<b>Connection from top</b>										
 3RV2925-5AB	2.5 ... 25	2.5 ... 16	10 ... 4	3 ... 4	S00, S0	▶	<b>3RV2925-5AB</b>		1	1 unit	41E
	2 x (2.5 ... 50) <sup>1)</sup> , 1 x (2.5 ... 70) <sup>1)</sup>	2 x (2.5 ... 35) <sup>1)</sup> , 1 x (2.5 ... 50) <sup>1)</sup>	2 x (10 ... 1/0) <sup>1)</sup> , 1 x (10 ... 2/0) <sup>1)</sup>	4 ... 6	S2	▶	<b>3RV2935-5A</b>		1	1 unit	41E
 3RV2935-5A	<b>Connection from below</b>										
	Terminal is connected in place of a switch, take space requirement into account										
 3RV2915-5B	2.5 ... 25	2.5 ... 16	10 ... 4	Input: 4, Output: 2 ... 2.5	S00, S0	▶	<b>3RV2915-5B</b>		1	1 unit	41E
<b>Three-phase infeed terminals for constructing "Type E Starters"</b>											
	<b>Connection from top</b>										
 3RV2925-5EB	2.5 ... 25	2.5 ... 16	10 ... 4	3 ... 4	S00, S0	2	<b>3RV2925-5EB</b>		1	1 unit	41E
	2 x (2.5 ... 50) <sup>1)</sup> , 1 x (2.5 ... 70) <sup>1)</sup>	2 x (2.5 ... 35) <sup>1)</sup> , 1 x (2.5 ... 50) <sup>1)</sup>	2 x (10 ... 1/0) <sup>1)</sup> , 1 x (10 ... 2/0) <sup>1)</sup>	4 ... 6	S2	▶	<b>3RV2935-5E</b>		1	1 unit	41E
 3RV2935-5E											

1) If two different conductor cross-sections are connected to one clamping point, both cross-sections must be in the range specified.

# Motor Starter Protectors/Circuit Breakers

## SIRIUS 3RV2 Motor Starter Protectors/Circuit Breakers

### Accessories

#### Busbar accessories

Version	For motor starter protectors/circuit breakers	SD	Article No.	Price per PU	PU (UNIT, SET, M)	PS*	PG
	Size	d					

#### Covers for connection tags



3RV1915-6AB

Touch protection for empty positions

S00, S0

**3RV1915-6AB**

1

10 units

41E

S2

**3RV1935-6A**

1

5 units

41E

#### Busbar adapters



8US1251-5DS10



8US1251-5DT11



8US1250-5AS10



8US1250-5AT10



8US1211-4TR00

For motor starter protectors/circuit breakers	Rated current	Connecting cable	Adapter length	Adapter width	Rated voltage	SD	Article No.	Price per PU	PU (UNIT, SET, M)	PS*	PG
Size	A	AWG	mm	mm	V	d					

#### Busbar adapters for 60 mm systems

For copper busbars according to DIN 46433  
 Width: 12 mm and 30 mm  
 Thickness: 5 mm and 10 mm  
 Also for T and double-T special profiles

- For motor starter protectors/circuit breakers with screw terminals

S00, S0 <sup>2)</sup>	25	12	200	45	690	2	<b>8US1251-5DS10</b>		1	1 unit	140
S00, S0 <b>NEW</b>	25	12	260	45	690	2	<b>8US1251-5DT10</b>		1	1 unit	140
S0 <b>NEW</b>	32	10	200	45	690	3	<b>8US1251-5NS10</b>		1	1 unit	140
S0 <sup>2)</sup>	32	10	260	45	690	2	<b>8US1251-5NT10</b>		1	1 unit	140
S2	80	4	200	55	690	5	<b>8US1261-5MS13</b>		1	1 unit	140
S2	80	4	260	55	690	5	<b>8US1261-6MT10</b>		1	1 unit	140
S2 <sup>1)</sup>	80	4	260	118	690	5	<b>8US1211-6MT10</b>		1	1 unit	140
S3	100/70 <sup>3)</sup>	4	215	72	690/600 <sup>3)</sup>	2	<b>8US1211-4TR00</b>		1	1 unit	140

- For motor starter protectors/circuit breakers with spring-type terminals

S00, S0 <sup>2)</sup>	25	12	200	45	690	2	<b>8US1251-5DS11</b>		1	1 unit	140
S00, S0 <sup>2)</sup>	25	12	260	45	690	2	<b>8US1251-5DT11</b>		1	1 unit	140
S0 <b>NEW</b>	32	10	200	45	690	5	<b>8US1251-5NS11</b>		1	1 unit	140
S0 <sup>2)</sup>	32	10	260	45	690	2	<b>8US1251-5NT11</b>		1	1 unit	140

#### Accessories

<b>Device holders</b>	--	--	200	45	--	2	<b>8US1250-5AS10</b>		1	1 unit	140
For lateral mounting to busbar adapters	--	--	260	45	--	2	<b>8US1250-5AT10</b>		1	1 unit	140
<b>Side modules</b>	--	--	200	9	--	2	<b>8US1998-2BJ10</b>		1	10 units	140
For widening of busbar adapters											
<b>Vibration and shock kits</b>											
For high vibration and shock loads											
S00, S0	--	--	--	--	--	2	<b>8US1998-1CA10</b>		1	2 units	140
S2	--	--	--	--	--	5	<b>8US1998-1DA10</b>		1	1 unit	140

<sup>1)</sup> For the assembly of feeders for reversing starters comprising a motor starter protector and two contactors.

<sup>2)</sup> Also approved for 3RV27, 3RV28 according to UL.


<sup>3)</sup> Values according to UL/CSA:  
 - Rated current: 70 A at 600 V AC;  
 - Short-circuit breaking capacity:  
 480 V AC: 65 kA, up to  $I_n = 30$  A,  
 480 Y/277 V AC 65 kA  
 600 Y/347 V AC: 20 kA.

For additional busbar adapters and accessories, see [Catalog LV 10](#).


#### Overview

##### Door-coupling rotary operating mechanisms

Motor starter protectors/circuit breakers with a rotary operating mechanism can be mounted in a control cabinet and operated externally by means of a door-coupling rotary operating mechanism. When the cabinet door with motor starter protector/circuit breaker is closed, the operating mechanism is coupled. When the motor starter protector/circuit breaker closes, the coupling is locked which prevents the door from being opened unintentionally. This interlock can be defeated by the maintenance personnel. In the OPEN position, the rotary operating mechanism can be secured against reclosing with up to three padlocks. Inadvertent opening of the door is not possible in this case either.

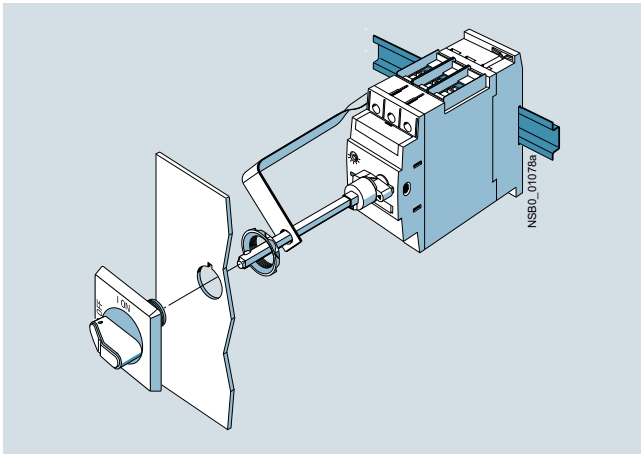

SIRIUS 3RV2926-0K door-coupling rotary operating mechanism

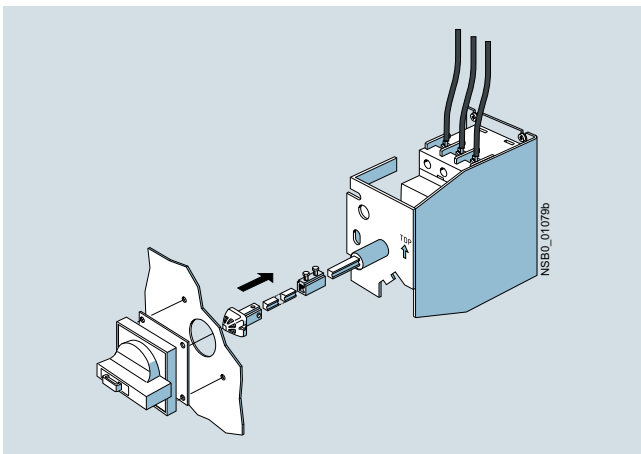

SIRIUS 3RV2926-2B door-coupling rotary operating mechanism for arduous conditions

##### Remote motorized operating mechanism

3RV motor starter protectors are manually operated switching devices. They automatically trip in case of an overload or short circuit. Intentional remote-controlled tripping is possible by means of a shunt release or an undervoltage release. Reclosing is only possible directly at the motor starter protector/circuit breaker.

The remote motorized operating mechanism allows the motor starter protectors/circuit breakers to be opened and closed by electrical commands. This enables a load or an installation to be isolated from the network or reconnected to it from an operator panel.


If the motor starter protector/circuit breaker is tripped as a result of overload or short circuit, it will be in the tripped position. For reclosing, the remote motorized operating mechanism must first be set manually or electrically to the 0 position (electrically by means of the Open command). Then it can be reclosed.

The remote motorized operating mechanism is available for motor starter protectors/circuit breakers in size S3 for the control voltages of 230 V AC. The motor starter protector/circuit breaker is fitted into the remote motorized operating mechanism as shown in the drawing.

In the "MANUAL" position, the motor starter protector/circuit breaker in the remote motorized operating mechanism can continue to be switched manually on site. In the "AUTOMATIC" position, the motor starter protector/circuit breaker is switched by means of electrical commands. The switching command must be applied for a minimum of 100 ms. The remote motorized operating mechanism closes the motor starter protector after a maximum of 1 s. On voltage failure during the switching operation it is ensured that the motor starter protector/circuit breaker remains in the "OPEN" or "CLOSED" position. In the "MANUAL" and "OFF" position, the remote motorized operating mechanism can be locked with a padlock.

##### RESET function

The RESET button on the motorized operating mechanism serves to reset any 3RV2921-1M signaling switch that might be installed.

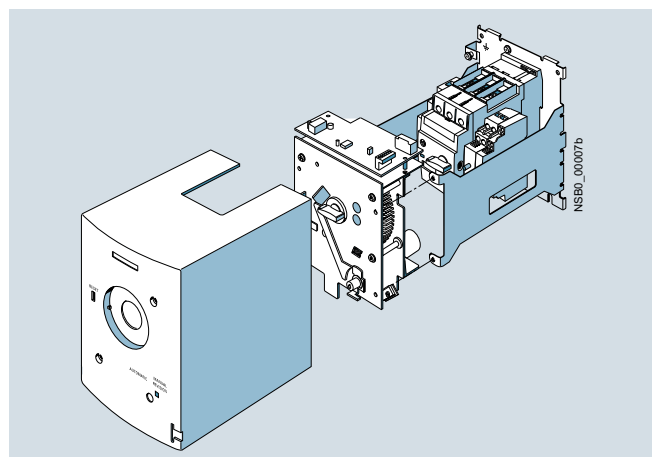

SIRIUS 3RV1946-3AP0 remote motorized operating mechanism

# Motor Starter Protectors/Circuit Breakers

## SIRIUS 3RV2 Motor Starter Protectors/Circuit Breakers

### Accessories

#### Rotary operating mechanisms

#### Technical specifications

Remote motorized operating mechanism		
<b>Type</b>		<b>3RV1946-3AP0</b>
<b>Max. power consumption</b> • At $U_s = 230$ V AC	VA	170
<b>Operating range</b>		0.85 ... 1.1 x $U_s$
<b>Minimum command duration</b> at $U_s$	s	0.1
<b>Max. command duration</b>		Unlimited (uninterrupted operation)
<b>Max. total make/break time</b> , remote-controlled	s	2
<b>Ready to reclose</b> after approx.	s	2.5
<b>Switching frequency</b>	1/h	25
<b>Internal back-up fuse</b> • 230 V AC	A	0.8
<b>Connection type of control cables</b>		Plug-in connectors with screw terminals
<b>Shock resistance</b> acc. to IEC 60068-2-27	g/ms	25/11 (square and sine pulse)

#### Selection and ordering data

Version	Color of actuator	Version of extension shaft mm	For motor starter protectors/ circuit breakers Size	SD d	Article No.	Price per PU	PU (UNIT, SET, M)	PS*	PG
---------	-------------------	----------------------------------	---	---------	-------------	--------------	-------------------	-----	----

#### Door-coupling rotary operating mechanisms




3RV2926-0B

Door-coupling rotary operating mechanisms consisting of an actuator, a coupling driver and a 130/330 mm long extension shaft (6 mm x 6 mm)

Designed for degree of protection IP64; the door locking device prevents accidental opening of the control cabinet door when the switch is set to ON. The OFF position can be locked with up to three padlocks.

<b>Door-coupling rotary operating mechanisms</b>	Black	130	S00 ... S3	▶	<b>3RV2926-0B</b>		1	1 unit	41E
		330	S00 ... S3	▶	<b>3RV2926-0K</b>		1	1 unit	41E
<b>EMERGENCY-STOP door-coupling rotary operating mechanisms</b>	Red/yellow	130	S00 ... S3	▶	<b>3RV2926-0C</b>		1	1 unit	41E
		330	S00 ... S3	▶	<b>3RV2926-0L</b>		1	1 unit	41E

#### Door-coupling rotary operating mechanisms for arduous conditions

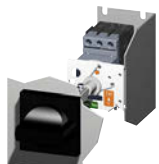

3RV2926-2B

The door-coupling rotary operating mechanisms consist of an actuator, a coupling driver, an extension shaft of 300 mm in length (8 mm x 8 mm), a spacer and two metal brackets into which the motor starter protector/circuit breaker is inserted.

The door-coupling rotary operating mechanisms are designed to degree of protection IP65. The door interlocking reliably prevents opening of the control cabinet door in the ON position of the motor starter protector/circuit breaker. The OFF position can be locked with up to three padlocks.

Laterally mountable auxiliary releases and two-pole auxiliary switches can be used.

The door-coupling rotary operating mechanisms thus meet the requirements for isolating functions according to IEC 60947-2.

<b>Door-coupling rotary operating mechanisms</b>	Gray	300	S00, S0	▶	<b>3RV2926-2B</b>		1	1 unit	41E
			S2	▶	<b>3RV2936-2B</b>		1	1 unit	41E
			S3	▶	<b>3RV2946-2B</b>		1	1 unit	41E
<b>EMERGENCY-STOP door-coupling rotary operating mechanisms</b>	Red/yellow	300	S00, S0	▶	<b>3RV2926-2C</b>		1	1 unit	41E
			S2	▶	<b>3RV2936-2C</b>		1	1 unit	41E
			S3	▶	<b>3RV2946-2C</b>		1	1 unit	41E

3RV2936-2C

Version	Rated control supply voltage $U_s$	For motor starter protectors/ circuit breakers Size	SD	Article No.	Price per PU	PU (UNIT, SET, M)	PS*	PG
---------	------------------------------------	---	----	-------------	--------------	-------------------	-----	----

#### Remote motorized operating mechanism



3RV1946-3AP0

<b>Remote motorized operating mechanisms</b>	50/60 Hz, 230 V AC	S3	X	<b>3RV1946-3AP0</b>		1	1 unit	41E
--	--------------------	----	---	---------------------	--	---	--------	-----

## Overview

### More information


System Manual "SIRIUS Modular System – System Overview", see <https://support.industry.siemens.com/cs/ww/en/view/60311318>

Manual "SIRIUS – SIRIUS 3RV Motor Starter Protectors/Circuit Breakers", see <https://support.industry.siemens.com/cs/ww/en/view/60279172>


### Accessories for "Self-Protected Combination Motor Controllers (Type E)" according to UL 508/UL 60947-4-1

The 3RV20 motor starter protectors with screw terminals are approved according to UL 508/UL 60947-4-1 as "Self-Protected Combination Motor Controllers (Type E)".


This requires increased through air and over surface spacing (1 inch and 2 inches respectively) at the input side of the device, which are achieved by mounting a terminal block or a phase barrier.

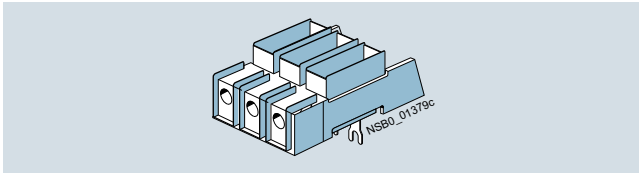

SIRIUS 3RV2928-1H terminal block

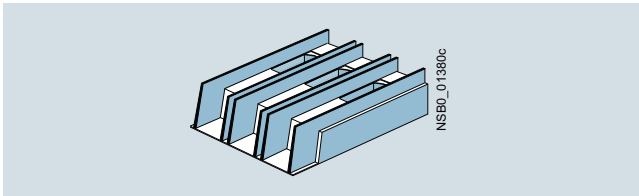

SIRIUS 3RT2946-4GA07 terminal block (type E)

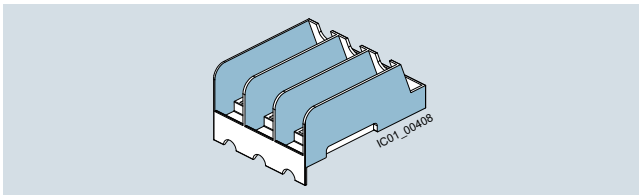

SIRIUS 3RV2928-1K phase barrier

Motor starter protectors/ circuit breakers	Size	Essential accessories for "Self-Protected Combination Motor Controllers (Type E)" acc. to UL 508/UL 60947-4-1
3RV201., 3RV202.	S00/S0	3RV2928-1H terminal block or 3RV2928-1K phase barrier
3RV2031-4B.1., 3RV2031-4D.1., 3RV2031-4E.1., 3RV2031-4P.1., 3RV2031-4S.1., 3RV2031-4T.1., 3RV2031-4U.1., 3RV2031-4V.1.	S2	--
3RV2031-4J.1., 3RV2031-4K.1., 3RV2031-4R.1., 3RV2031-4W.1., 3RV2031-4X.1., 3RV2032	S2	3RV2938-1K phase barrier
3RV204.	S3	3RT2946-4GA07 terminal block

-- No accessories needed

Special three-phase infeed terminals are required for constructing "Type E Starters" with an insulated three-phase busbar system (see "Busbar accessories", page 7/45).

The 3RV29 infeed system also enables the assembly of "Type E Starters", see page 7/59 onwards.

#### Note:

According to CSA, these terminal blocks and the phase barriers can be omitted when the device is used as a "Self-Protected Combination Motor Controller (Type E)".



# Motor Starter Protectors/Circuit Breakers

## SIRIUS 3RV2 Motor Starter Protectors/Circuit Breakers

### Accessories

#### Mounting accessories

##### Link modules

Feeders can be easily assembled from single devices with the help of the link modules. The following table shows the different combination options for devices with screw or spring-type terminals.

Combination devices	3RV2 motor starter protectors/circuit breakers	3RT2 contactors; 3RW30, 3RW40 soft starters; 3RF34 solid-state contactors	Link modules	Spring-type terminals
	Size	Size	Screw terminals	
<b>Link modules for connecting switching devices to 3RV2 motor starter protectors/circuit breakers<sup>1)</sup></b>				
3RT2 contactors with AC or DC coil	S00	S00	3RA1921-1DA00	3RA2911-2AA00
	S0	S00		--
	S2	S2	3RA2931-1AA00	--
	S3 <sup>2)</sup>	S3 <sup>2)</sup>	3RA1941-1AA00	--
3RT2 contactors with AC coil	S00	S0	3RA2921-1AA00	--
	S0	S0		3RA2921-2AA00 <sup>3)</sup>
3RT2 contactors with DC coil	S00	S0	3RA2921-1BA00	--
	S0	S0		3RA2921-2AA00
3RW30 soft starters	S00	S00	3RA2921-1BA00	3RA2911-2GA00
	S0	S00		--
3RW30/3RW40 soft starters	S00	S0	3RA2921-1BA00	--
	S0	S0		3RA2921-2GA00
	S2 <sup>4)</sup>	S2 <sup>4)</sup>	3RA2931-1AA00	--
	S3 <sup>5)</sup>	S3 <sup>5)</sup>	3RA1941-1AA00	--
3RF34 solid-state contactors	S00/S0	S00	3RA2921-1BA00	--
<b>Hybrid link modules for connecting contactors with spring-type terminals to 3RV2 motor starter protectors/circuit breakers with screw terminals<sup>6)</sup></b>				
3RT2 contactors with AC or DC coil	S00	S00	3RA2911-2FA00	--
	S0	S0	3RA2921-2FA00	--

-- Version not possible

- 1) The link modules cannot be used for 3RV2.21-4PA1., 3RV2.21-4FA1., 3RV2.31-4K.1., 3RV2.31-4R.1., 3RV2.32-4K.1., 3RV2.32-4R.1., 3RV27 and 3RV28 motor starter protectors/circuit breakers.
- 2) To assemble the feeder between a motor starter protector and a contactor in size S3, the 3RA2942-1AA00 standard mounting rail adapter must be used.
- 3) A spacer for height compensation on AC contactors, size S0, is optionally available, see page 7/53.
- 4) To assemble the feeder between a motor starter protector and a soft starter in size S2, the 3RA2932-1CA00 standard mounting rail adapter must be used.
- 5) It is only permissible to assemble the feeder between the motor starter protector and the soft starter in size S3 on a mounting plate.
- 6) The motor starter protector to contactor hybrid link modules cannot be used for the 3RV2.21-4PA1., 3RV2.21-4FA1., 3RV27 and 3RV28 motor starter protectors/circuit breakers. They are suitable only for constructing direct-on-line starters.

##### Note:

- Link modules can be used in
  - Size S00: up to max. 16 A
  - Size S0: up to max. 32 A
  - Size S2: up to max. 65 A
- Hybrid link modules can be used in
  - Size S00: up to max. 16 A
  - Size S0: up to max. 32 A

# Motor Starter Protectors/Circuit Breakers








## SIRIUS 3RV2 Motor Starter Protectors/Circuit Breakers

### Accessories

#### Mounting accessories

#### Selection and ordering data

##### Accessories

Version	For motor starter protectors/ circuit breakers	SD	Article No.	Price per PU	PU (UNIT, SET, M)	PS*	PG
	Size	d					
<b>Covers</b>							
	<b>Terminal covers</b> For cable lug and busbar connection for maintaining the required voltage clearances and as touch protection if box terminal is removed (2 units can be mounted per motor starter protector/circuit breaker)	S3	5	<b>3RT1946-4EA1</b>	1	1 unit	41B
3RV2 (size S3) with 3RT1946-4EA1 (left)							
	<b>Scale covers</b> Sealable, for covering the set current scale	3RV20, 3RV21, 3RV24: S00 ... S3	▶	<b>3RV2908-0P</b>	100	10 units	41E
3RV2908-0P							
	<b>Covers for devices with screw terminals (box terminals)</b> Additional touch protection to be fitted at the box terminals (2 units required per device) • Main current level	S2 S3	2 ▶	<b>Screw terminals</b> 			
3RT2936-4EA2					1	1 unit	41B
					1	1 unit	41B
<b>Fixing accessories</b>							
	<b>Push-in lugs</b> For screwing the motor starter protector/circuit breaker onto mounting plates Two units are required for each motor starter protector.	S00, S0	2	<b>3RV2928-0B</b>	100	10 units	41E
3RV2928-0B							
<b>Tools for opening spring-type terminals</b>							
	<b>Screwdrivers</b> For all SIRIUS devices with spring-type terminals Length approx. 200 mm, 3.0 mm x 0.5 mm, titanium gray/black, partially insulated	S00 ... S3	2	<b>Spring-type terminals</b> 			
3RA2908-1A					1	1 unit	41B

## Motor Starter Protectors/Circuit Breakers

### SIRIUS 3RV2 Motor Starter Protectors/Circuit Breakers

#### Accessories


#### Mounting accessories

Version	For motor starter protectors/ circuit breakers	SD	Article No.	Price per PU	PU (UNIT, SET, M)	PS*	PG
	Size	d					

#### Terminal blocks and phase barriers for "Self-Protected Combination Motor Controllers (Type E)" according to UL 508/UL 60947-4-1



3RV2928-1H



3RT2946-4GA07



3RV2928-1K



3RV2938-1K

#### Note:

UL 508/UL 60947-4-1 approval demands 1-inch through air spacing and 2-inch over surface spacing for "Self-Protected Combination Motor Controllers (Type E)". The following terminal blocks or phase barriers must be used for the 3RV20 motor starter protectors with screw terminals. 3RV20 motor starter protectors with spring-type terminals must be assembled with the 3RV29 infeed system for approval as "Self-Protected Combination Motor Controllers (Type E)" according to UL 508/UL 60947-4-1.

The terminal block or phase barriers cannot be used in combination with the 3RV19.5 three-phase busbars.

For construction with three-phase busbars, see "Busbar accessories", page 7/44 onwards.

#### Terminal blocks type E

For extended clearance and creepage distances (1 and 2 inch)

#### Phase barriers

For extended clearance and creepage distances (1 and 2 inch)

S00, S0	▶	<b>3RV2928-1H</b>	1	1 unit	41E
S3	3	<b>3RT2946-4GA07</b>	1	1 unit	41B
S00, S0	▶	<b>3RV2928-1K</b>	1	1 unit	41E
S2	▶	<b>3RV2938-1K</b>	1	1 unit	41E

#### Auxiliary terminals, 3-pole



3RT2946-4F

For connection of auxiliary and control cables to the main conductor connections (for one side)

S3	5	<b>3RT2946-4F</b>	1	1 unit	41B
----	---	-------------------	---	--------	-----

# Motor Starter Protectors/Circuit Breakers

## SIRIUS 3RV2 Motor Starter Protectors/Circuit Breakers






### Accessories

#### Mounting accessories

#### Link modules

Actuating voltage of contactor	Size	3RV2 motor starter protectors/circuit breakers	SD	Article No.	Price per PU	PU (UNIT, SET, M)	PS*	PG
--------------------------------	------	--	----	-------------	--------------	-------------------	-----	----

#### Link modules for motor starter protector to contactor<sup>1)</sup>

Image	Description	Size	3RV2 motor starter protectors/circuit breakers	SD	Article No.	Price per PU	PU (UNIT, SET, M)	PS*	PG		
										3RV2 motor starter protectors/circuit breakers	
<b>Link modules for motor starter protector to contactor with screw terminals</b>											
<b>Screw terminals</b> 											
 3RA2921-1AA00	<b>Single-unit packaging</b>										
	AC/DC	S00	S00/S0	▶	<b>3RA1921-1DA00</b>		1	1 unit	41B		
	AC	S0	S00/S0	▶	<b>3RA2921-1AA00</b>		1	1 unit	41B		
	DC	S0	S00/S0	▶	<b>3RA2921-1BA00</b>		1	1 unit	41B		
	AC/DC	S2	S2	▶	<b>3RA2931-1AA00</b>		1	1 unit	41B		
	AC/DC	S3	S3	▶	<b>3RA1941-1AA00</b>		1	1 unit	41B		
	<b>Multi-unit packaging</b>										
	AC/DC	S00	S00/S0	▶	<b>3RA1921-1D</b>		1	10 units	41B		
	AC	S0	S00/S0	▶	<b>3RA2921-1A</b>		1	10 units	41B		
	DC	S0	S00/S0	▶	<b>3RA2921-1B</b>		1	10 units	41B		
AC/DC	S2	S2	▶	<b>3RA2931-1A</b>		1	5 units	41B			
AC/DC	S3	S3	▶	<b>3RA1941-1A</b>		1	5 units	41B			
<b>Link modules for motor starter protector to contactor with spring-type terminals</b>											
<b>Spring-type terminals</b> 											
 3RA2911-2AA00	<b>Single-unit packaging</b>										
	AC/DC	S00	S00	▶	<b>3RA2911-2AA00</b>		1	1 unit	41B		
	AC <sup>2)</sup>	S0	S0	▶	<b>3RA2921-2AA00</b>		1	1 unit	41B		
	DC	S0	S0	▶	<b>3RA2921-2AA00</b>		1	1 unit	41B		
	<b>Multi-unit packaging</b>										
	AC/DC	S00	S00	▶	<b>3RA2911-2A</b>		1	10 units	41B		
	AC <sup>2)</sup>	S0	S0	▶	<b>3RA2921-2A</b>		1	10 units	41B		
	DC	S0	S0	▶	<b>3RA2921-2A</b>		1	10 units	41B		
	<b>Spacers<sup>2)</sup></b>										
	For compensating the height on AC contactors										
 3RA2911-1CA00	Single-unit packaging	S0	S0	▶	<b>3RA2911-1CA00</b>		1	1 unit	41B		
	Multi-unit packaging	S0	S0	▶	<b>3RA2911-1C</b>		1	5 units	41B		

<sup>1)</sup> The link modules for motor starter protector to contactor cannot be used for 3RV2.21-4PA1., 3RV2.21-4FA1., 3RV2.31-4K.1., 3RV2.31-4R.1., 3RV2.32-4K.1., 3RV2.32-4R.1., 3RV27 and 3RV28 motor starter protectors/circuit breakers.

<sup>2)</sup> A spacer for height compensation on AC contactors size S0 is optionally available.

#### Note:

Link modules can be used in

- Size S00: up to max. 16 A
- Size S0: up to max. 32 A
- Size S2: up to max. 65 A

# Motor Starter Protectors/Circuit Breakers





## SIRIUS 3RV2 Motor Starter Protectors/Circuit Breakers

### Accessories

#### Mounting accessories

Size	SD	Article No.	Price per PU	PU (UNIT, SET, M)	PS*	PG
3RW30, 3RW40 soft starters; 3RF34 solid-state contactors	3RV2 motor starter protectors/ circuit breakers					

#### Link modules for motor starter protector to soft starter<sup>1)</sup> and motor starter protector to solid-state contactor<sup>1)</sup>

Image	Description	SD	Article No.	Price per PU	PU (UNIT, SET, M)	PS*	PG
 <p>3RA2921-1BA00</p>	Connection between motor starter protector and soft starter / solid-state contactor with screw terminals <b>Single-unit packaging</b> S00 S00/S0 S0 S00/S0 S2 <sup>2)</sup> S2 S3 <sup>3)</sup> S3 <sup>3)</sup> <b>Multi-unit packaging</b> S00 S00/S0 S0 S00/S0 S2 <sup>2)</sup> S2 S3 <sup>3)</sup> S3 <sup>3)</sup>	2 2 ▶ ▶ 2 2 ▶ ▶	<b>Screw terminals</b> 				
			▶	<b>3RA2921-1BA00</b>	1	1 unit	41B
			▶	<b>3RA2921-1BA00</b>	1	1 unit	41B
			▶	<b>3RA2931-1AA00</b>	1	1 unit	41B
			▶	<b>3RA1941-1AA00</b>	1	1 unit	41B
			▶	<b>3RA2921-1B</b>	1	10 units	41B
			▶	<b>3RA2921-1B</b>	1	10 units	41B
			▶	<b>3RA2931-1A</b>	1	5 units	41B
			▶	<b>3RA1941-1A</b>	1	5 units	41B
			 <p>3RA2921-2GA00</p>	Connection between motor starter protector and soft starter spring-type terminals <b>Single-unit packaging</b> S00 S00 S0 S0	▶ ▶	<b>Spring-type terminals</b> 	
▶	<b>3RA2911-2GA00</b>	1				1 unit	41B
▶	<b>3RA2921-2GA00</b>	1				1 unit	41B

- 1) The link modules for motor starter protector to soft starter and motor starter protector to solid-state contactor cannot be used for 3RV2.21-4PA1., 3RV2.21-4FA1., 3RV2.31-4K.1., 3RV2.31-4R.1., 3RV2.32-4K.1., 3RV2.32-4R.1., 3RV27 and 3RV28 motor starter protectors/circuit breakers.
- 2) To assemble the feeder between a motor starter protector and a soft starter in size S2, the 3RA2932-1CA00 standard mounting rail adapter must be used.
- 3) It is only permissible to assemble the feeder between the motor starter protector and the soft starter in size S3 on a mounting plate.

#### Note:

Link modules can be used in

- Size S00: up to max. 16 A
- Size S0: up to max. 32 A
- Size S2: up to max. 65 A

# Motor Starter Protectors/Circuit Breakers


## SIRIUS 3RV2 Motor Starter Protectors/Circuit Breakers

### Accessories

#### Mounting accessories

Actuating voltage of contactor	Size	3RV2 motor starter protectors/circuit breakers	SD	Article No.	Price per PU	PU (UNIT, SET, M)	PS*	PG
	3RT2 contactors		d					

#### Hybrid link modules for motor starter protector to contactor<sup>1)</sup>

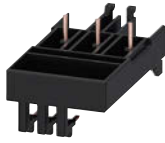

3RA2911-2FA00

Mechanical and electrical connection between motor starter protector with screw terminals and contactor with spring-type terminals

##### Single-unit packaging

AC/DC	S00	S00	▶	<b>3RA2911-2FA00</b>		1	1 unit	41B
AC <sup>2)</sup> /DC	S0	S0	▶	<b>3RA2921-2FA00</b>		1	1 unit	41B

##### Multi-unit packaging

AC/DC	S00	S00	▶	<b>3RA2911-2F</b>		1	10 units	41B
AC <sup>2)</sup> /DC	S0	S0	▶	<b>3RA2921-2F</b>		1	10 units	41B



3RA2921-2FA00

##### Spacers<sup>2)</sup>

For compensating the height on AC contactors

Single-unit packaging	S0	S0	2	<b>3RA2911-1CA00</b>		1	1 unit	41B
Multi-unit packaging	S0	S0	2	<b>3RA2911-1C</b>		1	5 units	41B



3RA2911-1CA00

<sup>1)</sup> The hybrid link modules for motor starter protector to contactor cannot be used for 3RV2.21-4PA1., 3RV2.21-4FA1., 3RV27 and 3RV28 motor starter protectors/circuit breakers. They are suitable only for constructing direct-on-line starters.

<sup>2)</sup> A spacer for height compensation on AC contactors size S0 is optionally available.

#### Note:

Hybrid link modules in size S00 can be used up to max. 16 A and in size S0 up to max. 32 A.

For motor starter protectors/circuit breakers	Version	SD	Article No.	Price per PU	PU (UNIT, SET, M)	PS*	PG
Type		d					

#### Motor feeder connectors for motor starter protectors/circuit breakers with screw terminals



3RT1926-4RD01

3RV2.2	<b>Adapters for motor starter protectors/circuit breakers</b> Ambient temperature $T_{u \max.} = 60 \text{ °C}$ Size S0, rated operational current $I_e$ at 400 V 3 AC: 25 A	5	<b>3RT1926-4RD01</b>		1	1 unit	41B
--------	--	---	----------------------	--	---	--------	-----



3RT1900-4RE01

3RV2.2	<b>Motor feeder connectors for motor starter protectors/circuit breakers</b> Size S0	5	<b>3RT1900-4RE01</b>		1	1 unit	41B
--------	---	---	----------------------	--	---	--------	-----

## Motor Starter Protectors/Circuit Breakers

### SIRIUS 3RV2 Motor Starter Protectors/Circuit Breakers

#### Accessories

#### Enclosures and front plates


##### Overview

##### Enclosures


For stand-alone installation of 3RV20 to 3RV24 motor starter protectors size S00 ( $I_{n\max} = 16\text{ A}$ ), S0 ( $I_{n\max} = 32\text{ A}$ ) and S2 ( $I_{n\max} = 65\text{ A}$ ), cast aluminum enclosures for surface mounting and molded-plastic enclosures for flush mounting are available in various dimensions.

When installed in a molded-plastic enclosure the motor starter protectors have a rated operational voltage  $U_e$  of 500 V.

The enclosures for surface mounting have the degree of protection IP55; the enclosures for flush mounting also comply with the degree of protection IP55 at the front (the flush-mounted section complies with IP20).

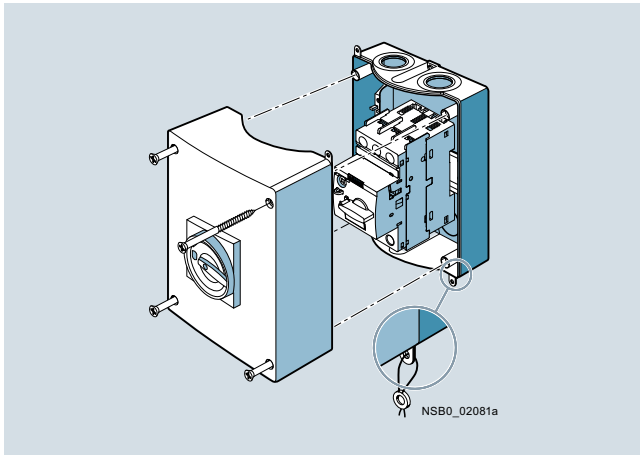

Enclosures for surface mounting

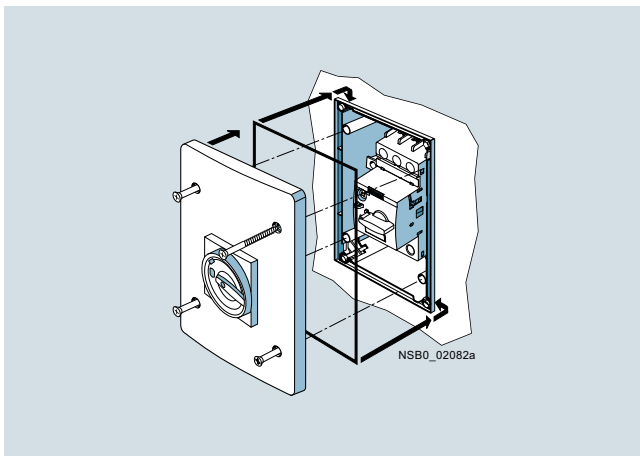

Enclosures (only for sizes S00 and S0)

All enclosures are equipped with N and PE terminals. There are two knock-out cable entries for cable glands at the top and two at the bottom; also on the rear corresponding cable entries are scored. There is a knockout on the top of the enclosure for indicator lights that are available as accessories.

The narrow enclosure can accommodate a motor starter protector without accessories, with transverse auxiliary switch and with lateral auxiliary switch. There is no provision for installing a motor starter protector with a signaling switch.

With size S00 to S2 circuit breakers the molded-plastic enclosures are equipped with a rotary operating mechanism.


The enclosures can be supplied with either a black rotary operating mechanism or with an EMERGENCY-STOP rotary operating mechanism with a red/yellow knob.

In the OFF setting, all rotary operating mechanisms can be locked with up to three padlocks.

##### Front plates

Motor starter protectors are frequently required to be actuated in any enclosure. Front plates equipped with a rotary operating mechanism for 3RV20 to 3RV24 motor starter protectors sizes S00 to S3 are available for this purpose.

A holder for the motor starter protectors size S00 and S0, into which the motor starter protectors can be snapped, is available for the front plates.

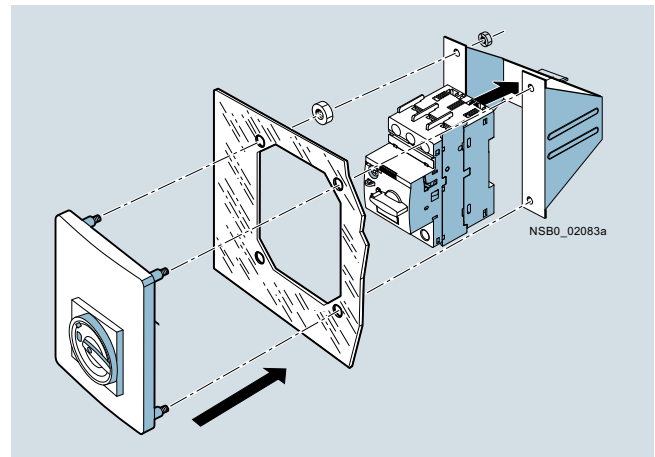

Front plate (including holder) for sizes S00 and S0

# Motor Starter Protectors/Circuit Breakers

## SIRIUS 3RV2 Motor Starter Protectors/Circuit Breakers

### Accessories

#### Enclosures and front plates

#### Selection and ordering data

Version	Degree of protection	Integrated terminals	Width	For 3RV20 to 3RV24 motor starter protectors	SD	Article No.	Price per PU	PU (UNIT, SET, M)	PS*	PG
			mm	Size	d					
<b>Molded-plastic enclosures for surface mounting<sup>1)</sup></b>										
 3RV1933-1DA00	<b>With rotary operating mechanism,</b> lockable in 0 position	IP55	N and PE/ground	54 (for motor starter protector + lateral auxiliary switch)	S00, S0 ▶	<b>3RV1923-1CA00</b>		1	1 unit	41E
				72 (for motor starter protector + lateral auxiliary switch <sup>2)</sup> + auxiliary release)	S00, S0 ▶	<b>3RV1923-1DA00</b>		1	1 unit	41E
				82 (for motor starter protector + lateral auxiliary switch <sup>2)</sup> + auxiliary release)	S2 2	<b>3RV1933-1DA00</b>		1	1 unit	41E
 3RV1923-1FA00, 3RV1933-1GA00	<b>With EMERGENCY-STOP rotary operating mechanism,</b> lockable in 0 position	IP55	N and PE/ground	54 (for motor starter protector + lateral auxiliary switch)	S00, S0 ▶	<b>3RV1923-1FA00</b>		1	1 unit	41E
				72 (for motor starter protector + lateral auxiliary switch <sup>2)</sup> + auxiliary release)	S00, S0 ▶	<b>3RV1923-1GA00</b>		1	1 unit	41E
				82 (for motor starter protector + lateral auxiliary switch <sup>2)</sup> + auxiliary release)	S2 2	<b>3RV1933-1GA00</b>		1	1 unit	41E
<b>Cast aluminum enclosures for surface mounting<sup>1)</sup></b>										
 3RV1923-1DA01	<b>With rotary operating mechanism,</b> lockable in 0 position	IP65	PE <sup>3)</sup>	72 (for motor starter protector + lateral auxiliary switch <sup>2)</sup> + auxiliary release)	S00, S0 ▶	<b>3RV1923-1DA01</b>		1	1 unit	41E
				<b>With EMERGENCY-STOP rotary operating mechanism,</b> lockable in 0 position	IP65	PE <sup>3)</sup>	72 (for motor starter protector + lateral auxiliary switch <sup>2)</sup> + auxiliary release)	S00, S0 ▶	<b>3RV1923-1GA01</b>	
<b>Molded-plastic enclosures for flush mounting<sup>4)</sup></b>										
 3RV1923-2DA00	<b>With rotary operating mechanism,</b> lockable in 0 position	IP55 (front side)	N and PE/ground	72 (for motor starter protector + lateral auxiliary switch <sup>2)</sup> + auxiliary release)	S00, S0 2	<b>3RV1923-2DA00</b>		1	1 unit	41E
				<b>With EMERGENCY-STOP rotary operating mechanism,</b> lockable in 0 position	IP55 (front side)	N and PE/ground	72 (for motor starter protector + lateral auxiliary switch <sup>2)</sup> + auxiliary release)	S00, S0 2	<b>3RV1923-2GA00</b>	

<sup>1)</sup> The rear cable glands cannot be used on 3RV2.11-...2. and 3RV2.21-...2. devices with spring-type terminals.

<sup>2)</sup> Only valid for lateral auxiliary switches with two auxiliary contacts.

<sup>3)</sup> If required, an additional N terminal can be mounted (e.g. 8WA1011-1BG11).

<sup>4)</sup> Not suitable for 3RV2.11-...2. and 3RV2.21-...2. devices with spring-type terminals.



## Motor Starter Protectors/Circuit Breakers

### SIRIUS 3RV2 Motor Starter Protectors/Circuit Breakers

#### Accessories

#### Enclosures and front plates

Version	Degree of protection	For 3RV20 to 3RV24 motor starter protectors	SD	Article No.	Price per PU	PU (UNIT, SET, M)	PS*	PG
		Size	d					

#### Front plates



3RV1923-4B +  
3RV1923-4G

<b>Molded-plastic front plates with rotary operating mechanism, lockable in 0 position</b> For actuation of 3RV2 motor starter protectors in any enclosure	IP55 (front side)	S00 to S3	▶	<b>3RV1923-4B</b>		1	1 unit	41E
<b>Molded-plastic front plates with EMERGENCY-STOP rotary operating mechanism, red/yellow, lockable in 0 position</b> EMERGENCY-STOP actuation of 3RV2 motor starter protectors in any enclosure	IP55 (front side)	S00 to S3	2	<b>3RV1923-4E</b>		1	1 unit	41E
<b>Holders for front plates</b> Holder is mounted on front plate, motor starter protector with and without accessories is snapped in.	--	S00, S0	▶	<b>3RV1923-4G</b>		1	1 unit	41E

Version	Rated control supply voltage $U_s$	For 3RV20 to 3RV24 motor starter protectors	SD	Article No.	Price per PU	PU (UNIT, SET, M)	PS*	PG
	V	Size	d					

#### Indicator lights



3RV1903-5B

<b>Indicator lights</b> For all enclosures and front plates	110 ... 120	S00 to S3	5	<b>3RV1903-5B</b>		1	1 unit	41E
	220 ... 240		5	<b>3RV1903-5C</b>		1	1 unit	41E
	380 ... 415		5	<b>3RV1903-5E</b>		1	1 unit	41E
	480 ... 500		5	<b>3RV1903-5G</b>		1	1 unit	41E

## Motor Starter Protectors/Circuit Breakers

### SIRIUS 3RV2 Motor Starter Protectors/Circuit Breakers

3RV29 infeed system

#### Overview

The 3RV29 infeed system is a convenient means of energy supply and distribution for a group of several motor starter protectors or complete load feeders with screw or spring-type terminals in sizes S00 and S0. Motor starter protectors or load feeders with a rated current of maximum 32 A each can be used. 3RV21, 3RV27 and 3RV28 motor starter protectors/circuit breakers cannot be deployed in this system.

The system is based on a basic module complete with a lateral incoming unit (three-phase busbar with infeed). This infeed with spring-type terminals is mounted on the right or left, depending on the version, and can be supplied with a maximum conductor cross-section of 25 mm<sup>2</sup> (with end sleeve). A basic module has two sockets onto each of which a motor starter protector can be snapped.


Expansion modules (three-phase busbars for system expansion) are available for extending the system. The individual modules are connected through an expansion plug.

The electrical connection between the three-phase busbars and the motor starter protectors is implemented through plug-in connectors. The complete system can be mounted on a TH 35

standard mounting rail to IEC 60715, and can be expanded as required up to a maximum current carrying capacity of 63 A.

The system is mounted extremely quickly and easily thanks to the simple plug-in technique. Thanks to the lateral infeed, the system also saves space in the control cabinet. The additional height required for the infeed unit is only 30 mm. The alternative infeed possibilities on each side offer a high degree of flexibility for configuring the control cabinet: Infeed on left-hand or right-hand side as well as infeed on one side and outfeed on the other side to supply further loads are all possible. A terminal block with spring-type connections in combination with a standard mounting rail enables the integration of not only SIRIUS motor starter protectors but also single-phase, 2-phase and 3-phase components such as 5SY miniature circuit breakers or SIRIUS relay components.

The 3RV29 infeed system is approved in accordance with IEC to 500 V. It is also UL-approved and authorized for "Self-Protected Combination Motor Controllers" (Type E starter) as well as for Type F starter (Type E starter + contactor).

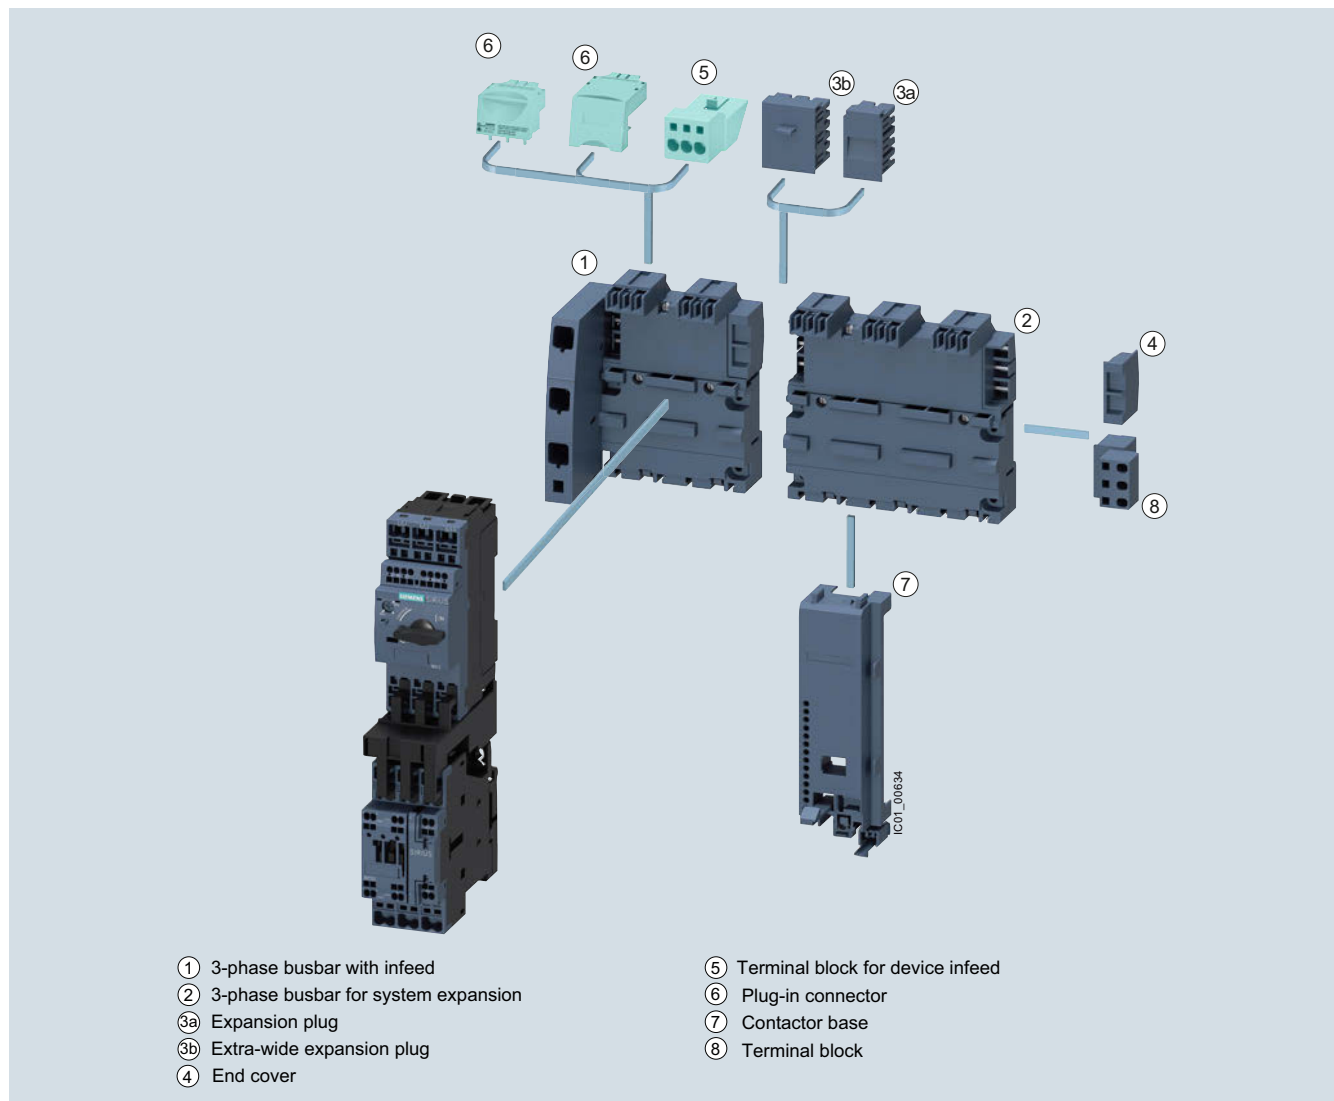

SIRIUS 3RV29 infeed systems

## Motor Starter Protectors/Circuit Breakers

### SIRIUS 3RV2 Motor Starter Protectors/Circuit Breakers

#### 3RV29 infeed system

##### ① **Three-phase busbars with infeed**

A three-phase busbar with infeed unit is required for connecting the incoming supply. These modules comprise one infeed module and two sockets which each accept one motor starter protector. A choice of two versions with infeed on the left or right is available. The infeed is connected to spring-type terminals. They permit an infeed with conductor cross-sections of up to 25 mm<sup>2</sup> with end sleeve. An end cover is supplied with each module.

##### ② **Three-phase busbars for system expansion**

The three-phase busbars for system expansion support expansion of the system. There is a choice of modules with two or three sockets. The system can be expanded as required up to a maximum current carrying capacity of 63 A. An expansion plug is supplied with each module.

##### ③<sup>a</sup> **Expansion plug**

The expansion plug is used for electrical connection of adjacent three-phase busbars. The current carrying capacity of this plug equals 63 A. One expansion plug is supplied with each three-phase busbar for system expansion. Additional expansion plugs are therefore only required as spare parts.

##### ③<sup>b</sup> **Extra-wide expansion plug**

The wide expansion plug makes the electrical connection between two three-phase busbars, thus performing the same function as the 3RV2917-5BA00 expansion plug; the electrical characteristics (e.g. a current carrying capacity of 63 A) are identical.

The 3RV2917-5E expansion plug is 10 mm wider than the 3RV2917-5BA00 expansion plug, hence in the plugged state there is a distance of 10 mm between the connected three-phase busbars. This distance can be used to lay the auxiliary current and control current wiring ("wiring duct"). The motor starter protector and contactor can be wired from underneath, which means that the complete cable duct above the system can be omitted.

##### ④ **End cover**

The end cover is used to cover the three-phase busbar at the open end of the system. This cover is therefore only required once for each system. An end cover is supplied with each three-phase busbar system with infeed. Further end covers are therefore only required as spare parts.

##### ⑤ **Terminal block for device infeed**

A new addition to the system is a connector for outfeeding to a device slot within a module. This offers the option not only of connecting three-phase loads to the system, but also of integrating single-phase loads into the infeed system.

##### ⑥ **Plug-in connector**

The plug-in connector is used for the electrical connection between the three-phase busbar and the 3RV2 motor starter protector. These plug-in connectors are available for screw or spring-type terminals.

##### ⑦ **Contactor base**

Load feeders can be assembled in the system using the S00 and S0 contactor base. The contactor bases are suitable for contactors sizes S00 and S0 with spring-type and screw terminals and are simply snapped onto the three-phase busbars. Direct-on-line starters and reversing starters are possible. One contactor base is required for direct-on-line starters and two are required for reversing starters.

To assemble load feeders for reversing starters, the contactor bases can be arranged alongside each other (90 mm overall width). In this case the mechanical interlocking of the contactors is possible. The S0 contactor bases are also suitable for soft starters size S00 and S0 with screw terminal.

The infeed system is designed for mounting onto a TH 35 standard mounting rail with 7.5 mm overall depth. This standard mounting rail gives the contactor base a stable mounting surface to sit on. If standard mounting rails with a depth of 15 mm are used, the spacer connected to the bottom of the contactor base must be knocked out and plugged into the standard mounting rail mating piece, which is also located on the underside. Then the contactor base also has a stable mounting surface. When standard mounting rails with a depth of 7.5 mm are used, the spacer has no function and can be removed.

The link modules are used for direct start load feeders, in which case the use of a contactor base is not absolutely necessary. Motor starter protector and contactor assemblies can then be directly snapped onto the sockets of the three-phase busbars. For feeders of sizes S00 and S0, the corresponding 3RA1921-1...., 3RA2911-2...., 3RA2921-1.... or 3RA2921-2.... link modules should generally be used.

##### ⑧ **Terminal block**

The 3RV2917-5D terminal block enables the integration of not only SIRIUS motor starter protectors but also single-phase, 2-phase and 3-phase components. The three phases can be fed out of the system using the terminal block; which means that single-phase loads can also be integrated in the system. The terminal block is plugged into the slot of the expansion plug and thus enables outfeeding from the middle or end of the infeed system. The terminal block can be rotated through 180° and be locked to the support modules of the infeed system. In addition, the 45 mm wide TH 35 3RV1917-7B standard mounting rail option for screwing onto the support plate facilitates plugging the single-phase, two-phase and three-phase components onto the infeed system.

# Motor Starter Protectors/Circuit Breakers

## SIRIUS 3RV2 Motor Starter Protectors/Circuit Breakers

3RV29 infeed system

### Technical specifications

#### More information

Manual "SIRIUS – SIRIUS 3RV Motor Starter Protectors/Circuit Breakers", see <https://support.industry.siemens.com/cs/ww/en/view/60279172>

#### General data

<b>Type</b>					<b>3RV29.7</b>
Size					S00, S0
<b>Standards</b>					
• IEC 60947-2					✓
• IEC 60947-4-1					✓
• UL 508/UL 60947-4-1					✓
<b>Rated current <math>I_n</math></b>	A				63
<b>Permissible rated current at inside temperature of control cabinet</b>					
Motor starter protectors	Size	Rated current	Inside temperature of control cabinet		
• 3RV2.11	S00	... 14 A	60 °C	%	100
		> 14 ... 16 A	40 °C	%	100
			60 °C	%	87
• 3RV2.21	S0	... 16 A	60 °C	%	100
		> 16 ... 25 A	40 °C	%	100
			60 °C	%	87
		> 25 ... 32 A	40 °C	%	87
<b>Permissible ambient temperature</b>					
• Storage/transport	°C				-50 ... +80
• Operation	°C				-20 ... +60
<b>Rated operational voltage <math>U_e</math></b>					
• Acc. to IEC	10 % overvoltage		V AC	500	
	5 % overvoltage		V AC	525	
• Acc. to UL/CSA			V AC	600	
<b>Rated frequency</b>	Hz				50/60
<b>Rated impulse withstand voltage <math>U_{imp}</math></b>	kV				6
<b>Short-circuit strength</b>	corresponds to the mounted motor starter protector or load feeder				
<b>Degree of protection</b> acc. to IEC 60529	IP20 (In the terminal compartment of the infeed without connected IP00 conductor)				
<b>Touch protection</b> acc. to IEC 60529	Finger-safe				
✓ Yes					

#### Conductor cross-sections

Type		Three-phase busbar with infeed 3RV2917-1A, 3RV2917-1E	Terminal block 3RV2917-5D	Terminal block for device infeed 3RV2917-5FA00
<b>Conductor cross-sections (min./max.)</b>				
• Solid or stranded	mm <sup>2</sup>	4 ... 25	1.5 ... 6	1 ... 10
• Finely stranded with end sleeve	mm <sup>2</sup>	4 ... 25	1.5 ... 4	1 ... 6
• Finely stranded without end sleeve	mm <sup>2</sup>	6 ... 25	1.5 ... 6	--
• AWG cables	AWG	10 ... 3	15 ... 10	18 ... 8
-- No				

## Motor Starter Protectors/Circuit Breakers


### SIRIUS 3RV2 Motor Starter Protectors/Circuit Breakers

#### 3RV29 infeed system

#### Selection and ordering data

Type	Version	For 3RV20, 3RV23, 3RV24 motor starter protectors	SD	Article No.	Price per PU	PU (UNIT, SET, M)	PS*	PG
		Size	d					

#### Three-phase busbars with infeed

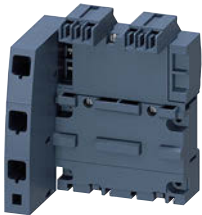

3RV2917-1A

**Three-phase busbars with infeed**  
Incl. 3RV2917-6A end cover

For 2 motor starter protectors with screw or spring-type terminals

- With infeed on the left
- With infeed on the right

S00, S0 2  
S00, S0 2

**3RV2917-1A**  
**3RV2917-1E**

1 1 unit 41E  
1 1 unit 41E

#### Three-phase busbars for system expansion



3RV2917-4A

**Three-phase busbars for system expansion**  
Incl. 3RV2917-5BA00 expansion plug

For motor starter protectors with screw or spring-type terminals

- For 2 motor starter protectors
- For 3 motor starter protectors

S00, S0 2  
S00, S0 2

**3RV2917-4A**  
**3RV2917-4B**

1 1 unit 41E  
1 1 unit 41E

#### Plug-in connectors



3RV2917-5AA00

**Plug-in connectors**  
To make contact with the motor starter protectors

- For spring-type terminals

- Single-unit packaging S00<sup>1)</sup> 2
- Multi-unit packaging S00<sup>1)</sup> 2
- Multi-unit packaging S0<sup>2)</sup> 2
- Multi-unit packaging S0<sup>2)</sup> 2

**Spring-type terminals**



**3RV2917-5AA00**  
**3RV2927-5AA00**  
**3RV2917-5A**  
**3RV2927-5A**

1 1 unit 41E  
1 1 unit 41E  
1 10 units 41E  
1 10 units 41E



3RV2917-5CA00

- For screw terminals

- Single-unit packaging S00<sup>1)</sup> 2
- Multi-unit packaging S0<sup>2)</sup> 2
- Multi-unit packaging S00<sup>1)</sup> 2
- Multi-unit packaging S0<sup>2)</sup> 2

**Screw terminals**



**3RV2917-5CA00**  
**3RV1927-5AA00**  
**3RV2917-5C**  
**3RV1927-5A**

1 1 unit 41E  
1 1 unit 41E  
1 10 units 41E  
1 10 units 41E

<sup>1)</sup> I > 14 A, please note derating.

<sup>2)</sup> I > 16 A, please note derating.

Type	Version	For contactors	SD	Article No.	Price per PU	PU (UNIT, SET, M)	PS*	PG
		Size	d					

#### Contactors bases



3RV2927-7AA00

**Contactors bases**  
For mounting direct-on-line or reversing starters

Single-unit packaging S00 2

S00, S0 2

**3RV2917-7AA00**  
**3RV2927-7AA00**

1 1 unit 41E  
1 1 unit 41E

## Motor Starter Protectors/Circuit Breakers

### SIRIUS 3RV2 Motor Starter Protectors/Circuit Breakers

3RV29 infeed system

Type	Version	SD	Article No.	Price per PU	PU (UNIT, SET, M)	PS*	PG
<b>Terminal blocks</b>							
	<b>Terminal blocks</b> For integration of single-phase, two-phase and three-phase components	Single-unit packaging	2	<b>3RV2917-5D</b>	1	1 unit	41E
3RV2917-5D							
<b>TH 35 standard mounting rails, width 45 mm</b>							
	<b>TH 35 standard mounting rails</b> Acc. to IEC 60715, width 45 mm For mounting onto three-phase busbars	Single-unit packaging	2	<b>3RV1917-7B</b>	1	1 unit	41E
3RV1917-7B							
<b>Extra-wide expansion plugs</b>							
	<b>Extra-wide expansion plugs</b> As accessory	Single-unit packaging	2	<b>3RV2917-5E</b>	1	1 unit	41E
3RV2917-5E							
<b>Expansion plugs</b>							
	<b>Expansion plugs<sup>1)</sup></b> As spare part	Single-unit packaging	2	<b>3RV2917-5BA00</b>	1	1 unit	41E
3RV2917-5BA00							
<b>End covers</b>							
	<b>End covers<sup>2)</sup></b> As spare part	Multi-unit packaging	2	<b>3RV2917-6A</b>	100	10 units	41E
3RV2917-6A							
<b>Terminal blocks for device infeed</b>							
	<b>Terminal blocks for device infeed</b>	Single-unit packaging	2	<b>3RV2917-5FA00</b>	1	1 unit	41E
3RV2917-5FA00							

<sup>1)</sup> The expansion plug is included in the scope of supply of the 3RV2917-4, three-phase busbars for system expansion.

<sup>2)</sup> The end cover is included in the scope of supply of the 3RV2917-1, three-phase busbars with infeed system.

## Motor Starter Protectors/Circuit Breakers

### SIRIUS 3RV1 Motor Starter Protectors/Circuit Breakers


#### For fuse monitoring

#### Technical specifications

See pages 7/10, 7/12, 7/15, 7/20, 7/21 and 7/24

#### Selection and ordering data

##### Without auxiliary switches

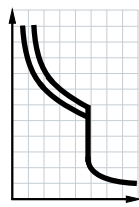

Rated current	Thermal overload releases	Instantaneous electronic release	Short-circuit breaking capacity at 400 V AC	SD	Screw terminals	PU (UNIT, SET, M)	PS*	PG
$I_n$		$I >$	$I_{cu}$	d	Article No.	Price per PU		
A	A	A	kA					
<b>Size S00</b>								
0.2	0.2	1.2	100	▶	<b>3RV1611-0BD10</b>	1	1 unit	41E



3RV1611-0BD10

##### Note:

The auxiliary switch required for signaling must be ordered separately.

#### Accessories

Version	Contacts	SD	Screw terminals	PU (UNIT, SET, M)	PS*	PG
		d	Article No.	Price per PU		

##### Mountable auxiliary switches (essential accessories)



3RV2901-1E

<b>Transverse auxiliary switches</b> With screw terminals, mountable on front	1 NO + 1 NC	▶	<b>3RV2901-1E</b>	1	1 unit	41E
--	-------------	---	-------------------	---	--------	-----



3RV2901-1A

<b>Lateral auxiliary switches</b> With screw terminals, mountable on the left	1 NO + 1 NC	▶	<b>3RV2901-1A</b>	1	1 unit	41E
--	-------------	---	-------------------	---	--------	-----

Additional auxiliary switches and other accessories, see "Accessories", page 7/41 onwards.

## Motor Starter Protectors/Circuit Breakers

### SIRIUS 3RV1 Motor Starter Protectors/Circuit Breakers





For distance protection

#### Technical specifications


See page 7/25

#### Selection and ordering data

##### Voltage transformer circuit breakers with transverse auxiliary switches (1 CO)

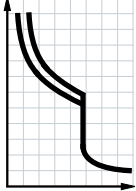
	Rated current	Thermal overload releases	Instantaneous electronic release	Auxiliary switch integrated in the motor starter protector, transverse	Short-circuit breaking capacity at 400 V AC	SD	Screw terminals 	PU (UNIT, SET, M)	PS*	PG
	$I_n$				$I_{cu}$	d				
	A	A	A		kA					

##### Size S00


	1.4	1.4	6	1 CO	50	5	<b>3RV1611-1AG14</b> <b>3RV1611-1CG14</b> <b>3RV1611-1DG14</b>	1	1 unit	41E
	2.5	2.5	10.5	1 CO	50	▶		1	1 unit	41E
	3	3	20	1 CO	50	▶		1	1 unit	41E

3RV1611-1.G14

#### Accessories

Version	Contacts	SD	Screw terminals 	PU (UNIT, SET, M)	PS*	PG
		d				

##### Mountable auxiliary switches for other signaling purposes

	<b>Lateral auxiliary switches</b> With screw terminals, mountable on the left	1 NO + 1 NC	▶	<b>3RV2901-1A</b>	1	1 unit	41E

3RV2901-1A

Additional auxiliary switches and other accessories, see "Accessories", page 7/41 onwards.



## Motor Starter Protectors/Circuit Breakers

### SIRIUS 3RV1 Molded Case Motor Starter Protectors up to 800 A

#### General data

#### Overview

##### More information

Homepage, see [www.siemens.com/sirius-circuit-breaker](http://www.siemens.com/sirius-circuit-breaker)



SIRIUS 3RV1063-7AL10 molded case motor starter protector

The 3RV10 and 3RV13 molded case motor starter protectors for up to 800 A are compact, current-limiting motor starter protectors which can be used above all in motor feeders for special voltages of 440 V, 480 V, 550 V and 690 V. They are used for switching and protecting three-phase motors and other loads with rated currents up to 800 A.

##### Note:

For motor feeders above 100 A and at 400 V and 500 V, the 3VL molded case circuit breakers must be used, see [Catalog LV 10](#).

##### Type of construction

The molded case motor starter protectors are available in 4 widths:

- 3RV1353 – width 90 mm, max. rated current 32 A, at 550 V AC suitable for three-phase motors up to 22 kW
- 3RV1.6. – width 105 mm, max. rated current 250 A, at 690 V AC suitable for three-phase motors up to 160 kW
- 3RV1.7. – width 140 mm, max. rated current 630 A, at 690 V AC suitable for three-phase motors up to 315 kW
- 3RV1.83 – width 210 mm, max. rated current 800 A, at 690 V AC suitable for three-phase motors up to 500 kW

The 3RV1 molded case motor starter protectors for up to 800 A can be mounted in horizontal, vertical or lying arrangement directly on a mounting plate or mounting rail. Their rated data are adversely affected as the result.

The phase barriers for better insulation between the phases are included in the scope of supply, and it is essential to use them.

The motor starter protectors can be supplied through top and bottom terminals without impairing their function, enabling them to be installed in any type of switchgear without any further steps.

##### Connection methods

The 3RV1 molded case motor starter protectors up to 800 A are suitable solely for screw connection.



Screw terminals

The terminals are indicated in the corresponding tables by the symbols shown on orange backgrounds.

#### Article No. scheme

Product versions		Article number									
<b>Molded case motor starter protectors</b>		<b>3RV1</b>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Type of motor starter protector/circuit breaker	e.g. 0 = for motor protection		<input type="checkbox"/>								
Rated current	e.g. 6 = 100 A		<input type="checkbox"/>								
Breaking capacity	e.g. 3 = standard switching capacity			<input type="checkbox"/>							
Setting range for overload release	e.g. 7A = 40 ... 100 A				<input type="checkbox"/>	<input type="checkbox"/>					
Trip class (CLASS)	e.g. L = CLASS 10A, 10, 20, 30						<input type="checkbox"/>				
Connection methods	e.g. 1 = screw terminals							<input type="checkbox"/>			
With or without auxiliary switch	e.g. 0 = without								<input type="checkbox"/>		
Special versions										<input type="checkbox"/>	<input type="checkbox"/>
Example		<b>3RV1</b>	<b>0</b>	<b>6</b>	<b>3</b>	<b>-</b>	<b>7</b>	<b>A</b>	<b>L</b>	<b>1</b>	<b>0</b>

##### Note:

The Article No. scheme shows an overview of product versions for better understanding of the logic behind the article numbers.

For your orders please use the article numbers quoted in the selection and ordering data.

## Motor Starter Protectors/Circuit Breakers

### SIRIUS 3RV1 Molded Case Motor Starter Protectors up to 800 A

General data

#### Benefits

- High short-circuit breaking capacity in the feeder
- Optimum usability in motor feeders for the special voltages 440 V, 480 V, 550 V and 690 V
- Compact design
- The releases are available both in purely magnetic (up to 32 A) and in electronic versions (100 A to 800 A).
- Available for motor or starter protection (short-circuit protection alone)

#### Application

##### Operating conditions

The 3RV1 molded case motor starter protectors for up to 800 A can be operated at ambient temperatures between -25 °C and +70 °C. They can be used according to IEC 60721-2-1 in the most difficult environmental conditions with a hot and damp climate.

Since operational currents, starting currents and current peaks are different even for motors with identical power ratings due to the inrush current, the motor ratings in the selection tables are only guide values. The specific rated and start up data of the motor to be protected is always paramount to the choice of the most suitable molded case motor starter protectors.

The 3RV1 molded case motor starter protectors up to 800 A have not been tested for use with frequency converters. The possibility of premature tripping in such applications cannot therefore be ruled out.

##### Possible uses

The 3RV1 molded case motor starter protectors for up to 800 A are suitable as switching and protection devices for motors. The following versions are available:

- For motor protection; the overload and short-circuit releases are designed for optimized protection and direct-on-line starting of three-phase AC squirrel-cage motors. The motor starter protectors have an electronic release which not only provides short-circuit and overload protection but is also sensitive to phase failure and phase unbalance and offers protection in the event of rotor blockage.
- For starter combinations; these molded case motor starter protectors are used for short-circuit protection in combinations of circuit breaker, motor contactor and overload relay. They are equipped with a purely magnetic release (up to 32 A) or a electronic release (100 A to 800 A).

##### Standards and specifications

The electronic releases for motor protection comply with IEC 60947-4-1. Isolating features are also compliant with IEC 60947-2.

The 3RV1 molded case motor starter protectors comply in addition with IEC 60068-2-6 (shock and vibration strength) and are certified for the specifications of the major marine classification societies:

- RINA
- Det Norske Veritas
- Bureau Veritas
- Lloyds Register of Shipping
- Germanischer Lloyd
- American Bureau of Shipping

##### Use of SIRIUS protection devices in conjunction with IE3/IE4 motors

###### Note:

For the use of 3RV1 motor starter protectors/circuit breakers in conjunction with highly energy-efficient IE3/IE4 motors, please observe the information on dimensioning and configuring, [see Application Manual](#).

For more information, [see page 1/7](#).

# Motor Starter Protectors/Circuit Breakers

## SIRIUS 3RV1 Molded Case Motor Starter Protectors up to 800 A

### General data


### Technical specifications

#### More information

Configuration Manual "Load feeders – Configuring the SIRIUS Modular System – Selection data for Fuseless and Fused Load Feeders", see <https://support.industry.siemens.com/cs/ww/en/view/39714188>

Reference Manual "Protection Equipment – Circuit Breakers - Molded Case Circuit Breakers", see <https://support.industry.siemens.com/cs/ww/en/view/35681461>

#### General data

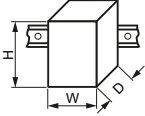Type		3RV1063	3RV1073	3RV1083	3RV1353	3RV1363	3RV1364	3RV1373	3RV1374	3RV1383
Dimensions										
• W	mm	105	140	210	90	105	105	140	140	210
• H	mm	205	205	268	130	205	205	205	205	268
• D	mm	139	139	159	102	139	139	139	139	159
<b>Standard</b>		IEC/EN 60947-2								
<b>Motor protection</b>		✓			--					
<b>Starter combinations</b>		--			✓					
<b>Rated current <math>I_n</math></b>	A	160	400	630	160	250		400, 630		630, 800
<b>Number of poles</b>		3								
<b>Rated operational voltage <math>U_e</math> 50 ... 60 Hz AC</b>	V	690								
<b>Rated impulse withstand voltage <math>U_{imp}</math></b>	V	8								
<b>Rated insulation voltage <math>U_i</math></b>	V	1 000			800		1 000			
<b>Test voltage at industrial frequency for 1 min</b>	V	3 500			3 000		3 500			
<b>Rated ultimate short-circuit breaking capacity <math>I_{cu}</math></b>										
• At 220/230 V AC, 50 ... 60 Hz	kA	200			120	200				
• At 380/415 V AC, 50 ... 60 Hz	kA	120		100	85	120	200	120	200	100
• At 440 V AC, 50 ... 60 Hz	kA	100		80	75	100	180	100	180	80
• At 500 V AC, 50 ... 60 Hz	kA	85		65	50	85	150	85	150	65
• At 550 V AC, 50 ... 60 Hz	kA	--			35	--				
• At 690 V AC, 50 ... 60 Hz	kA	70		30	10	70	80	70	80	30
<b>Rated service short-circuit breaking capacity <math>I_{cs}</math> (% of <math>I_{cu}</math>)</b>										
• At 220/230 V AC, 50 ... 60 Hz	%	100		75	100					75
• At 380/415 V AC, 50 ... 60 Hz	%	100		75		100				75
• At 440 V AC, 50 ... 60 Hz	%	100		75		100				75
• At 500 V AC, 50 ... 60 Hz	%	100		75		100			100 <sup>1)/75<sup>2)</sup></sup>	100
• At 690 V AC, 50 ... 60 Hz	%	100		75		100			100 <sup>1)/50<sup>2)</sup></sup>	100
<b>Rated short-circuit making capacity (415 V)</b>	kA	264		220	187	264	440	264	440	220
<b>Break time (415 V at <math>I_{cu}</math>)</b>	ms	5	6	7	3	5		6		7
<b>Category (IEC 60947-2)</b>		A	B (400 A), A (630 A)	B	A			B (400 A), A (630 A)		B
<b>Isolating features</b>		✓								
<b>Trip class CLASS</b>		10A, 10, 20, 30			--					
<b>Releases</b>										
• Magnetic type		--			✓		--			
• Electronic (motor protection)		✓			-- <sup>3)</sup>					
• Electronic (starter combinations)		--			✓					
<b>Permissible ambient temperature</b>										
• Operation	°C	-25 ... +70 <sup>4)</sup>								
• Storage	°C	-40 ... +70								
<b>Mechanical endurance</b>										
• Operating cycles		20 000			25 000		20 000			
• Operating cycles per hour		240	120		240			120		
<b>Electrical endurance</b>										
• Operating cycles		8 000	7 000	5 000	8 000			7 000		5 000
• Operating cycles per hour (415 V AC)		120	60		120			60		

✓ Has this function

-- Does not have this function

<sup>1)</sup> Value applies for 3RV1373-7GN10 molded case motor starter protectors.

<sup>2)</sup> Value applies for 3RV1373-7JN10 molded case motor starter protectors.

<sup>3)</sup> For overload protection of the motors, appropriate overload relays must be used.

<sup>4)</sup> From 50 °C, derating applies in some cases.


## Motor Starter Protectors/Circuit Breakers

### SIRIUS 3RV1 Molded Case Motor Starter Protectors up to 800 A

General data

**Main circuit terminals**

Type	3RV1353	3RV1.6.	3RV1.7.	3RV1083-7JL10, 3RV1383-7JN10	3RV1383-7KN10
------	---------	---------	---------	---------------------------------	---------------

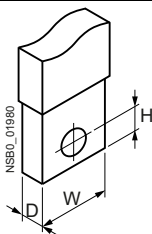**Terminal dimensions****Front-accessible standard terminals****Busbars/cable lug**

Number	Unit(s)	3RV1353	3RV1.6.	3RV1.7.	3RV1083-7JL10, 3RV1383-7JN10	3RV1383-7KN10
Number	Unit(s)	11			2	
Dimensions						
• W	mm	20	25	35	40	50
• D	mm	5	8	10	5	
• H	mm	7.5	9.5	11	12	
• Lock hasp diameter	mm	6.5	8.5	10.5	7	

**Front-extended terminals****Busbars**

Number	Unit(s)	3RV1353	3RV1.6.	3RV1.7.	3RV1083-7JL10, 3RV1383-7JN10	3RV1383-7KN10
Number	Unit(s)	1		2		
Dimensions						
• W	mm	20		30	40	50
• D	mm	4	10	7	5	5
• Lock hasp diameter	mm	8.5	10	11		14

**Cable lug**

Number	Unit(s)	3RV1353	3RV1.6.	3RV1.7.	3RV1083-7JL10, 3RV1383-7JN10	3RV1383-7KN10
Number	Unit(s)	1		2		
Dimensions						
• W	mm	20		30	40	50
• Lock hasp diameter	mm	8.5	10	11		14

**Front-extended cable terminals for copper cable****Busbars, flexible**

Number	Unit(s)	3RV1353	3RV1.6.	3RV1.7.	3RV1083-7JL10, 3RV1383-7JN10	3RV1383-7KN10
Number	Unit(s)	1			--	
Dimensions W x D x N						
• W	mm	13	15.5	24	--	
• D	mm	0.5	0.8	1	--	
• N (= number of laminations)	mm	10			--	

**Cable lug, flexible**

Number	Unit(s)	3RV1353	3RV1.6.	3RV1.7.	3RV1083-7JL10, 3RV1383-7JN10	3RV1383-7KN10
Number	Unit(s)	1 or 2			--	
Dimensions						
• For 1 unit	mm <sup>2</sup>	1 ... 70	2.5 ... 120	16 ... 240	--	
• For 2 units	mm <sup>2</sup>	1 ... 50	2.5 ... 95	16 ... 150	--	

**Cable lug, rigid**

Number	Unit(s)	3RV1353	3RV1.6.	3RV1.7.	3RV1083-7JL10, 3RV1383-7JN10	3RV1383-7KN10
Number	Unit(s)	1		1 or 2	--	
Dimensions						
• For 1 unit	mm <sup>2</sup>	1 ... 95	2.5 ... 185	16 ... 300	--	
• For 2 units (for outside mounting)	mm <sup>2</sup>	--		120 ... 240	--	

**Rear terminals****Busbars**

Number	Unit(s)	3RV1353	3RV1.6.	3RV1.7.	3RV1083-7JL10, 3RV1383-7JN10	3RV1383-7KN10
Number	Unit(s)	1		2		
Dimensions						
• W	mm	20		30	40	50
• D	mm	4	10	7	5	
• Lock hasp diameter	mm	8.5		11	14	

## Motor Starter Protectors/Circuit Breakers

### SIRIUS 3RV1 Molded Case Motor Starter Protectors up to 800 A

#### General data

##### Auxiliary switches

**Type** 3RV1991-1.A0

##### Rated operational current $I_e$

• At 250 V AC/DC			
- At AC-14 (utilization category according to IEC 60947-5-1)			
Control supply voltage 125 V	A	6	
Control supply voltage 250 V	A	5	
- At DC-13 (utilization category according to IEC 60947-5-1)			
Control supply voltage 125 V	A	0.3	
Control supply voltage 250 V	A	0.15	
• At 24 V DC			
- Supply voltage 24 V	mA	≥ 0.75	
- Supply voltage 5 V	mA	≥ 1	

##### Auxiliary releases

Molded case motor starter protectors	Power consumption during pick-up			
	3RV1353		3RV1.6., 3RV1.7., 3RV1.83	
Version	AC	DC	AC	DC
<b>Undervoltage releases</b>	<b>3RV1952-1A.0</b>		<b>3RV1982-1A.0</b>	
• 24 ... 30 V AC/DC	1.5 VA	1.5 W	6 VA	3 W
• 110 ... 127 V AC/110 ... 125 V DC	2 VA	2 W	6 VA	3 W
• 220 ... 240 V AC/220 ... 250 V DC	2.5 VA	2.5 W	6 VA	3 W
Opening times	ms	15	≤ 25	≤ 15
<b>Shunt releases</b>	<b>3RV1952-1E.0</b>		<b>3RV1982-1E.0</b>	
• 24 ... 30 V AC/DC	50 VA	50 W	150 VA	150 W
• 110 ... 127 V AC/110 ... 125 V DC	50 VA	50 W	150 VA	150 W
• 220 ... 240 V AC/220 ... 250 V DC	50 VA	50 W	150 VA	150 W
Opening times	ms	15	15	15

## Motor Starter Protectors/Circuit Breakers





### SIRIUS 3RV1 Molded Case Motor Starter Protectors up to 800 A

IE3/IE4 ready

For motor protection

#### Selection and ordering data

##### CLASS 10A, 10, 20, 30; without auxiliary switch

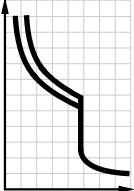	Rated current	Current setting of the inverse-time delayed overload releases " $I_R$ " $I_R$	Operating current of the instantaneous short-circuit releases " $I_I$ " $I_I$	Short-circuit breaking capacity at 400 V AC	SD	Screw terminals 	PU (UNIT, SET, M)	PS*	PG
	$I_n$			$I_{cu}$		Article No.	Price per PU		
	A	A	A	kA	d				

##### With electronic releases



3RV10.3-7.L10

TU = trip unit (release)

##### Standard switching capacity, adjustable short-circuit and overload release, TU 4

100	40 ... 100	600 ... 1 300	120	20	<b>3RV1063-7AL10</b>	1	1 unit	41E
160	64 ... 160	960 ... 2 080	120	20	<b>3RV1063-7CL10</b>	1	1 unit	41E
200	80 ... 200	1 200 ... 2 600	120	20	<b>3RV1063-7DL10</b>	1	1 unit	41E
400	160 ... 400	2 400 ... 5 200	120	20	<b>3RV1073-7GL10</b>	1	1 unit	41E
630	252 ... 630	3 780 ... 8 190	100	20	<b>3RV1083-7JL10</b>	1	1 unit	41E

Further accessories can be ordered separately  
(see "Accessories" page 7/73 onwards).


## Motor Starter Protectors/Circuit Breakers

### SIRIUS 3RV1 Molded Case Motor Starter Protectors up to 800 A

For starter combinations **IE3/IE4 ready**

#### Selection and ordering data

##### Without auxiliary switches

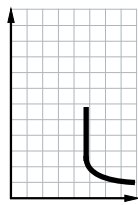

Rated current	Inverse-time delayed overload release "L"	Operating current of the instantaneous short-circuit releases "I"	Short-circuit breaking capacity at 400 V AC	SD	Screw terminals	PU (UNIT, SET, M)	PS*	PG
$I_n$	$I_R$	$I_f$	$I_{cu}$	d	Article No.	Price per PU		
A	A	A	kA					

##### With magnetic releases



3RV1353-6.P10

##### Standard switching capacity, non-adjustable short-circuit release, TU 1

1	Without	13	85	20	<b>3RV1353-6AP10</b>	1	1 unit	41E
1.6	Without	21	85	20	<b>3RV1353-6BP10</b>	1	1 unit	41E
2	Without	26	85	20	<b>3RV1353-6CP10</b>	1	1 unit	41E
3.2	Without	42	85	20	<b>3RV1353-6DP10</b>	1	1 unit	41E
4	Without	52	85	20	<b>3RV1353-6EP10</b>	1	1 unit	41E
5	Without	65	85	20	<b>3RV1353-6FP10</b>	1	1 unit	41E
6.5	Without	85	85	20	<b>3RV1353-6GP10</b>	1	1 unit	41E
8.5	Without	111	85	20	<b>3RV1353-6HP10</b>	1	1 unit	41E
12.5	Without	163	85	20	<b>3RV1353-6JP10</b>	1	1 unit	41E

##### Standard switching capacity, adjustable short-circuit release, TU 2

20	Without	120 ... 240	85	20	<b>3RV1353-6LM10</b>	1	1 unit	41E
32	Without	192 ... 384	85	20	<b>3RV1353-6MM10</b>	1	1 unit	41E

##### With electronic releases



3RV13...-7.N10

##### Standard switching capacity, adjustable short-circuit release, TU 3

100	Without	100 ... 1 000	120	20	<b>3RV1363-7AN10</b>	1	1 unit	41E
160	Without	160 ... 1 600	120	20	<b>3RV1363-7CN10</b>	1	1 unit	41E
250	Without	250 ... 2 500	120	20	<b>3RV1363-7EN10</b>	1	1 unit	41E
400	Without	400 ... 4 000	120	20	<b>3RV1373-7GN10</b>	1	1 unit	41E
630	Without	630 ... 6 300	120	20	<b>3RV1373-7JN10</b>	1	1 unit	41E
630	Without	630 ... 6 300	100	20	<b>3RV1383-7JN10</b>	1	1 unit	41E
800	Without	800 ... 8 000	100	20	<b>3RV1383-7KN10</b>	1	1 unit	41E

##### Increased switching capacity, adjustable short-circuit release, TU 3

100	Without	100 ... 1 000	200	20	<b>3RV1364-7AN10</b>	1	1 unit	41E
160	Without	160 ... 1 600	200	20	<b>3RV1364-7CN10</b>	1	1 unit	41E
250	Without	250 ... 2 500	200	20	<b>3RV1364-7EN10</b>	1	1 unit	41E
400	Without	400 ... 4 000	200	20	<b>3RV1374-7GN10</b>	1	1 unit	41E

TU = trip unit (release)

Further accessories can be ordered separately (see "Accessories" page 7/73 onwards).


# Motor Starter Protectors/Circuit Breakers

## SIRIUS 3RV1 Molded Case Motor Starter Protectors up to 800 A

### Accessories

Mountable accessories

## Selection and ordering data


Type	Version	For molded case motor starter protectors	SD	Screw terminals 	PU (UNIT, SET, M)	PS*	PG
				Article No.	Price per PU		

## Auxiliary switches



3RV1991-1AA0

<b>Auxiliary switches</b> for front mounting	1 signaling switch Off-On + 1 tripped signal (250 V AC/DC)	3RV1353, 3RV1.6, ...	20	<b>3RV1991-1AA0</b>	1	1 unit	41E	
	3 signaling switch Off-On + 1 tripped signal (250 V AC/DC)	3RV1.83	20		<b>3RV1991-1BA0</b>	1	1 unit	41E
	3 signaling switches Off-On + 1 tripped signal (24 V DC)		20		<b>3RV1991-1CA0</b>	1	1 unit	41E
<b>Connection cables for auxiliary switches</b>	Length 2 m, 6-pole	3RV1353, 3RV1.6, ... 3RV1.83	20	<b>3RV1991-1FA0</b>	1	1 unit	41E	

Type	Rated control supply voltage $U_s$		For molded case motor starter protectors	SD	Screw terminals 	PU (UNIT, SET, M)	PS*	PG
		AC 50/60 Hz	DC			Article No. Price per PU		
		V	V			d		

## Auxiliary releases



3RV1952-1AA0

<b>Undervoltage releases</b> For front mounting	24 ... 30	24 ... 30	3RV1353	20	<b>3RV1952-1AA0</b>	1	1 unit	41E	
	110 ... 127	110 ... 125		20		<b>3RV1952-1AD0</b>	1	1 unit	41E
	220 ... 240	220 ... 250		20		<b>3RV1952-1AE0</b>	1	1 unit	41E
	24 ... 30	24 ... 30	3RV1.6, ...	20	<b>3RV1982-1AA0</b>	1	1 unit	41E	
	110 ... 127	110 ... 125		20	<b>3RV1982-1AD0</b>	1	1 unit	41E	
	220 ... 240	220 ... 250	3RV1.83	20	<b>3RV1982-1AF0</b>	1	1 unit	41E	
<b>Shunt releases</b> For front mounting	24 ... 30	24 ... 30	3RV1353	20	<b>3RV1952-1EA0</b>	1	1 unit	41E	
	110 ... 127	110 ... 125		20		<b>3RV1952-1ED0</b>	1	1 unit	41E
	220 ... 240	220 ... 250		20		<b>3RV1952-1EF0</b>	1	1 unit	41E
	24 ... 30	24 ... 30	3RV1.6, ...	20	<b>3RV1982-1EA0</b>	1	1 unit	41E	
	110 ... 127	110 ... 125		20	<b>3RV1982-1ED0</b>	1	1 unit	41E	
	220 ... 240	220 ... 250	3RV1.83	20	<b>3RV1982-1EF0</b>	1	1 unit	41E	
<b>Connection cables for undervoltage and shunt releases</b>	Length 2 m, 6-pole		3RV1353, 3RV1.6, ... 3RV1.83	20	<b>3RV1992-1FA0</b>	1	1 unit	41E	

3RV1952-1EA0




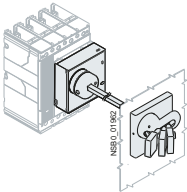
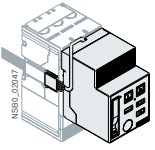



## Motor Starter Protectors/Circuit Breakers

### SIRIUS 3RV1 Molded Case Motor Starter Protectors up to 800 A

#### Accessories

#### Rotary operating mechanisms, mounting accessories

#### Selection and ordering data

Version	For molded case motor starter protectors	SD	Screw terminals 	PU (UNIT, SET, M)	PS*	PG		
			Article No.	Price per PU				
<b>Rotary operating mechanisms</b>								
	<b>Lever-type rotary operating mechanisms</b>	With adjustable distance, with lock/door interlocking (padlocks are not included in scope of supply)	3RV1.353	20	<b>3RV1956-0BA0</b>	1	1 unit	41E
			3RV1.6., 3RV1.7.	20	<b>3RV1976-0BA0</b>	1	1 unit	41E
			3RV1.83	20	<b>3RV1986-0BA0</b>	1	1 unit	41E
3RV19.6-0BA0								
	<b>Motorized operating mechanisms</b>	With stored energy mechanism, 220 ... 250 V AC/DC	3RV1.6., 3RV1.7.	20	<b>3RV1976-3AP3</b>	1	1 unit	41E
			3RV1.83	20	<b>3RV1986-3AP3</b>	1	1 unit	41E
3RV19.6-3AP3								
<b>Connections</b>								
	<b>Connections</b>	Front-extended (1 set = 6 units)	3RV1.353	20	<b>3RV1955-1AA0</b>	1	1 unit	41E
			3RV1.6.	20	<b>3RV1965-1BA0</b>	1	1 unit	41E
			3RV1.7.	20	<b>3RV1975-1CA0</b>	1	1 unit	41E
			3RV1.83-7J.10	20	<b>3RV1985-1DA0</b>	1	1 unit	41E
			3RV1.83-7KN10	20	<b>3RV1985-1EA0</b>	1	1 unit	41E
3RV1975-1CA0								
		Rear (1 set = 3 units)	3RV1.353	20	<b>3RV1955-3AA0</b>	1	1 unit	41E
			3RV1.6.	20	<b>3RV1965-3AA0</b>	1	1 unit	41E
			3RV1.7.	20	<b>3RV1975-3AA0</b>	1	1 unit	41E
			3RV1.83	20	<b>3RV1985-3AA0</b>	1	1 unit	41E
3RV1955-3AA0								
	<b>Cable terminals</b>	Front-extended (1 set = 6 units)	3RV1.353	20	<b>3RV1955-2AA0</b>	1	1 unit	41E
			3RV1.6.	20	<b>3RV1965-2BA0</b>	1	1 unit	41E
			3RV1.7.-7G.10	20	<b>3RV1975-2CA0</b>	1	1 unit	41E
			3RV1.73-7JN10	20	<b>3RV1975-2DA0</b>	1	1 unit	41E
3RV1975-2AA0								